



## Assembly and Operating Instructions



max. 150 kg



~ 90 Min.



130 kg

L 161 | W 85 | H 164

CSTEX80PLUST.02.03

Art. No. CST-EX80-2-PLUS-T

Crosstrainer **EX80 TOUCH**



## Dear customer,

thank you for choosing fitness equipment from cardiostrong®. cardiostrong offers high-quality home fitness equipment that is optimally adapted to the conditions at home. Train at home no matter what the weather or time of the day. cardiostrong fitness equipment offers training programmes and a variety of equipment for all training levels and all training goals. Further information can be found at [www.sport-tiedje.com](http://www.sport-tiedje.com) or [www.cardiostrong.de](http://www.cardiostrong.de). We hope you enjoy your training!

### Intended Use

The equipment may only be used for its intended purpose.

The equipment is suitable for home use and semi-professional use (e.g. hospitals, clubs, hotels, schools, etc.). The equipment is not suitable for commercial or professional use (e.g. fitness studio).

### ▶ ATTENTION

The console of this fitness device uses software that is perfectly adapted to the equipment. Please do not make any unauthorised modifications, such as the installation of external apps. This can affect the functionality of the console or even make it unusable. Only install the necessary updates in the Software Updater.

## Legal Notice

Sport-Tiedje GmbH  
Europe's No. 1 for home fitness

International Headquarters  
Flensburger Straße 55  
24837 Schleswig  
Germany

Management:  
Christian Grau  
Sebastian Campmann  
Dr. Bernhard Schenkel  
No. HRB 1000 SL  
Local Court Flensburg  
European VAT Number: DE813211547

## Disclaimer



©2010 cardiostrong® is a registered brand of the company SportTiedje GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Sport-Tiedje is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.

## ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.



This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

► **ATTENTION**

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

⚠ **CAUTION**

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

⚠ **WARNING**

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

⚠ **DANGER**

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

ⓘ **NOTICE**

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.

# Content

<b>1</b>	<b>GENERAL INFORMATION</b>	<b>7</b>
1.1	Technical Data	7
1.2	Personal Safety	8
1.3	Electrical Safety	9
1.4	Set-Up Place	10
<b>2</b>	<b>ASSEMBLY</b>	<b>11</b>
2.1	General Instructions	11
2.2	Scope of Delivery	12
2.3	Assembly	13
<b>3</b>	<b>OPERATING INSTRUCTIONS</b>	<b>23</b>
3.1	Console Display	23
3.2	Button Functions	24
3.3	Switching On and Initial Settings	24
3.4	Programmes	26
3.4.1	Quick-Start Programme	26
3.4.2	Manual Programme	27
3.4.3	Pre-Set Programmes	27
3.4.4	Watt Programme	28
3.4.5	Heart Rate Controlled Programs	29
3.5	Recovery Function	29
3.6	Multimedia	30
3.6.1	Retrieving Apps from the Main Menu	30
3.6.2	Access to Apps During Your Workout	30
<b>4</b>	<b>STORAGE AND TRANSPORT</b>	<b>31</b>
4.1	General Instructions	31
4.2	Transportation Wheels	31
<b>5</b>	<b>TROUBLESHOOTING, CARE AND MAINTENANCE</b>	<b>32</b>
5.1	General Instructions	32
5.2	Faults and Fault Diagnosis	32
5.3	Maintenance and Inspection Calendar	33
<b>6</b>	<b>DISPOSAL</b>	<b>33</b>
<b>7</b>	<b>RECOMMENDED ACCESSORIES</b>	<b>34</b>

<b>8</b>	<b>ORDERING SPARE PARTS</b>	<b>35</b>
8.1	Serial Number and Model Name	35
8.2	Parts List	36
8.3	Exploded Drawing	39
<b>9</b>	<b>WARRANTY</b>	<b>41</b>
<b>10</b>	<b>CONTACT</b>	<b>43</b>

## 1.1 Technical Data

### TFT display of

- + speed in km/h
- + training time in min
- + training distance in km
- + cadence (rotations per minute)
- + calories burnt in kcal
- + heart rate (when using the hand sensors or a chest strap)
- + Watt
- + resistance level

Resistance system: electronic magnetic brake system  
Resistance level: 16  
Watt: 10–350 Watt (adjustable in 5-Watt increments)

User memory: 4  
Total number of training programs: 18  
Quick Start program: 1  
Manual programs: 1  
Pre-set programs: 12  
Watt-controlled programs: 1  
Heart rate controlled programs: 4

Balance mass: 12 kg  
Step width: 11 cm

Electronic step length adjustment:  
45 cm (18"), 50 cm (20"), 55 cm (22"), 60 cm (24"), 65 cm (26")

### Weight and dimensions:

Article weight (gross, including packaging) approx.: 127.4 kg  
Article weight (net, without packaging) approx.: 113.4 kg  
Packaging dimensions (L x W x H) aprox.: 143 cm x 115 cm x 50 cm  
Set-up dimensions (L x W x H) approx.: 161 cm x 85 cm x 164 cm

Maximum user weight: 150 kg/330 lbs

## 1.2 Personal Safety

### **DANGER**

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.

### **WARNING**

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- +
- + The equipment is strictly for use by one person at a time.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other non-slip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.

### **CAUTION**

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.

### **ATTENTION**

- + Do not insert any objects of any kind into the openings of the device.



## 1.3 Electrical Safety

### **DANGER**

- + In order to reduce the risk of an electric shock, always unplug the equipment from the mains socket immediately after your workout, before assembly or dismantling, and before maintenance or cleaning. Do not pull on the cable.

### **WARNING**

- + Do not leave the equipment unattended while the mains cable is plugged into the mains socket. During your absence, the mains cable must be removed from the mains socket to prevent improper use by third parties or children.
- + If the mains cable or plug is damaged or defective, contact your contract partner. Until repair, the equipment must not be used.

### **ATTENTION**

- + The equipment requires a mains connection of 220-230 V with 50 Hz mains voltage.
- + The equipment may only be connected directly to an earthed socket using the supplied mains cable. Extension cables must conform to VDE guidelines. Always completely unwind the mains cable.
- + The socket must be protected by a fuse with a minimum fuse rating of "16 A, slow blow".
- + Do not make any changes to the mains cable or the mains plug.
- + Keep the mains cable away from water, heat, oil and sharp edges. Do not route the mains cable underneath the equipment or under a carpet or rug, and do not place any objects on top of it.

## 1.4 Set-Up Place



### **WARNING**

- + Do not place the equipment in main corridors or escape routes.



### **CAUTION**

- + Choose a location in which to place the equipment such that there is enough free space/clearance to the front, the rear and to the sides of the equipment.
- + The training room should be well ventilated during training and not be exposed to any draughts.
- + Choose the place in which to set up the equipment such that there is enough free space/clearance to the front, the rear and to the sides of the equipment.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.



### **ATTENTION**

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.

### 2.1 General Instructions



#### **DANGER**

- + Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.



#### **WARNING**

- + Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.



#### **CAUTION**

- + Do not open the packaging when it is lying on its side.
- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.



#### **ATTENTION**

- + To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.



#### **NOTICE**


- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- + Ideally, assemble the equipment at its later set-up place.

## 2.2 Scope of Delivery

The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.

**⚠ CAUTION**

If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

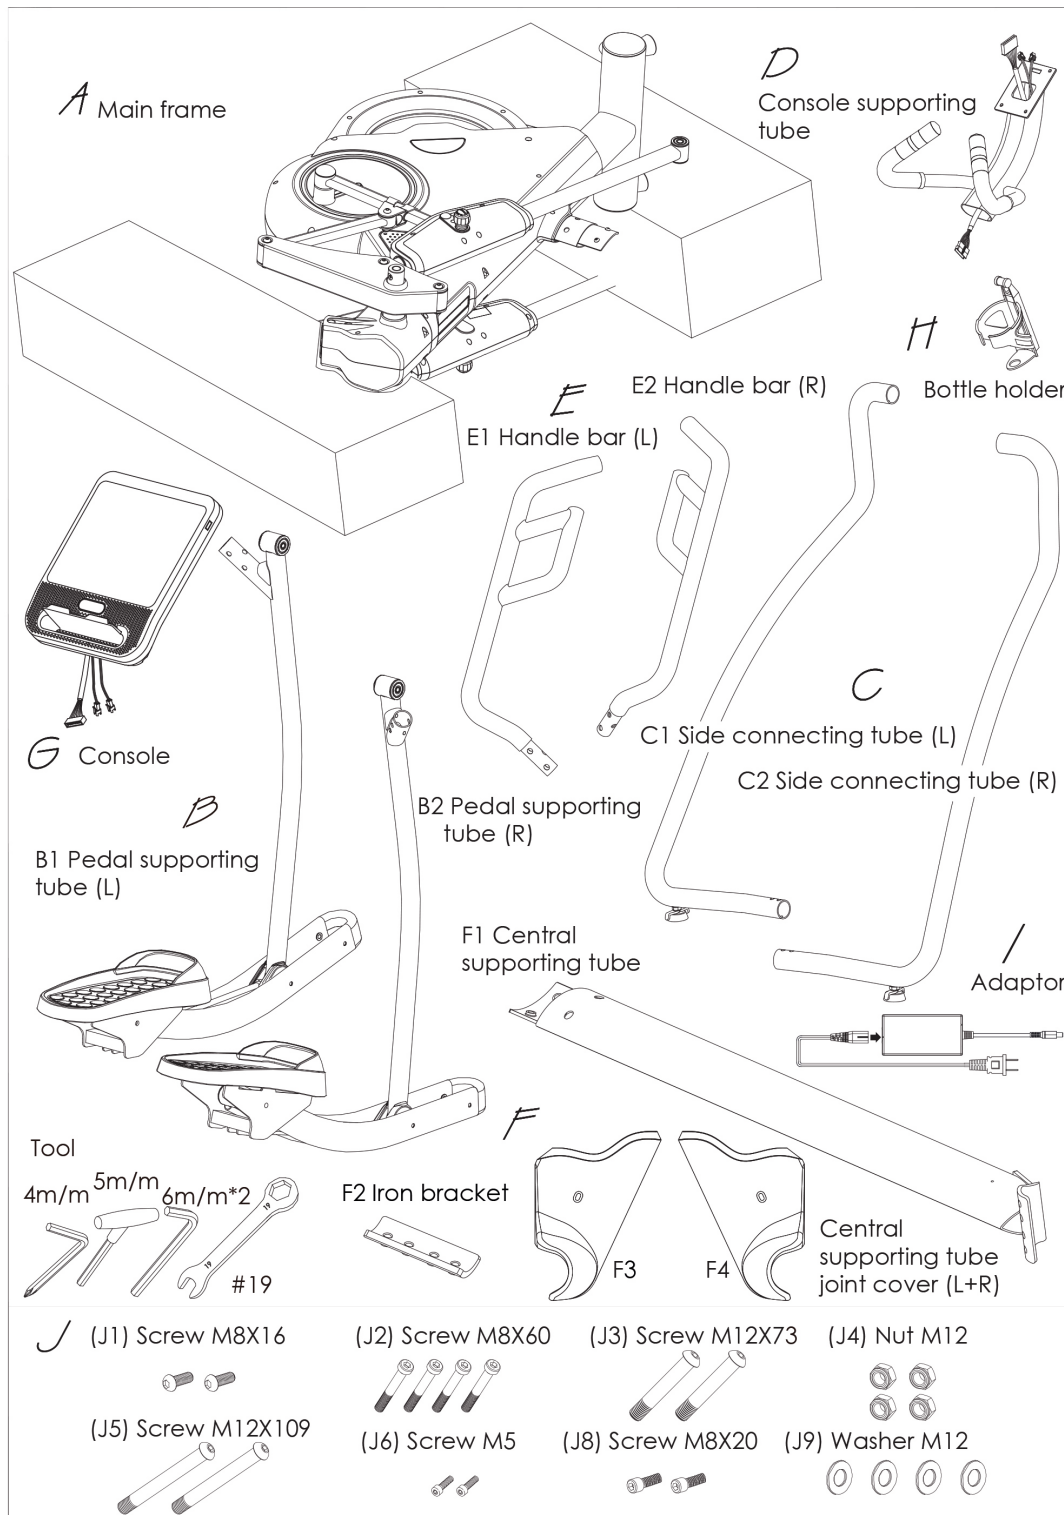

## 2.3 Assembly

Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

**① NOTICE**

First loosely screw all parts together and check that they fit properly. Tighten the screws using the tool only when you are instructed to do so.


### Step 1: Unpacking

1. Place the box flat on the floor and remove the lid of the box.

**① NOTICE**


If no box is existing, continue with step 2.

2. Remove the upper polysterene (1) and (2)
3. Unpack handle bars (E), supporting tubes (B) and connection tubes (C).
4. Leave the main frame (A) and the lower polysterene in the box until you are asked to unpack them in step 3 of the assembly.
5. Remove the console (G) and the console supporting tube (D), screws and tools.
6. Cut the box on all four corners with a cutter knife.
7. Place all parts at the training location.

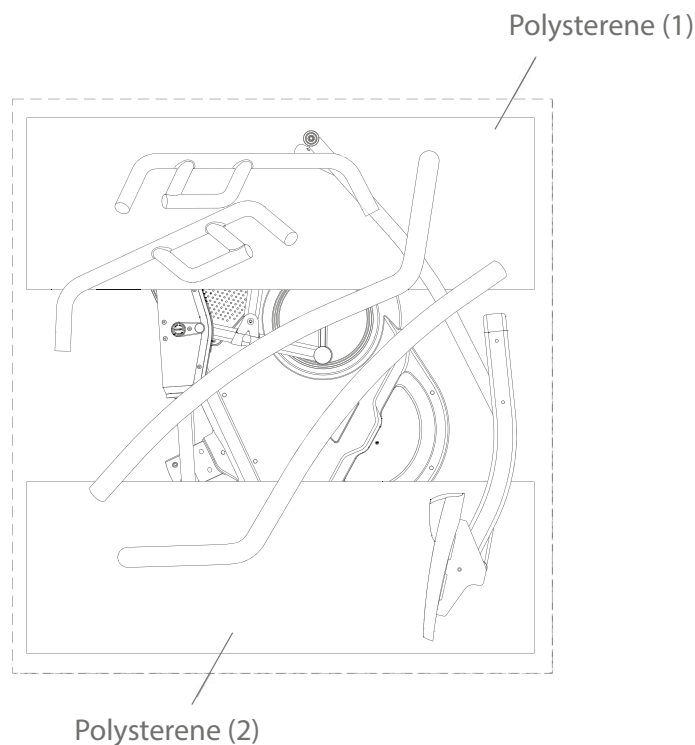

## Step 2: Mounting the central supporting tube

1. Remove the two pre-assembled screws (F5) from the main frame (A).
2. Remove the two pre-assembled screws (F5) from the central supporting tube (F1).
3. Mount the central supporting tube (F1) to the main frame (A) using the previously removed screws (F5)
4. Loosely tighten the screws.

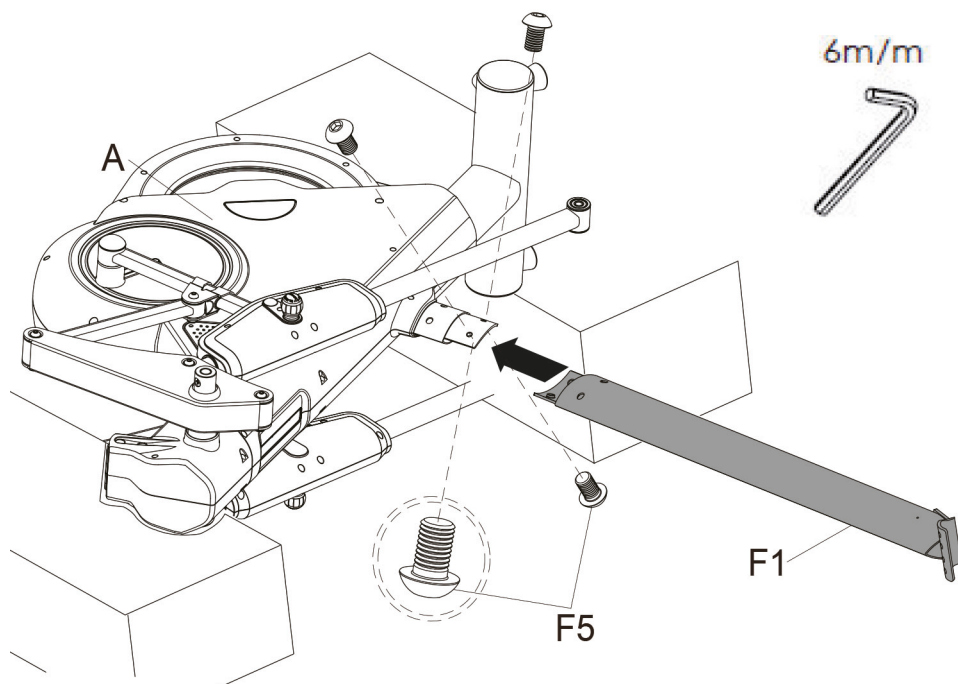


### Step 3: Assembly of the right side connecting tube

1. Mount the right side connecting tube (C2) to the main frame (A) using a screw (J8), see view A.
2. Mount the right side connecting tube (C2) along with the iron bracket (F2) to the bottom of the main frame (A) using two screws (J2), see view B.

**NOTICE**


Insert the polystyrene parts before setting up the fitness equipment if there was no box.

3. Lift up the main frame (A) and set up the fitness equipment.
4. Remove the polystyrene, see lower figure.

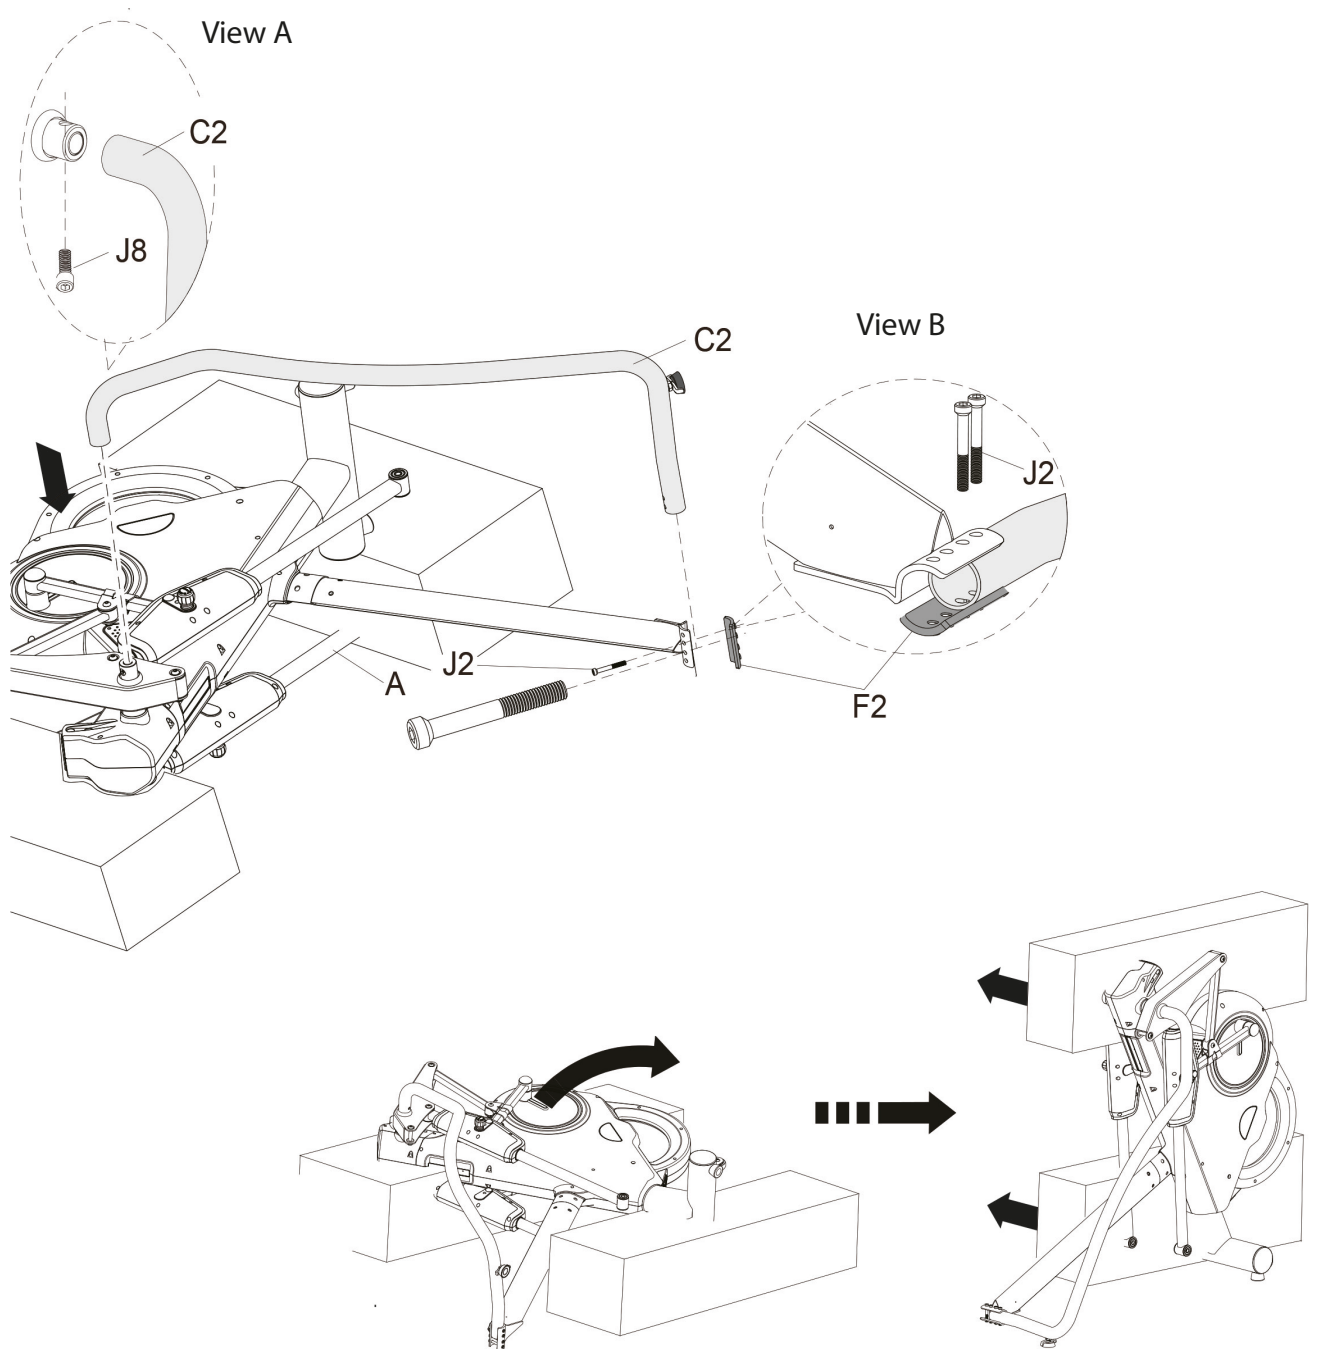

#### Step 4: Assembly of the left connecting tube and the joint covers


1. Mount the left connecting tube (C1) to the main frame (A) using one screw (J8).
2. Mount the left connecting tube (C1) to the iron bracket (F2) on the bottom of the main frame (A) using two screws (J2).
3. Tighten all screws from the steps before.
4. Remove the two pre-assembled screws (F6) from the central supporting tube (F1).
5. Mount the joint covers (F3 & F4) to the central supporting tube (F1) using the previously removed screws (F6).

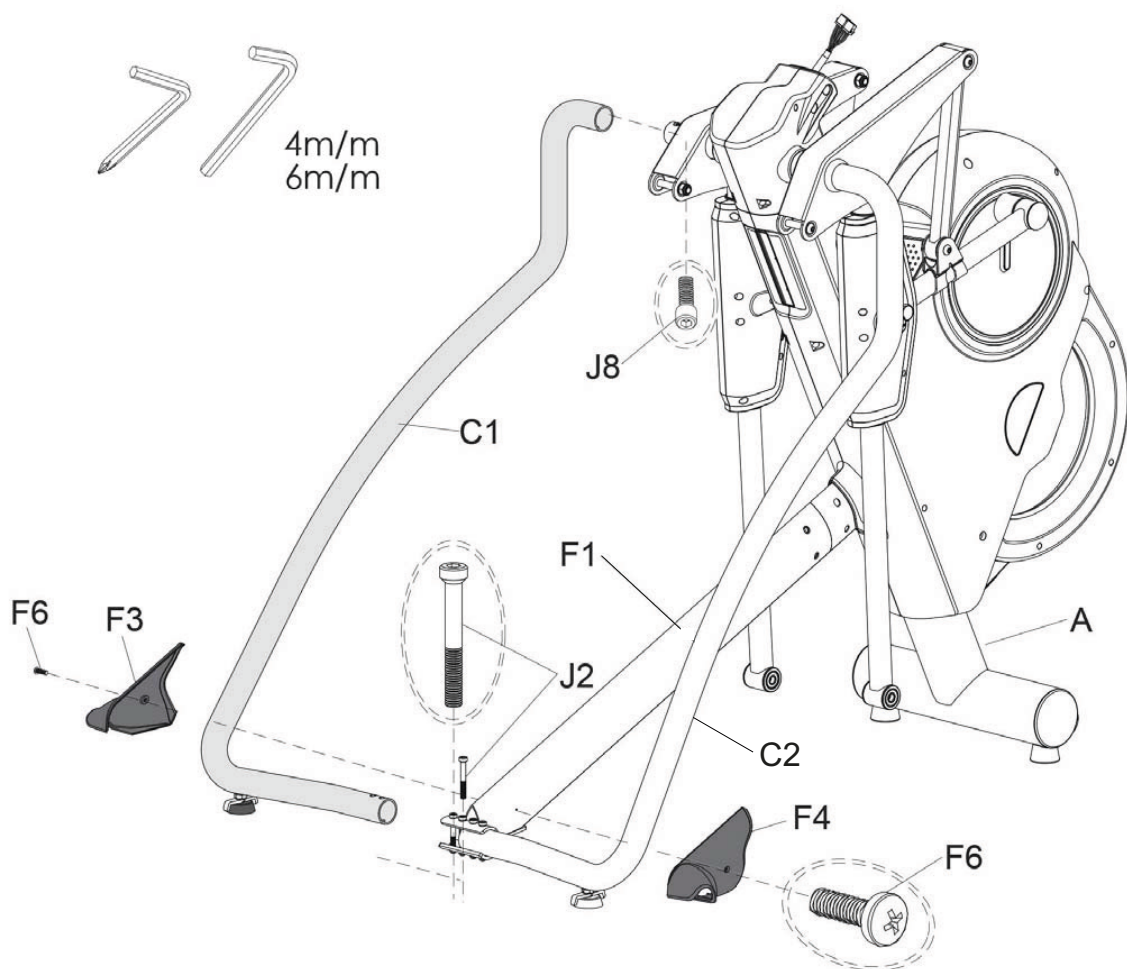




### Step 5: Assembly of the pedal supporting tubes

1. Mount the right pedal supporting tube (B2) to the top of the main frame (A) using one screw (J3), one washer (J9) and one nut (J4), see view C.
2. Mount the right pedal supporting tube (B2) to the bottom of the main frame (A) using one screw (J5), one washer (J9) and one nut (J4), see view D.
3. Completely tighten the screws and nuts one after the other, see views C, D and E.
4. Repeat the steps for the left side.

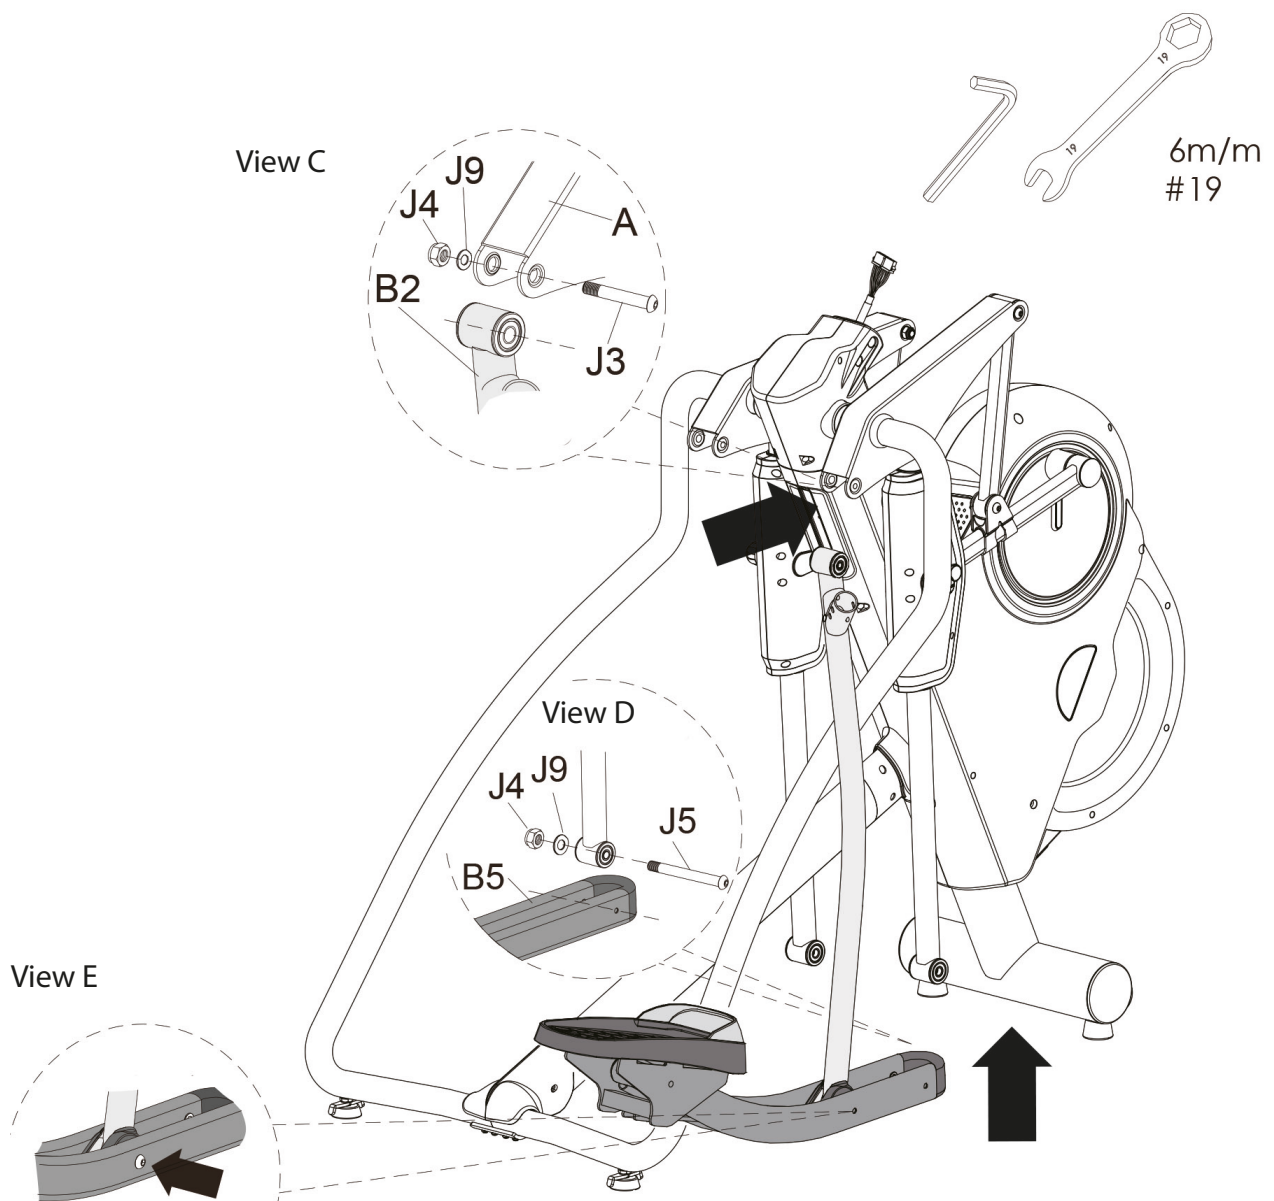

### Step 6: Assembly of the handle bars

1. Remove the three pre-assembled screws (J10 & J11) from the left handle bar (E1), see view F.
2. Mount the left handle bar (E1) to the main frame (A) using the previously removed screws (J10 & J11).
3. Repeat the steps for the other side.

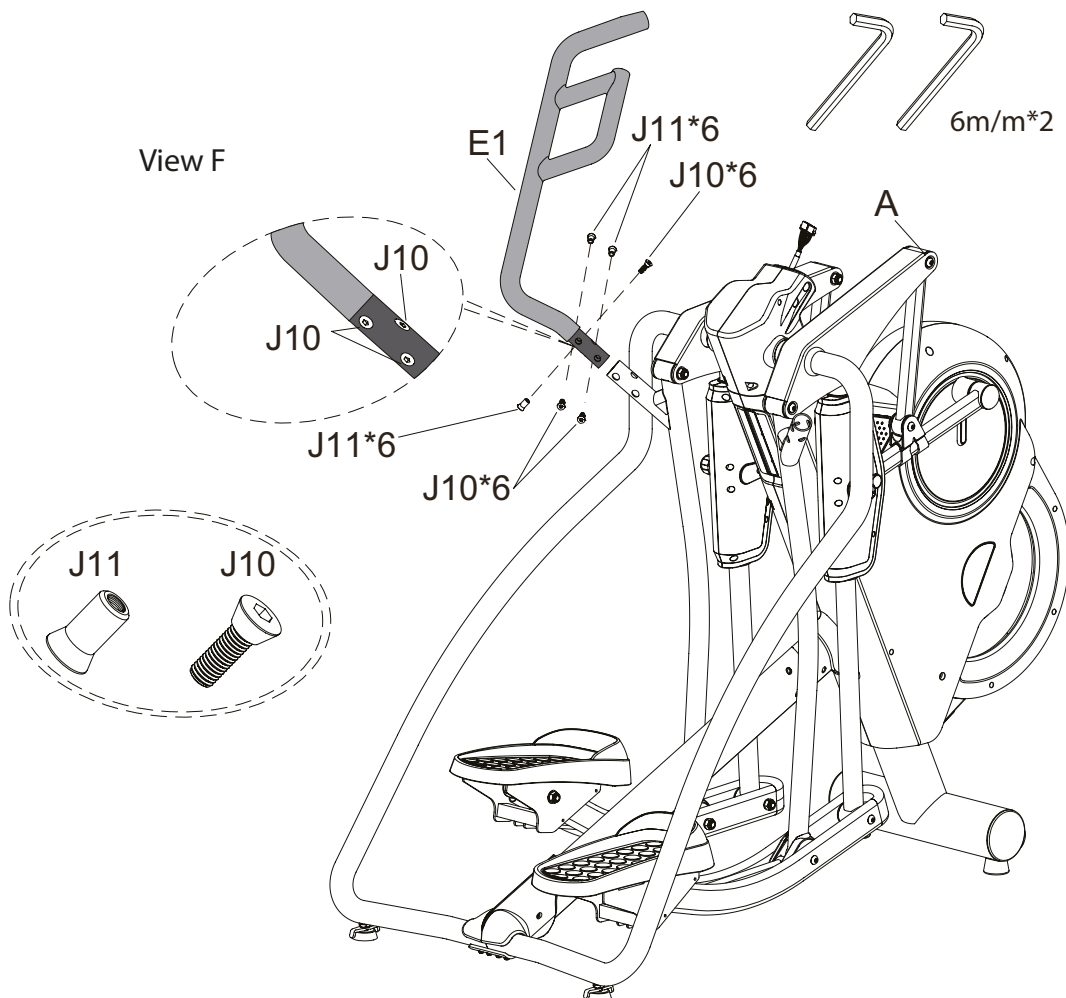

## Step 7: Assembly of the console supporting tube and the bottle holder

### ► ATTENTION


Pay attention to not pinch the cables during the next step.

1. Connect the cable (D1) of the console supporting tube (D) to the cable (A1) of the main frame (A) until you hear a click sound.

### ⓘ NOTICE

Do not remove the pre-assembled screws.

2. Loosen the two pre-assembled screws (J1) at the main frame.
3. Mount the console supporting tube (D) to the main frame (A): Hand tighten both pre-assembled screws (J1) and the other two screws (J1), see view G.
4. Mount the bottle holder (H) to the main frame (A) using two screws (J6).
5. Tighten all screws.

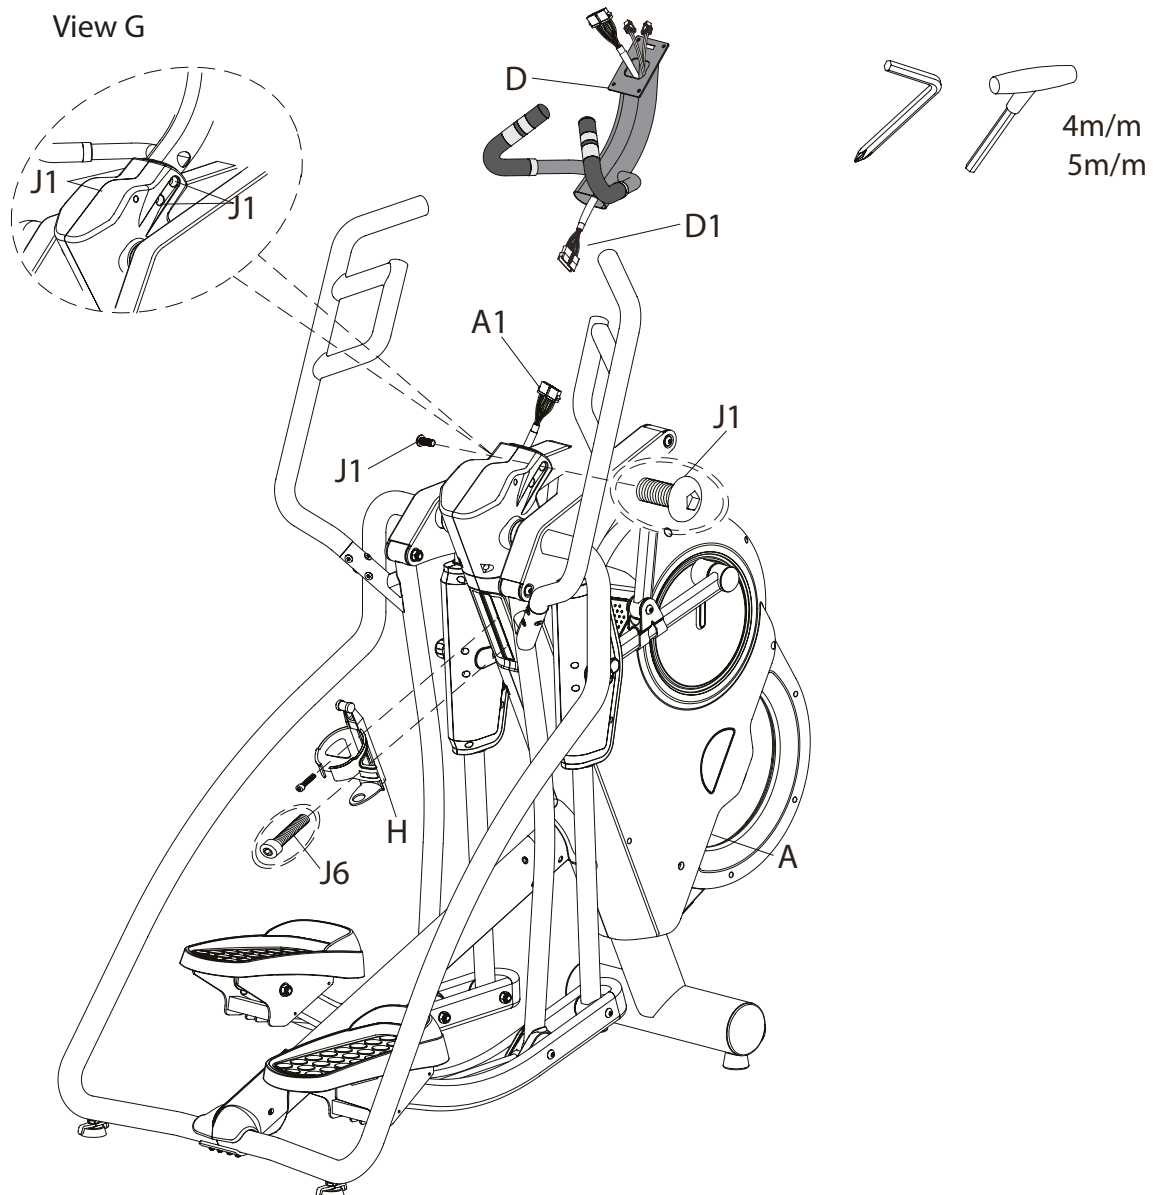

### Step 8: Assembly of the console

1. Remove the four pre-assembled screws (G1) on the back of the console (G).
2. Connect the wires of the console (G) to the sensor wire (D1) and the hand pulse wire (D3).

► **ATTENTION**


Pay attention to not pinch the cables during the next step.

3. Carefully push the wires into the cover and mount the console (G) to the console supporting tube (D) using the for previously removed screws (G1).

### Step 9: Alignment of the feet

If the floor is uneven, you can stabilize the equipment by turning the two setting screws under the main frame.

1. Lift the equipment on the desired side and rotate the setting screws under the main frame.
2. Rotate the screws clockwise in order to remove them and to raise the equipment.
3. Rotate them counterclockwise in order to lower the equipment.

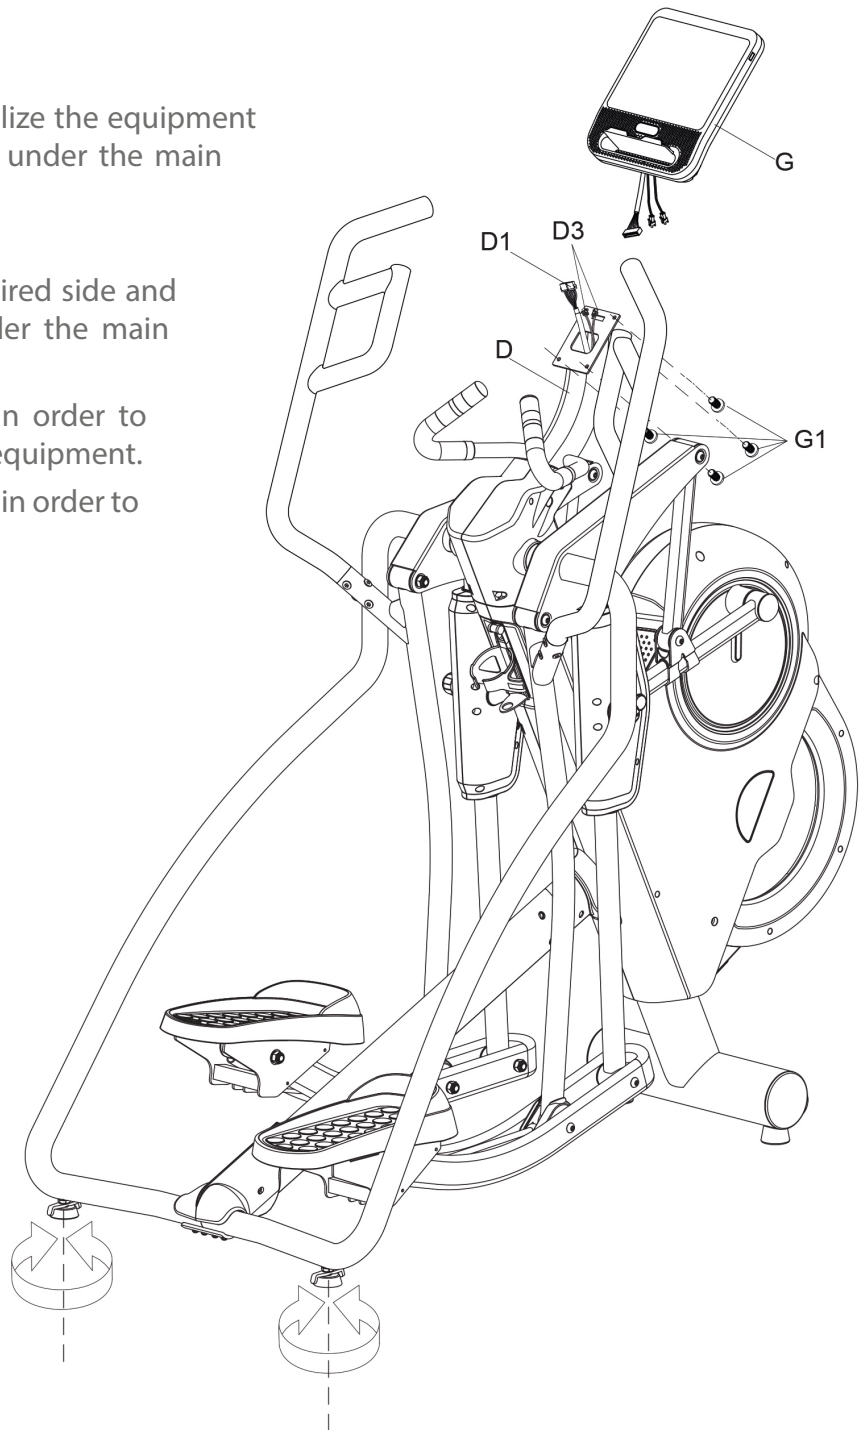

## Step 10: Connecting the equipment to the mains supply


### ► ATTENTION

The equipment must not be connected to a multiple socket, otherwise it cannot be guaranteed that the equipment will be supplied with sufficient power. Technical errors can result.

1. Plug the cable into the socket on the main frame.
2. Plug the power plug into a wall outlet that complies with the instructions in the chapter on electrical safety.

### ⓘ NOTICE

The overload switch protects from short circuits. The button jumps out in case of overload. Turn the power switch off and then on again to restart the equipment.

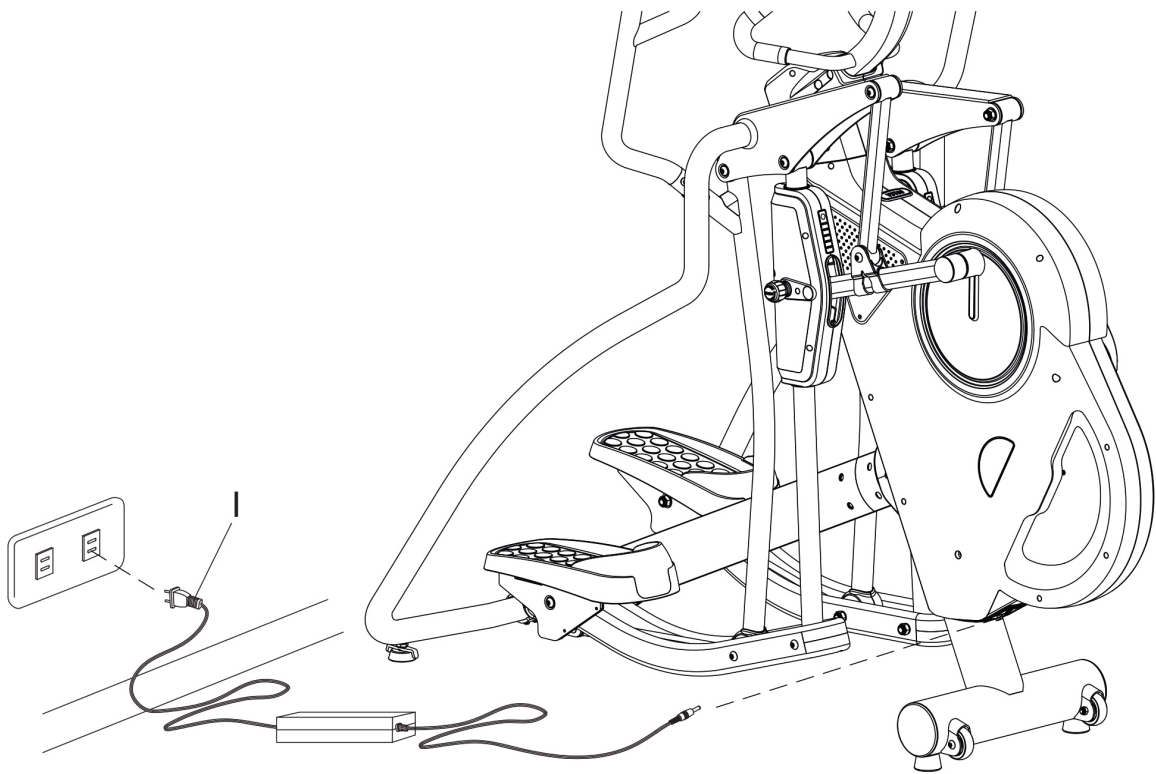


## Step 11: Setting the stride length

There are 5 different stride lengths (18", 20", 22", 24" und 26"), which are displayed in the LED window.

### **WARNING**

Do not adjust the stride length while standing on the device.

1. Loosen and pull the pin out and adjust the desired stride length.
2. Release the pin at the desired height and retighten the pin.
3. Repeat the steps for the other side.

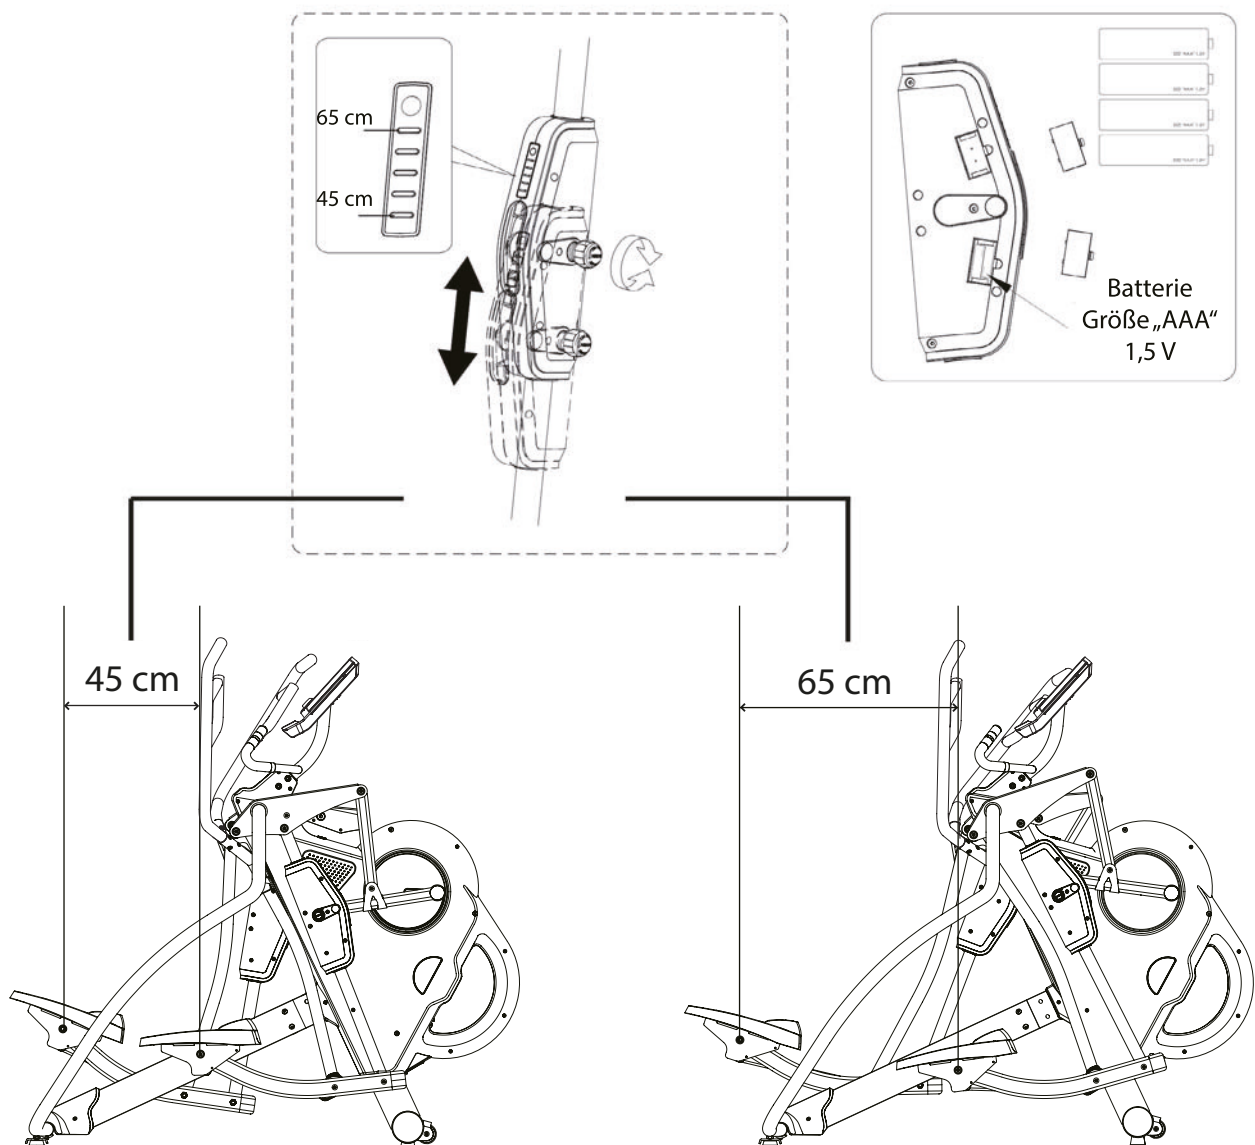

## 3 OPERATING INSTRUCTIONS

### ① NOTICE

Familiarise yourself with all the functions and setting options of the device before starting training. Have the proper use of this product explained to you by a specialist.

### 3.1 Console Display



<b>TIME</b>	Display range: 0:00–99:59 Setting range: 0–99 (Minuten)
<b>SPEED</b>	Display range: 0.0–99.9 (km/ml)
<b>RPM</b>	Display range: 0–999
<b>CALORIES</b>	Display range: 0–999 Setting range: 0–990
<b>PULSE</b>	Display range: 0–230 Setting range: 0–230
<b>WATT</b>	Display range: 0–999 Setting range: 30–400
<b>LOAD</b>	Display range: 1–16 Setting range: 1–16
<b>DISTANCE</b>	Anzeigebereich: 0–99.9 Einstellbereich: 0–99.0

## 3.2 Button Functions

<b>QUICK START</b>	<ul style="list-style-type: none"><li>+ This button is used to switch on the console.</li><li>+ When the console is power saving mode, the Quick Start button can be used to activate the console</li><li>+ The Quick Start programme can be started with this key.</li></ul>
--------------------	---

## 3.3 Switching On and Initial Settings

1. Press the Quick Start button to turn on the console.

*The main menu opens.*

2. Tap on the time and date.
3. Turn on automatic time and date detection or select the appropriate time zone in which you are located.

**NOTICE**

Make sure that the function for automatic time and date detection is switched off. If this function is switched on, it will light up turquoise.

4. Enter the time and date manually. To do this, first select a city in your time zone in the fourth row and, if necessary, set the time in the row above. Then set the current date in the second row.
5. Now connect the device to your Wi-Fi by returning to the settings and tapping Wi-Fi to connect to your network.

**NOTICE**

If you receive the message "Connected, no Internet" although you are successfully connected to the Internet, this is no cause for concern. This is a translation issue and you should still be connected to the Internet. Then wait a few seconds until the message "This network has no Internet access. Stay connected?" appears, check the box "Don't ask again for this network" and confirm with "Yes".

6. You can now activate automatic time and date detection.
7. Finally, carry out an initial update for the console software.
8. Return to the settings.
9. Tap on „Software Update“.
10. To update the software, tap on „Update“ for TFT.

**NOTICE**

- + The device must not be used or switched off during the update.
- + Check at regular intervals whether another update is available and perform it as described above. As soon as a new version is available, the icon is white. Otherwise, the icon is grayed out.





Open the factory settings. Here you can set the following functions:

- + WIFI
- + Screen brightness
- + Volume
- + Language
- + Unit (metric or imperial)
- + Update software and app updates

► **ATTENTION**

The console of this fitness device uses software that is perfectly adapted to the equipment. Please do not make any unauthorised modifications, such as the installation of external apps. This can affect the functionality of the console or even make it unusable. Only install the necessary updates in the Software Updater.

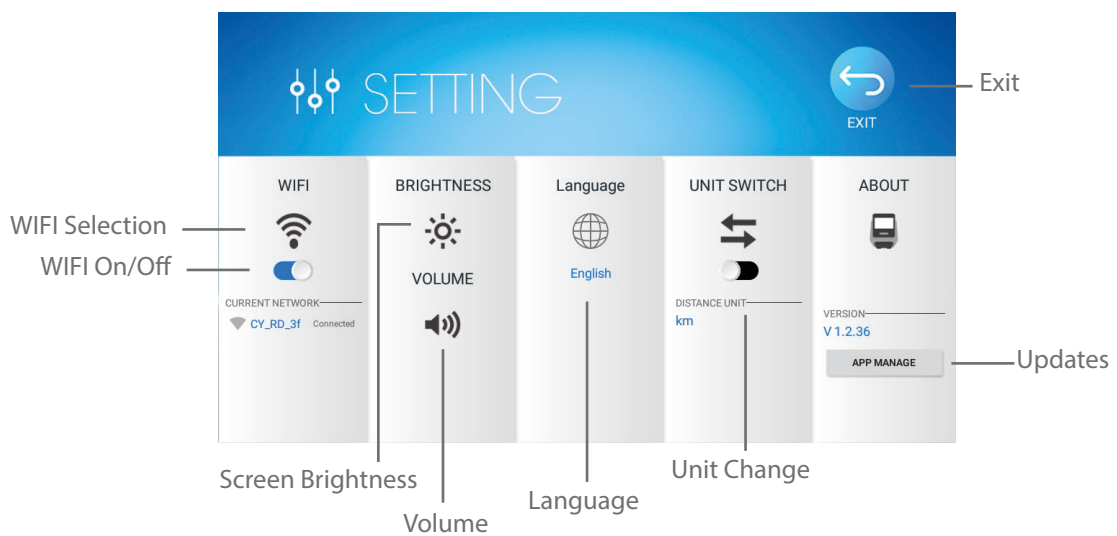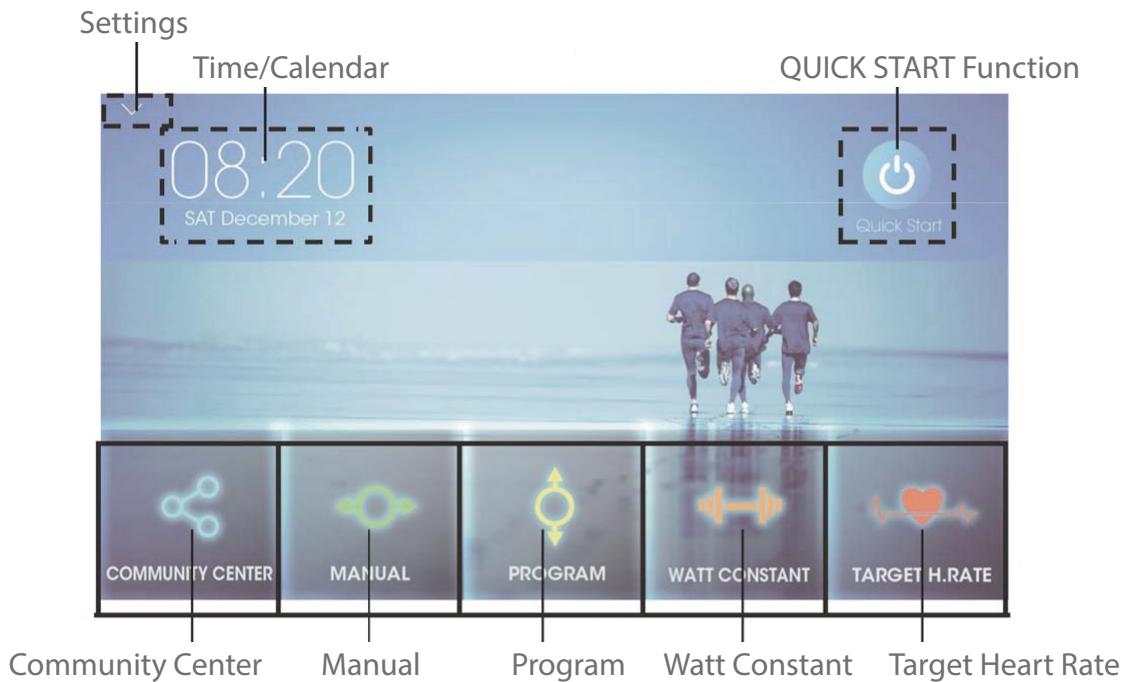

## 3.4 Programmes

There is a wide range of different programmes available. These include:

- + Quick Start Programme
- + Manual Programme
- + Pre-set Programmes
- + Watt Programmes
- + Heart Rate Controlled Programmes
- + Recovery Function Test Recovery of heart rate

### ① NOTICE


The user profile U0 acts as a guest profile. None of your training data is saved. This function is only possible with user profiles U1-U4.

### 3.4.1 Quick-Start Programme

1. To start the Quick Start program, tap Quick Start in the Main Menu or press the Quick Start button.

*The values for time, distance and calories are incremented.*

2. Tap the arrow buttons to increase or decrease resistance.
3. Tap Pause to pause the program.
4. Tap Continue to resume the workout.
5. Tap Home to return to the main menu.

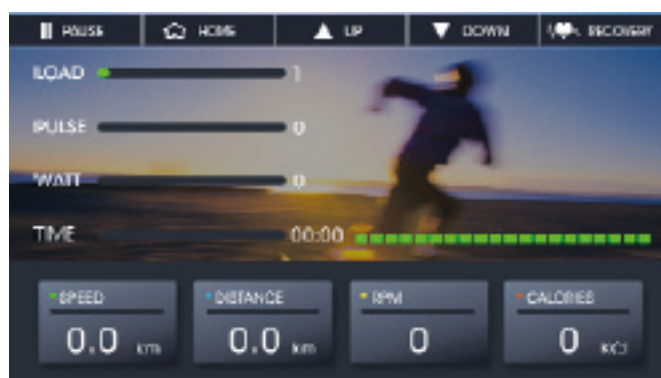

### 3.4.2 Manual Programme


There are several setting options for the manual program. You can decide whether you want to train on one or more values. Values that have been set are counted down and the remaining values are counted up accordingly. As soon as a set target value is reached, the programme is automatically terminated.

1. Select the manual programme in the main menu by tapping on „Manual“ in the main menu.
2. Select one of the user profiles (U0–U4).
3. Set age, height, weight and gender for the selected user profile.
4. Set the desired values for time, distance and/or calories.
5. Tap on Start to start the program.
6. Tap the arrow buttons to increase or decrease the resistance.
7. Tap Pause to pause the program.
8. Tap Continue to resume the workout.
9. Tap Home to return to the main menu.



### 3.4.3 Pre-Set Programmes

1. Select the profile programmes in the main menu by tapping on „Program“ in the main menu.
2. Select one of the user profiles (U0–U4).
3. Set age, height, weight and gender for the selected user profile.
4. Select one of the 12 profile programs.
5. Set the desired training time.
6. Tap Start to start the program.
7. Tap the arrow buttons to increase or decrease resistance.
8. Tap Pause to pause the program.
9. Tap Continue to resume the workout.
10. Tap Home to return to the main menu.

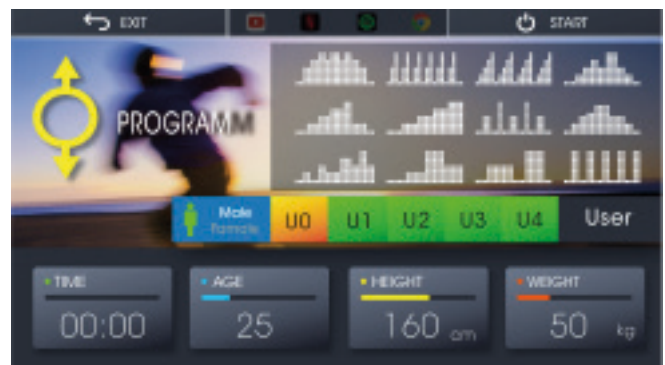

### 3.4.4 Watt Programme

1. Select the watt programme in the main menu by tapping „Watt“ in the main menu.
2. Select one of the user profiles (U0–U4).
3. Set age, height, weight and gender for the selected user profile.
4. Set the desired training time.
5. Tap Start to start the program.
6. Tap the arrow buttons to increase or decrease the resistance.
7. Tap Pause to pause the program.
8. Tap Continue to resume the workout.
9. Tap Home to return to the main menu.



### 3.4.5 Heart Rate Controlled Programs

#### WARNING

Your training equipment is not a medical device. The heart rate measurement of this equipment may be inaccurate. Various factors can affect the accuracy of the heart rate measurement. The heart rate measurement serves only as a training aid.

There are four heart rate programmes available. Either select one of the three pre-set target heart rates (55%, 75% or 90% of your maximum heart rate) or select TAG and enter a different target heart rate manually. Your maximum heart rate is determined by the console depending on your age. For these programmes we recommend a chest strap.

1. Select the heart rate controlled programmes from the main menu by tapping Target H. Rate in the main menu.
2. Select one of the user profiles (U0–U4).
3. Set age, height, weight and gender for the selected user profile.
4. Select either 55%, 75%, 90% or TAG.
5. If you have selected TAG, you can set your target value yourself.
6. Set the desired training time.
7. Tap on Start to start the program.
8. Tap the arrow buttons to increase or decrease the resistance.
9. Tap Pause to pause the program.
10. Tap Continue to resume the workout.
11. Tap Home to return to the main menu.



### 3.5 Recovery Function

1. To calculate your recovery heart rate, tap Recovery after training.
2. Grasp the hand pulse sensors.

After 60 seconds, your result will be displayed as a score (F1 –F6) where F1 is the best and F6 is the worst result.



## 3.6 Multimedia

### ① NOTICE

When the console is in MULTIMEDIA mode, it cannot enter power saving mode. If the console is not in use, please exit MULTIMEDIA mode and return to the main menu. Outside MULTIMEDIA mode, the console will enter power saving mode after 5 minutes.

In the media area you have access to various apps. These include:

- + YouTube
- + Netflix
- + Spotify
- + Chrome
- + iRoute
- + Kinomap

### 3.6.1 Retrieving Apps from the Main Menu

This way only the Quick-Start programme can be used

1. Tap Communication Centre in the Main Menu.
2. Select any app.
3. Tap the arrow on the left side of the screen.
4. Tap Quick Start and the programme starts.


### 3.6.2 Access to Apps During Your Workout

### ① NOTICE

The access to apps during the training is only possible within the manual program or one of the profile programs.

1. Start a desired programme.
2. To use an app during your workout, pause the programme for a moment and tap the desired app at the top of the screen.
3. Tap Continue and the app will open.
4. To continue your workout, tap the arrow on the left side of the screen and tap Quick Start.

*The selected app now runs in parallel with the running program.*

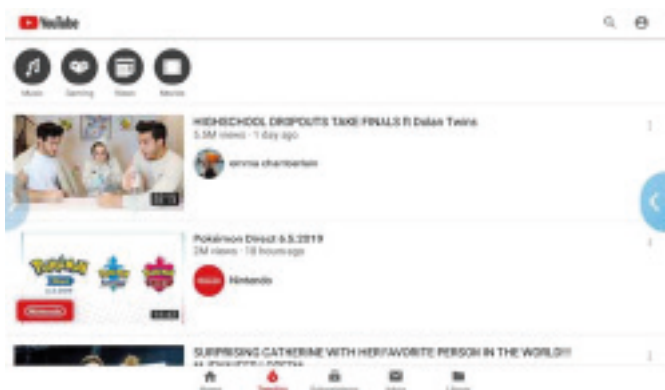

## 4.1 General Instructions

### WARNING

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.

### ▶ ATTENTION


- + Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 5°C and 45°C.

## 4.2 Transportation Wheels

### ▶ ATTENTION

If you want to transport your equipment over particularly sensitive and soft floor coverings, such as parquet, planks or laminate, lay out the transport route with cardboard or similar to avoid possible floor damage.

1. Stand behind the equipment and lift it until the weight is transferred to the transportation wheels. After that, you easily can move the equipment to a new position. For long transport distances the equipment should be disassembled and safely packed.
2. Select the new location by following the instructions in the section 1.4 of this manual.

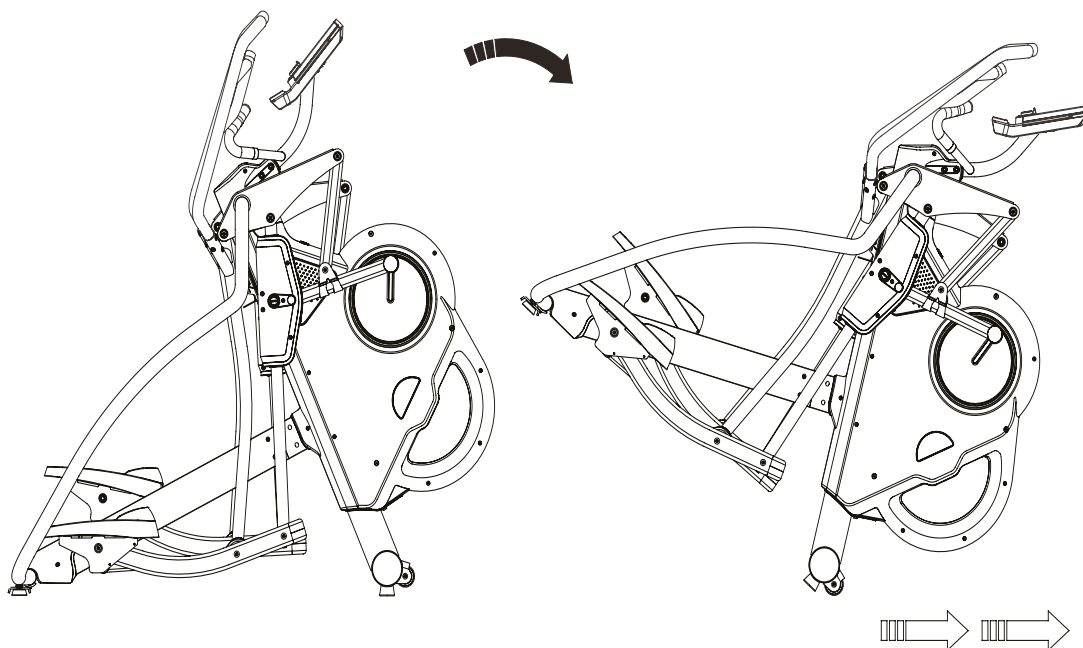

## 5.1 General Instructions



### WARNING

- + Do not make any improper changes to the equipment.



### CAUTION

- + Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

### ATTENTION

- + In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

## 5.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

Fault	Cause	Solution
Drive disks wobble/ make noises	Drive disk loose	Tighten nut (pay attention to left-hand / right-hand thread)
Display is blank/is not working	Loose cable connections	Check cable connections
Equipment wobbles	Equipment is not level	Align the feet
Creaking noises on the stepping area	Loose screws on stepping area	Tighten the screws on the stepping area
Creaking noises	Screw connections loosened or too tight	Check screw connections
Squeaking noises on the guide rails	Guide rails or rollers dirty or guide rails dry	Clean the guide rails and then lubricate them with a suitable lubricant
Stride length adjustment does not work	Batteries empty	+ Replace the batteries at the stride length adjustment + Contact your contract partner
Software problems	Software version not up to date	+ Check whether there is an update for the software (TFT) and carry it out. + If the problems persist, contact your contract partner.



No pulse display	<ul style="list-style-type: none"> <li>+ Sources of interference in the room</li> <li>+ unsuitable chest strap</li> <li>+ Wrong position of chest strap</li> <li>+ Chest strap defective or battery empty</li> <li>+ Pulse display defective</li> </ul>	<ul style="list-style-type: none"> <li>+ Eliminate sources of interference (e.g. mobile phone, WLAN, lawn mower and vacuum cleaner robot, etc. ...)</li> <li>+ Use a suitable chest strap (see RECOMMENDED ACCESSORIES).</li> <li>+ Reposition chest strap and/or moisten electrodes</li> <li>+ Changing batteries</li> <li>+ Check if pulse display by hand pulse possible</li> </ul>
------------------	---	--

## 5.3 Maintenance and Inspection Calendar


To avoid damage from body sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly	Quarterly
Display console	C	I	
Slide rails			C
Lubrication of slide rails and moving parts			I
Plastic covers	C	I	
Screws and cable connections		I	
Legend: C = clean; I = inspect			

## 6 DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an electricals recycling centre. Further information can be obtained from your local authority's recycling service.

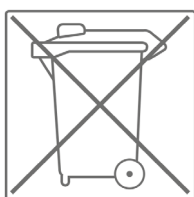

The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

## 7 RECOMMENDED ACCESSORIES

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. This could be a floor mat, for example, which makes your fitness equipment stand more securely and also protects the floor from falling sweat, but it could also be additional handrails on some crosstrainers or silicone spray to keep moving parts in good shape.

If you have purchased a fitness machine with pulse training and want to train your heart rate, we strongly recommend that you use a compatible chest strap, as this ensures optimum transmission of the heart rate. You may want to buy additional grips or weights for multi gyms.

Our range of accessories offers the highest quality and makes training even better. If you would like to find out more about compatible accessories, please go to the detail page of the product in our webshop (the easiest way is to enter the article number in the search field above) and go to the recommended accessories on this page. Alternatively, you can use the QR code provided. Of course, you can also contact our customer service: by telephone, e-mail, in one of our branches or via our social media channels. We will be happy to advise you!



floor mat



chest strap



chest strap contact gel



towels



silicone spray

## 8.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 10 of this operating manual.

**NOTICE**

The serial number of your equipment is unique. It's located on a white sticker. The exact position of this sticker is shown in the following illustration.



Enter the serial number in the appropriate field.

**Serial number:**

**Brand / Category:**

**Model Name:**

**Article Number:**


## 8.2 Parts List


No.	Name	Qty.	No.	Specification	Qty.
A	Main Frame	1	A31	Flat Key	2
A1	Sensor Wire	1	A32	Screw	2
A2	Connection Slice	2	A33	Turing Plate	2
A3	Motor	1	A34	Pressing Pipe	1
A3-1	Screw	4	A35	Bearing 6003Zz	2
A4	Dc Wire	1	A36	C Lip	1
A5	Nut	1	A37	Nut M12	3
A6	Sensor Wire	1	A38	Washer M12	4
A7	Sensor Wire Housing	1	A39	Axle	1
A8	Screw	1	A40	Bearing 6001Mrb	2
A9	Screw M8 X 45	1	A41	Bush	1
A10	Nut M8	1	A42	Flywheel	1
A11	Screw M6 X 20	1	A43	Flywheel Cover	2
A12	Nut M6	1	A44	Screw M4 X 16	6
A13	End Cap	2	A45	Magnetic Housing	1
A14	Fix Cushiiion	2	A49	Screw M5 X 10	4
A15	Washer M6	2	A50	Front Pedal Supporting Tube	2
A16	Screw M5 X 16	2	A51	Magnetic	4
A17	Wheel	2	A52	Screw M5 X 8	4
A18	Nut M8	2	A53	Induction Wand	10
A19	Screw M8 X 45	2	A54	Side Decoration Housing Set ( L )	2
A20	Belt Wheel	1	A55	Side Decoration Housing Set ( R )	2
A21	Magnetic	1	A56	Screw	16
A22	Axle	1	A57	Battery Cover	4
A23	Screw M8 X 25	4	A58	Push Rod Bracket ( L )	2
A24	Nut M8	4	A59	Push Rod Bracket ( R )	2
A25	Bush	1	A60	Knob	2
A26	Bearing 6005Zz	2	A61	Nylon Sleeve	8
A27	Bush	1	A62	Bolt M8 X 20	8
A28	Bearing Nut	1	A63	Nut M8	8
A29	Belt	2	A64	Washer M8	8
A30	Crank	2	A65	Bolt M12 X 53	2

A66	Washer M12	2	B2	Pedal Supporting Tube ( R )	1
A67	Nut M12	2	B3	Pedal Housing ( L )	2
A68	Led Display	2	B4	Pedal Housing ( R )	2
A69	Bearing Sleeve	14	B5	Lower Pedal Supporting Tube	2
A70	Bush	12	B6	Screw M12 X 109	2
A71	Bearing 6201Zz	20	B7	Washer M12	2
A72	Screw M12 X 73	4	B8	Nut M12	2
A73	Washer M12	4	B9	Pedal Bracket ( L )	1
A74	Nut M12	4	B10	Pedal Bracket ( R )	1
A75	Oscillating Axle Base ( L )	1	B11	Pedal Rest ( L )	1
A76	Oscillating Axle Base ( R )	1	B12	Pedal Rest ( R )	1
A77	Handlebar Supporting Cover	2	B13	Front Cover Pedal ( L )	1
A78	Bearing 6004Zz	2	B14	Cushion Pad ( L )	1
A79	Bearing 6905Zz	2	B15	Pedal ( L )	1
A80	Front Connecting Shaft	2	B16	Screw M4 X 15	6
A81	Bush	4	B17	Screw M6 X 10	8
A82	Bush	8	B18	Pedal ( R )	1
A83	C Lip	12	B19	Cushion Pad ( R )	1
A84	Bearing Sleeve	12	B20	Front Cover Pedal ( R )	1
A85	Screw M12 X 53	4	B21	Upper Cap For Pedal Supporting	2
A86	Washer M12	4	B22	Lower Cap For Pedal Supporting	2
A87	Nut M12	4	B23	Screw	2
A88	Bearing 2203	2	B24	Middle Pedal Supporting Rod	2
A89	Washer M10	2	B25	Nut M8	4
A90	Nut M10	2	B26	Bush	8
A91	End Cap	2	B27	Bearing 6001 Tp	4
A92	Crank Housing	2	B28	C Clip	4
A93	Screw	2	B29	Screw M8 X 40	4
A94	Main Chain Cover ( L )	1	B30	Screw M12 X 133	2
A95	Main Chain Cover ( R )	1	B31	Bush	2
A96	Small Chain Cover ( L )	1	B32	Bearing 6003Zz	4
A97	Small Chain Cover ( R )	1	B33	Bush	2
A98	Screw	6	B34	Screw	4
A99	Screw	8	B35	Pedal Reinforcement Strip	4
B1	Pedal Supporting Tube ( L )	1	B36	Screw	8

C1	Side Connecting Tube ( L )	1	E2	Handle Bar ( R )	1
C2	Side Connecting Tube ( R )	1	F1	Central Supporting Tube	1
C3	Adjusted Nut	2	F2	Iron Bracket	1
C4	Adjusted End	2	F3	CentralSupportingTubeCover(L)	1
D	Console Supporting Tube	1	F4	CentralSupportingTubeCover(R)	1
D1	Sensor Wire	1	F5	Screw	4
D2	Handl Pulse Ring	2	F6	Screw	2
D3	Handl Pulse Wire	2	G	Console	1
D4	Spacer Ring	2	G1	Screw	4
D5	Handle Pulse	4	H	Water Bottle Holder	1
D6	Upper Handle Pulse Housing	2	J1	Screw M8 X 16	4
D7	Loewr Handle Pulse Housing	2	J2	Screw M8 X 60	4
D8	Handle Pulse Ring	2	J3	Bolt M12 X 73	2
D9	Foam Spacer Ring	2	J4	Nut M12	4
D10	Spong Hdr	2	J5	Bolt M12 X 109	2
D11	Spong Hdr	2	J6	Screw M5	2
D12	Screw M3 X 8	4	J8	Screw M8 X 20	2
D13	End Cap	2	J9	Washer M12	4
E1	Handle Bar ( L )	1	I	Adaptor	1

# 8.3 Exploded Drawing

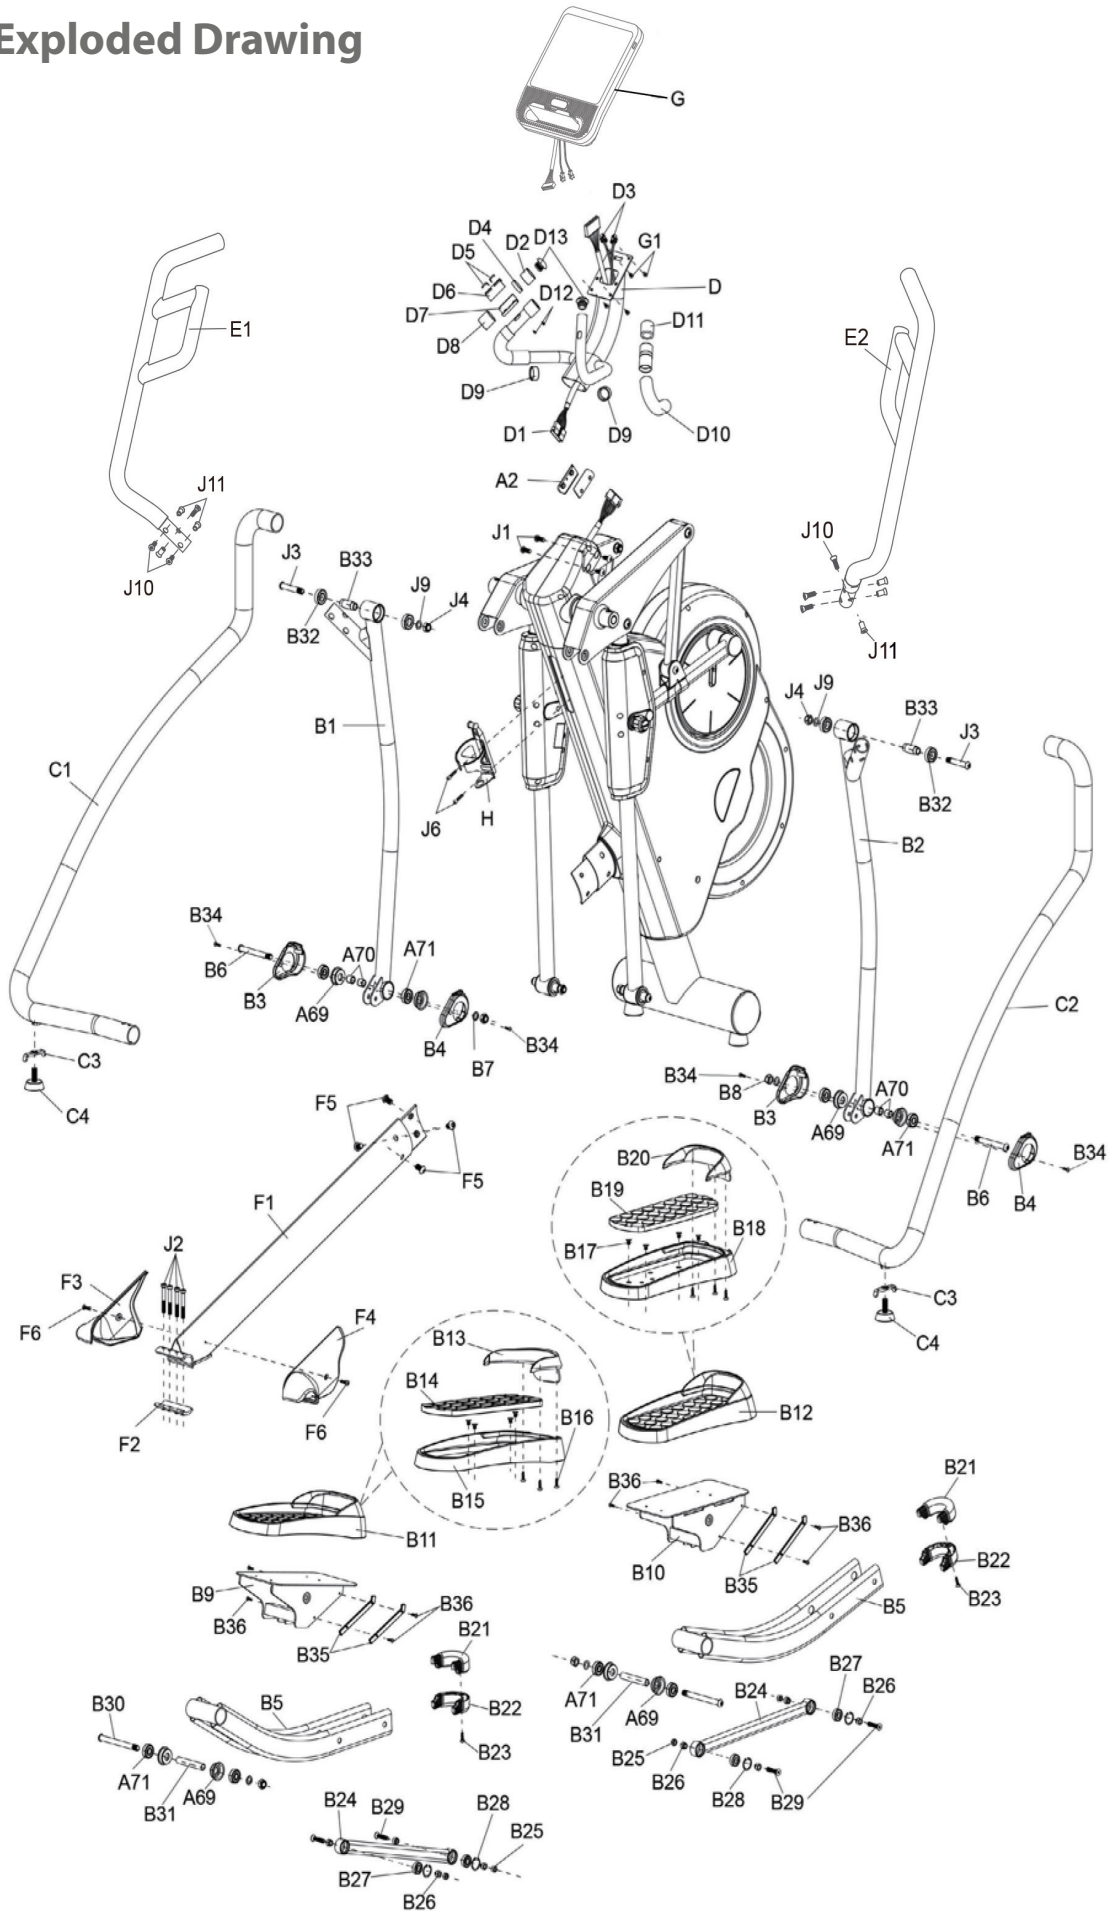

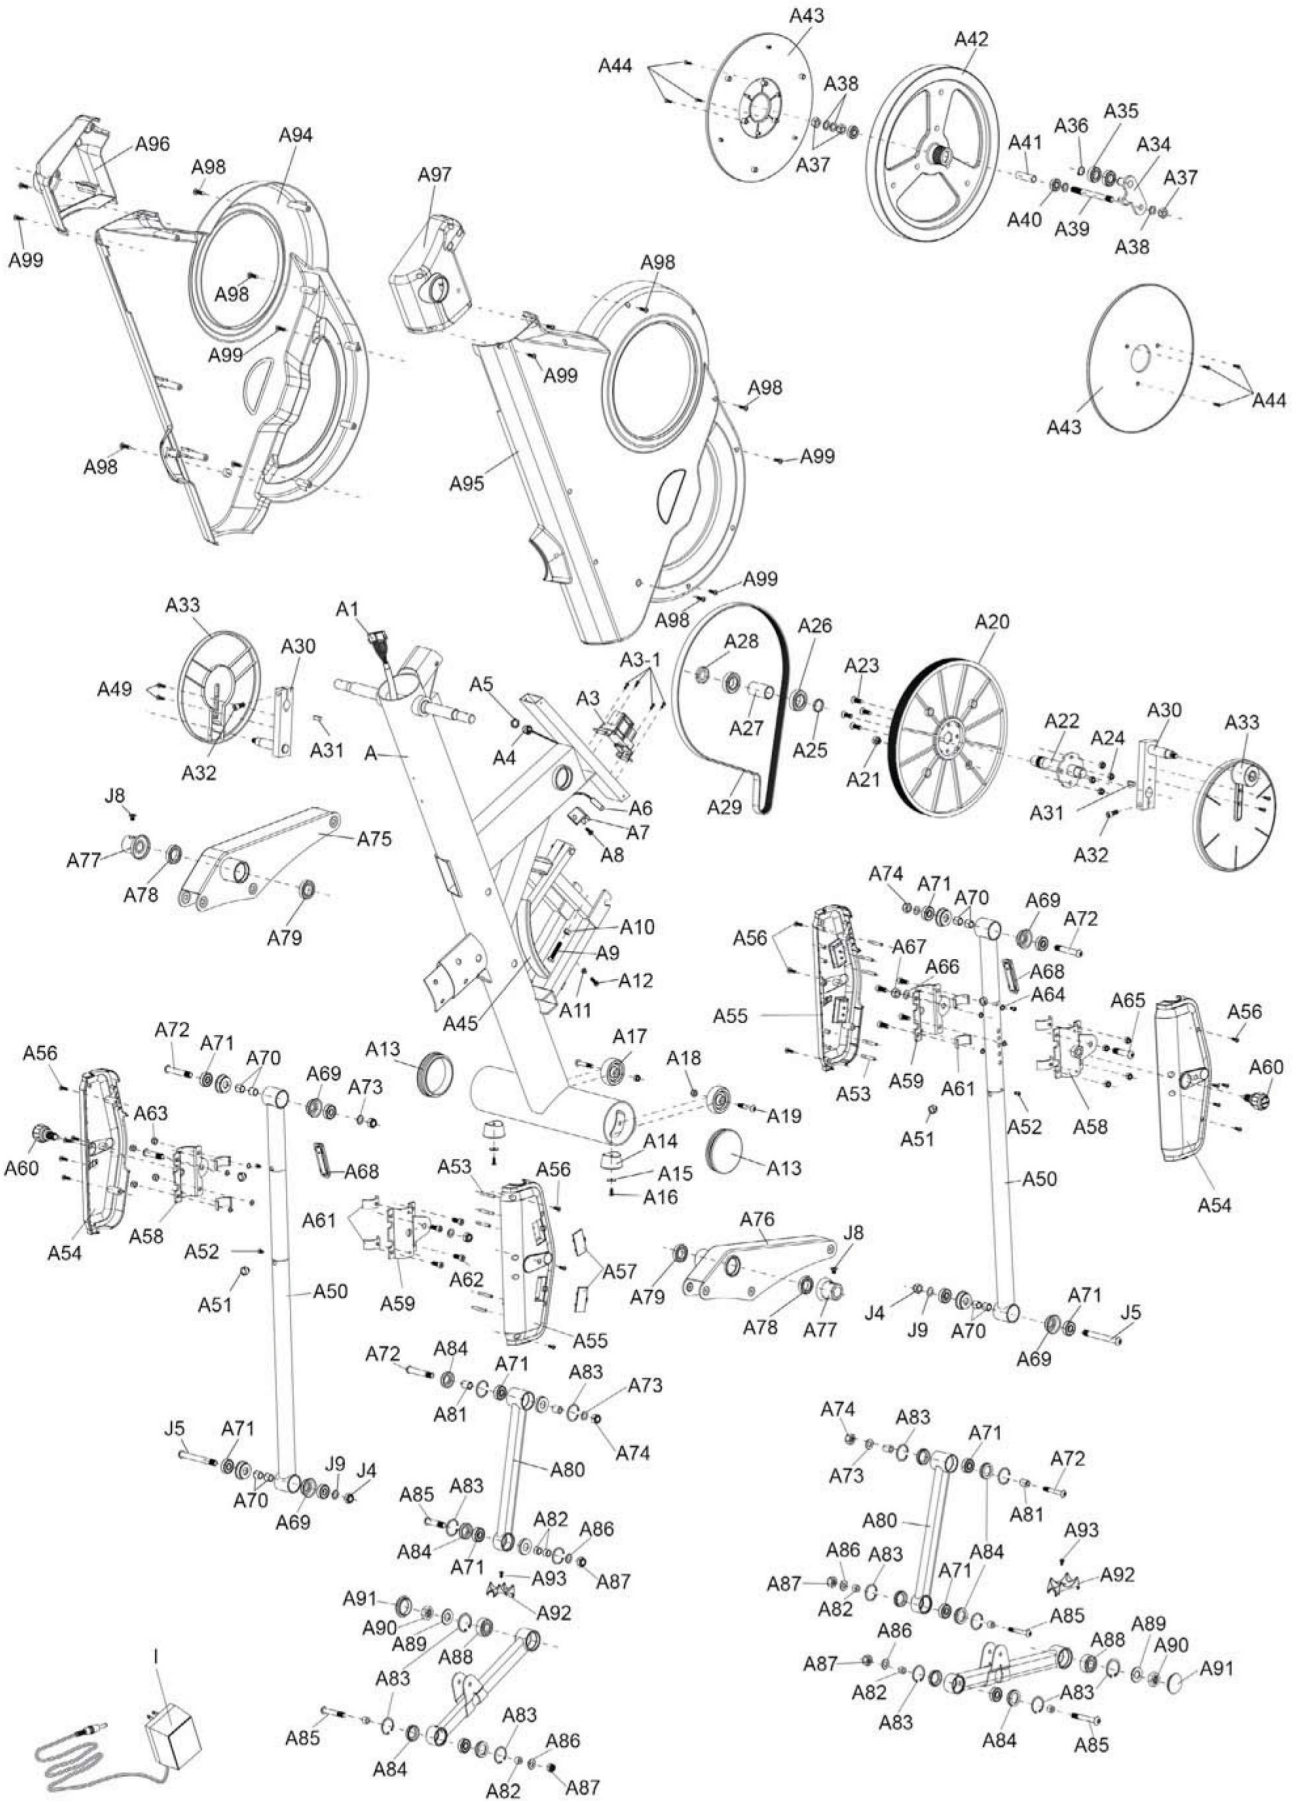



Training equipment from Taurus® is subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

### **Error Descriptions**

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

**Your statutory rights are not affected.**

### **Warrantee**

The warrantee is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

### **Warranty period**

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

### **Repair Costs**

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warrantee personally and are not a part of repair. After the expiration of the warranty period for repair costs, a pure parts warranty applies, which does not include the repair, installation and delivery costs.

### **The terms of use are defined as follows:**

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

### **Warranty Service**

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.

## Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

### Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

### Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

### Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

### Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

DE	DK	FR
<p><b>TECHNICAL SUPPORT</b></p> <p> +49 4621 4210-900</p> <p> +49 4621 4210-698</p> <p> technik@sport-tiedje.de</p> <p> Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p> <p><b>SERVICE</b></p> <p> 0800 20 20277 (Freecall)</p> <p> info@sport-tiedje.de</p> <p> Mo - Fr 08:00 - 21:00 Sa 09:00 - 21:00 So 10:00 - 18:00</p>	<p><b>TECHNICAL SUPPORT &amp; SERVICE</b></p> <p> 80 90 16 50</p> <p>+49 4621 4210-945</p> <p> info@fitshop.dk</p> <p> Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p>	<p><b>TECHNICAL SUPPORT &amp; SERVICE</b></p> <p> +33 (0) 172 770033</p> <p>+49 4621 4210-933</p> <p> service-france@fitshop.fr</p> <p> Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p>
	PL	BE
	<p><b>TECHNICAL SUPPORT &amp; SERVICE</b></p> <p> 22 307 43 21</p> <p>+49 4621 42 10-948</p> <p> info@fitshop.pl</p> <p> Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p>	<p><b>TECHNICAL SUPPORT &amp; SERVICE</b></p> <p> 02 732 46 77</p> <p>+49 4621 42 10-932</p> <p> info@fitshop.be</p> <p> Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p>

UK	NL	INT
<p><b>TECHNICAL SUPPORT</b></p> <p> +44 141 876 3986</p> <p> support@powerhousefitness.co.uk</p> <p><b>SERVICE</b></p> <p> +44 141 876 3972</p> <p> Mo - Fr 9am - 5pm</p>	<p><b>TECHNICAL SUPPORT &amp; SERVICE</b></p> <p> +31 172 619961</p> <p> info@fitshop.nl</p> <p> Ma - Do 09:00 - 17:00 Vr 09:00 - 21:00 Za 10:00 - 17:00</p>	<p><b>TECHNICAL SUPPORT &amp; SERVICE</b></p> <p> +49 4621 4210-944</p> <p> service-int@sport-tiedje.de</p> <p> Mo - Fr 8am - 6pm Sat 9am - 6pm</p>
	AT	CH
	<p><b>TECHNICAL SUPPORT &amp; SERVICE</b></p> <p> 0800 20 20277 (Freecall)</p> <p>+49 4621 42 10-0</p> <p> info@sport-tiedje.at</p> <p> Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p>	<p><b>TECHNICAL SUPPORT &amp; SERVICE</b></p> <p> 0800 202 027</p> <p>+49 4621 42 10-0</p> <p> info@sport-tiedje.ch</p> <p> Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p>

Please find a detailed overview including address and opening hours for all stores of the Sport-Tiedje Group in Germany and abroad on the following website:

[www.sport-tiedje.com/en/stores](http://www.sport-tiedje.com/en/stores)

 
 
 
# WE LIVE FITNESS

## WEBSHOP AND SOCIAL MEDIA

Sport-Tiedje is Europe's largest specialist store for home fitness equipment with currently 80 stores and one of the world's most renowned online mail order companies for fitness equipment. Private customers order via the 25 web shops in the respective national language or have their desired equipment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

Sport-Tiedje offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.

Visit us also on our social media platforms or our blog!



Notes

Notes

