


# KETTLE

## ASSEMBLY AND OPERATING INSTRUCTIONS

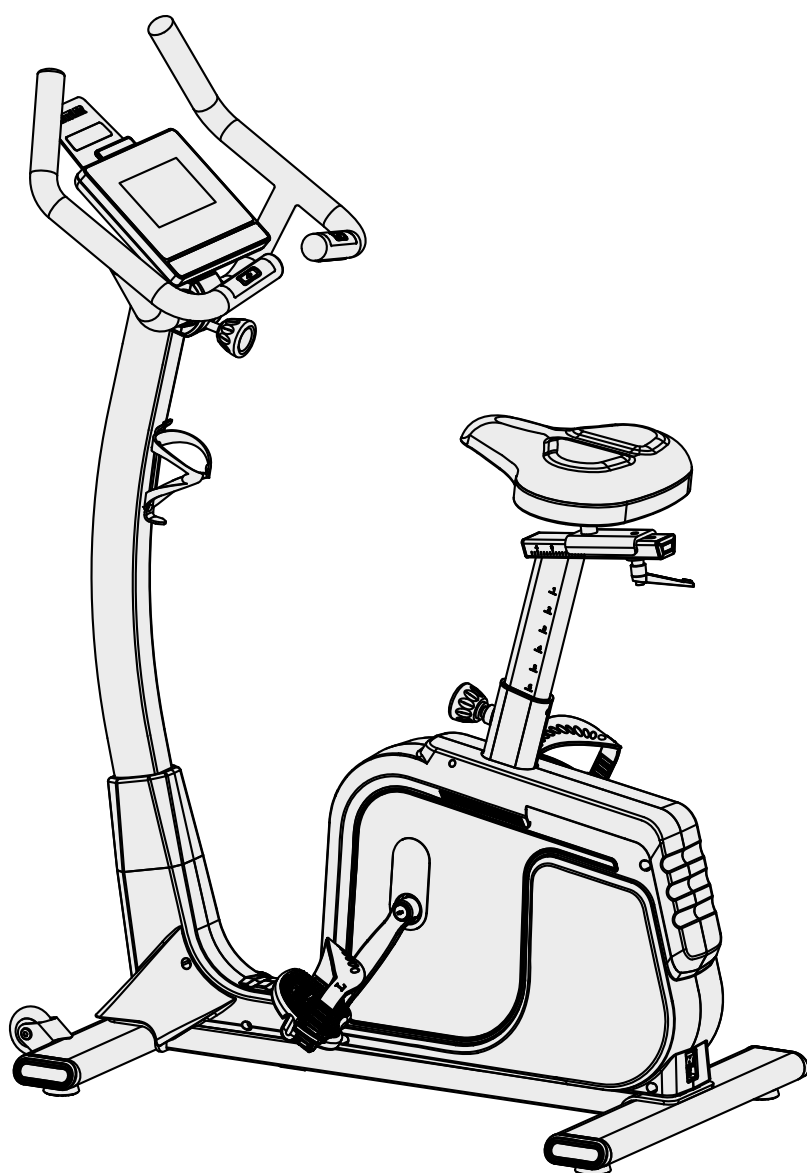

max. 160 kg



~ 60 Min. 



 43 kg

L 105 | W 58 | H 146

FSKEM2003100.01.01

Art. No. K-EM2003-100

**TOUR 600**



# Content

<b>1</b>	<b>GENERAL INFORMATION</b>	<b>8</b>
1.1	Technical Data	8
1.2	Technical Drawings	10
1.3	Personal Safety	11
1.4	Electrical Safety	12
1.5	Set-Up Place	13
<b>2</b>	<b>ASSEMBLY</b>	<b>14</b>
2.1	General Instructions	14
2.2	Scope of Delivery	14
2.3	Assembly	17
<b>3</b>	<b>OPERATING INSTRUCTIONS</b>	<b>24</b>
3.1	Console Overview	24
3.2	Button Functions	25
3.3	Display Modes	26
3.4	Displayed Values	27
3.5	Training Programmes	27
3.5.1	Quick Start	28
3.5.2	Preset Programmes	28
3.5.3	Target Programmes	30
3.5.4	Target-Watt Programme	32
3.5.5	Heart Rate Controlled Programmes	34
3.5.6	User-Defined Programmes	36
3.6	Training Overview	37
3.7	USB-C Connection	38
3.8	Watt Table	39
<b>4</b>	<b>WORKOUT TIPS</b>	<b>40</b>
4.1	General Instructions	40
4.1.1	Training clothes	40
4.1.2	Warming up and stretching	40
4.1.3	Medication	41
4.1.4	Used muscle groups	41
4.1.5	Exercise frequency	41
4.2	Workout journal	43
4.3	Wireless Connection and Fitness Apps	44
<b>5</b>	<b>STORAGE AND TRANSPORT</b>	<b>45</b>

5.1	General Instructions	45
5.2	Transportation Wheels	45
<b>6</b>	<b>TROUBLESHOOTING, CARE AND MAINTENANCE</b>	<b>46</b>
6.1	General Instructions	46
6.2	Faults and Fault Diagnosis	46
6.3	Error Codes and Troubleshooting	47
6.4	Maintenance and Inspection Calendar	48
<b>7</b>	<b>DISPOSAL</b>	<b>48</b>
<b>8</b>	<b>RECOMMENDED ACCESSORIES</b>	<b>49</b>
<b>9</b>	<b>ORDERING SPARE PARTS</b>	<b>50</b>
9.1	Serial Number and Model Name	50
9.2	Parts List	51
9.3	Exploded Drawing	56
<b>10</b>	<b>WARRANTY</b>	<b>58</b>
<b>11</b>	<b>CONTACT</b>	<b>60</b>

**Dear customer,**

Thank you for choosing a Kettler fitness device. Kettler Sport represents tradition, durability, and quality like no other home fitness brand. Classic home trainers such as the Golf have accompanied users for decades. At the same time, Kettler stands for innovation and continuously develops thoughtful solutions, particularly in usability and training comfort.

Kettler Sport provides everything you need for successful training at home: cardio and strength equipment, as well as a wide range of fitness accessories.

Further information can be found at [www.fitshop.com/kettler](http://www.fitshop.com/kettler).

### **Intended Use**

The equipment may only be used for its intended purpose.

The equipment is only suitable for home use. The equipment is not suitable for semi-professional (e.g. hospitals, associations, hotels, schools, etc.) and commercial or professional use (e.g. fitness studios).

### **Legal Notice**

Fitshop GmbH  
Europe's No. 1 for home fitness

International Headquarters  
Flensburger Straße 55  
24837 Schleswig  
Germany

Management:  
Christian Grau  
Sebastian Campmann  
Dr. Bernhard Schenkel  
No. HRB 1000 SL  
Local Court Flensburg  
European VAT Number: DE813211547

### **Disclaimer**

Since December 19, 2024, the trademark rights to © Kettler for fitness equipment in the EU, EFTA, and Turkey are held by Fitshop GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Fitshop is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.

# **FITSHOP**

Europe's No.1 for Home Fitness

## ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.

Due to ongoing changes and software optimisations, the manual may have to be updated. If you notice any discrepancies during assembly or use, please refer to the manual uploaded to the webshop. The latest manual is always available there.



This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Training devices must be classified according to accuracy and use. Accuracy classes are only applicable to devices that display training data.

### Accuracy classes

Class A: high accuracy.

Class B: medium accuracy.

Class C: low accuracy.

The use classes explain the intended use of the training device.

### Use classes

**Class S** (studio): professional and/or commercial use.

These training devices are intended for the use in training rooms of facilities such as sports clubs, school facilities, hotels, clubs and studios whose access and supervision is specifically regulated by the owner (person with legal responsibility).

**Class H** (home use): use at home.

These stationary training devices are intended for the use in private homes where access to the training device is regulated by the owner (person with legal responsibility).

Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

► **ATTENTION**

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.



**CAUTION**

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!



**WARNING**

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!



**DANGER**

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!



**NOTICE**

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.



# 1 GENERAL INFORMATION

## 1.1 Technical Data

<b>Weight and dimensions</b>	
Item weight (gross, including packaging)	46.5 kg
Item weight (net, without packaging)	42.3 kg
Packaging dimensions of cartons (L x W x H)	110 cm x 27 cm x 66 cm
Dimensions (L x W x H)	105 cm x 58 cm x 146 cm
<b>Additional measurement data</b>	
Q-Factor	17.6 cm
Transmission ratio	1 : 8.7
Crank length	17 cm
<b>Maximum load</b>	
Maximum user weight	160 kg
<b>Technical specifications</b>	
Flyweight	10 kg
Resistance system	Induction brake system
Resistance levels	32
Power supply	Generator
<b>Console data</b>	
Display	Pulse
	Speed
	Distance
	Calories
	Time
Display size	7 Inches
Display type	LCD
<b>Wattage specifications</b>	
Min. and max. watts at 60 RPM	20 - 300 watts

<b>Programme overview</b>	
Quick start	1
Target programmes	3
Heart rate controlled	3
Preset programmes	30
Target watt programmes	1
User programmes	2
<b>Other data</b>	
Menu language	English
Wireless connection	Yes
heart rate monitor	Hand pulse sensors, optional: chest strap
Use class	H

## 1.2 Technical Drawings

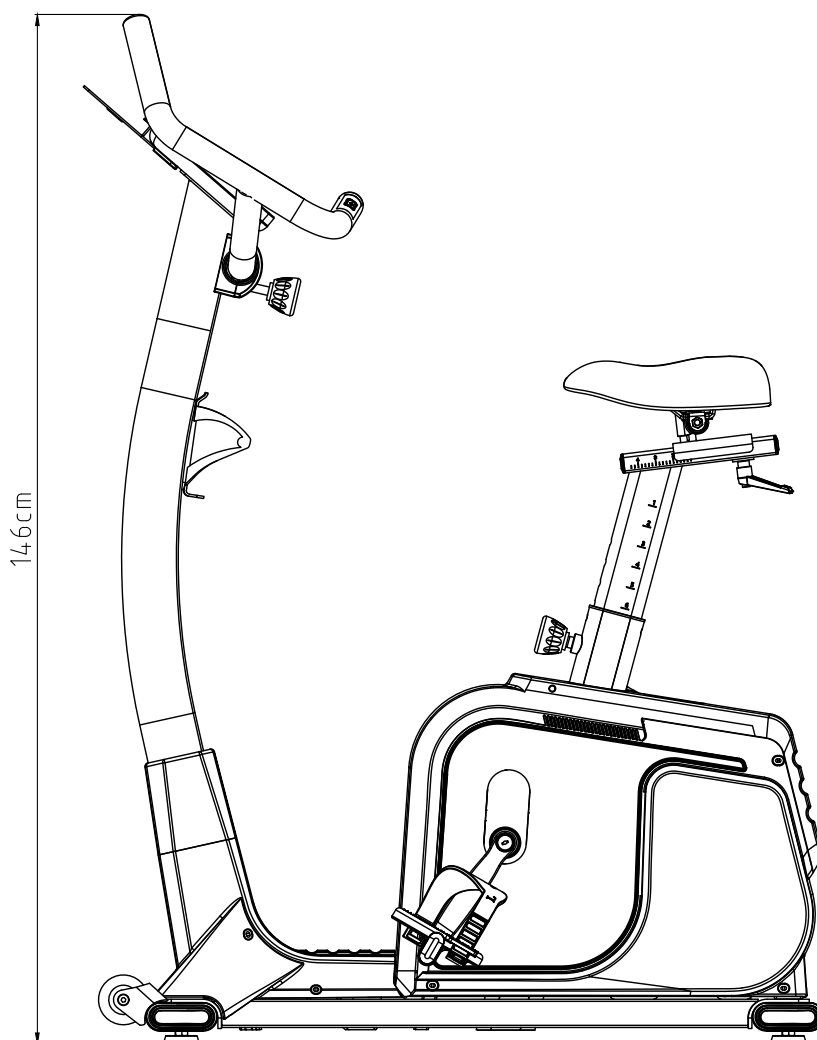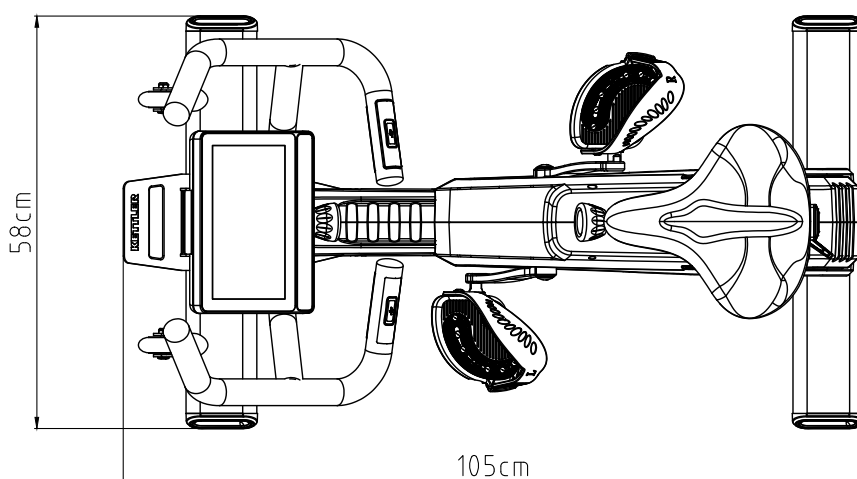

## 1.3 Personal Safety

### **DANGER**

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.
- + The owner must communicate all warnings and instructions to the user.

### **WARNING**

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + The equipment is strictly for use by one person at a time.
- + If your equipment provides a safety key, the clip of the safety key must be attached to your clothing before starting your training. In the event of a fall, the EMERGENCY STOP of the equipment can be initiated.
- + There is a risk of injury from spinning pedals and/or an exposed flywheel in the absence of a freewheel. Never get on or off the equipment when the pedals or the flywheel are still moving. Always make sure that the pedals and the flywheel have come to a complete stop.
- + Support yourself with at least one hand on the handlebar when getting on and off the equipment. Only dismount from the equipment when the pedals have come to a complete stop.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other non-slip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.

### **CAUTION**

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.
- + Always tighten the pedal strap before you start training to prevent your feet from slipping.
- + Be aware that if adjustment devices are left protruding, they may impede the user's movement.

 **CAUTION**

- + The safety level of the appliance can only be maintained if it is regularly checked for damage and wear.

 **ATTENTION**

- + Do not insert any objects of any kind into the openings of the device.
- + To protect the equipment from use by unauthorised third parties, always remove the power cable (if existing) when not in use and store it in a safe place that is inaccessible to unauthorised persons (e.g. children).
- + Class B and C crank training equipment is not suitable for high accuracy purposes.

## 1.4 Electrical Safety

 **DANGER**

- + In order to reduce the risk of an electric shock, always unplug the equipment from the mains socket immediately after your workout, before assembly or dismantling, and before maintenance or cleaning. Do not pull on the cable.

 **WARNING**

- + Do not leave the equipment unattended while the mains cable is plugged into the mains socket. During your absence, the mains cable must be removed from the mains socket to prevent improper use by third parties or children.
- + If the mains cable or plug is damaged or defective, contact your contract partner. Until repair, the equipment must not be used.

 **ATTENTION**

- + The equipment requires a mains connection of 220-230 V with 50 Hz mains voltage.
- + The equipment may only be connected directly to an earthed socket using the supplied mains cable. Extension cables must conform to VDE guidelines. Always completely unwind the mains cable.
- + The socket must be protected by a fuse with a minimum fuse rating of "16 A, slow blow".
- + Do not make any changes to the mains cable or the mains plug.
- + Keep the mains cable away from water, heat, oil and sharp edges. Do not route the mains cable underneath the equipment or under a carpet or rug, and do not place any objects on top of it.
- + If your purchased item is equipped with a TFT console, software updates must be carried out regularly. Follow the instructions on the console to perform the update(s).
- + The software systems on gym equipment with TFT consoles are set up only for the pre-installed apps. Do not install any additional apps.

 **NOTICE**

- + The pre-installed apps on TFT consoles are produced and provided by external manufacturers. Fitshop does not take any responsibility for the availability, functionality or contents of these apps.
- + Hereby, Fitshop GmbH declares that the radio equipment type Wireless Connection (2.402 – 2.480 GHz) complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following website: [www.fitshop.com](http://www.fitshop.com).

## 1.5 Set-Up Place

### **WARNING**

- + Do not place the equipment in main corridors or escape routes.

### **CAUTION**

- + Choose a location in which to place the equipment such that there is enough free space/clearance to the front, the rear and to the sides of the equipment.
- + The training room should be well ventilated during training and not be exposed to any draughts.
- + Choose the place in which to set up the equipment such that there is enough free space/clearance to the front, the rear and to the sides of the equipment.
- + The free area in the direction from which the exercise equipment is accessed must be at least 0.6 m larger than the exercise area.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.

### **ATTENTION**

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.
- + For Class S equipment, the exercise equipment may only be used in areas where access, supervision and control are specifically regulated by the owner.

### 2.1 General Instructions

 **DANGER**

- + Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.

 **WARNING**

- + Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.

 **CAUTION**

- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.

 **ATTENTION**

- + To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.

 **NOTICE**

- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- + Ideally, assemble the equipment at its later set-up place.

### 2.2 Scope of Delivery

The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.

 **CAUTION**


If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

 **NOTICE**


Required tools: wrench, allen key, screwdriver

 **NOTICE**

In the assembly steps, the main frame is shown as component "Z" for better clarity. However, in the exploded drawing and the parts list it is not listed as an individual part. This simplified representation is solely intended to make orientation during assembly easier.

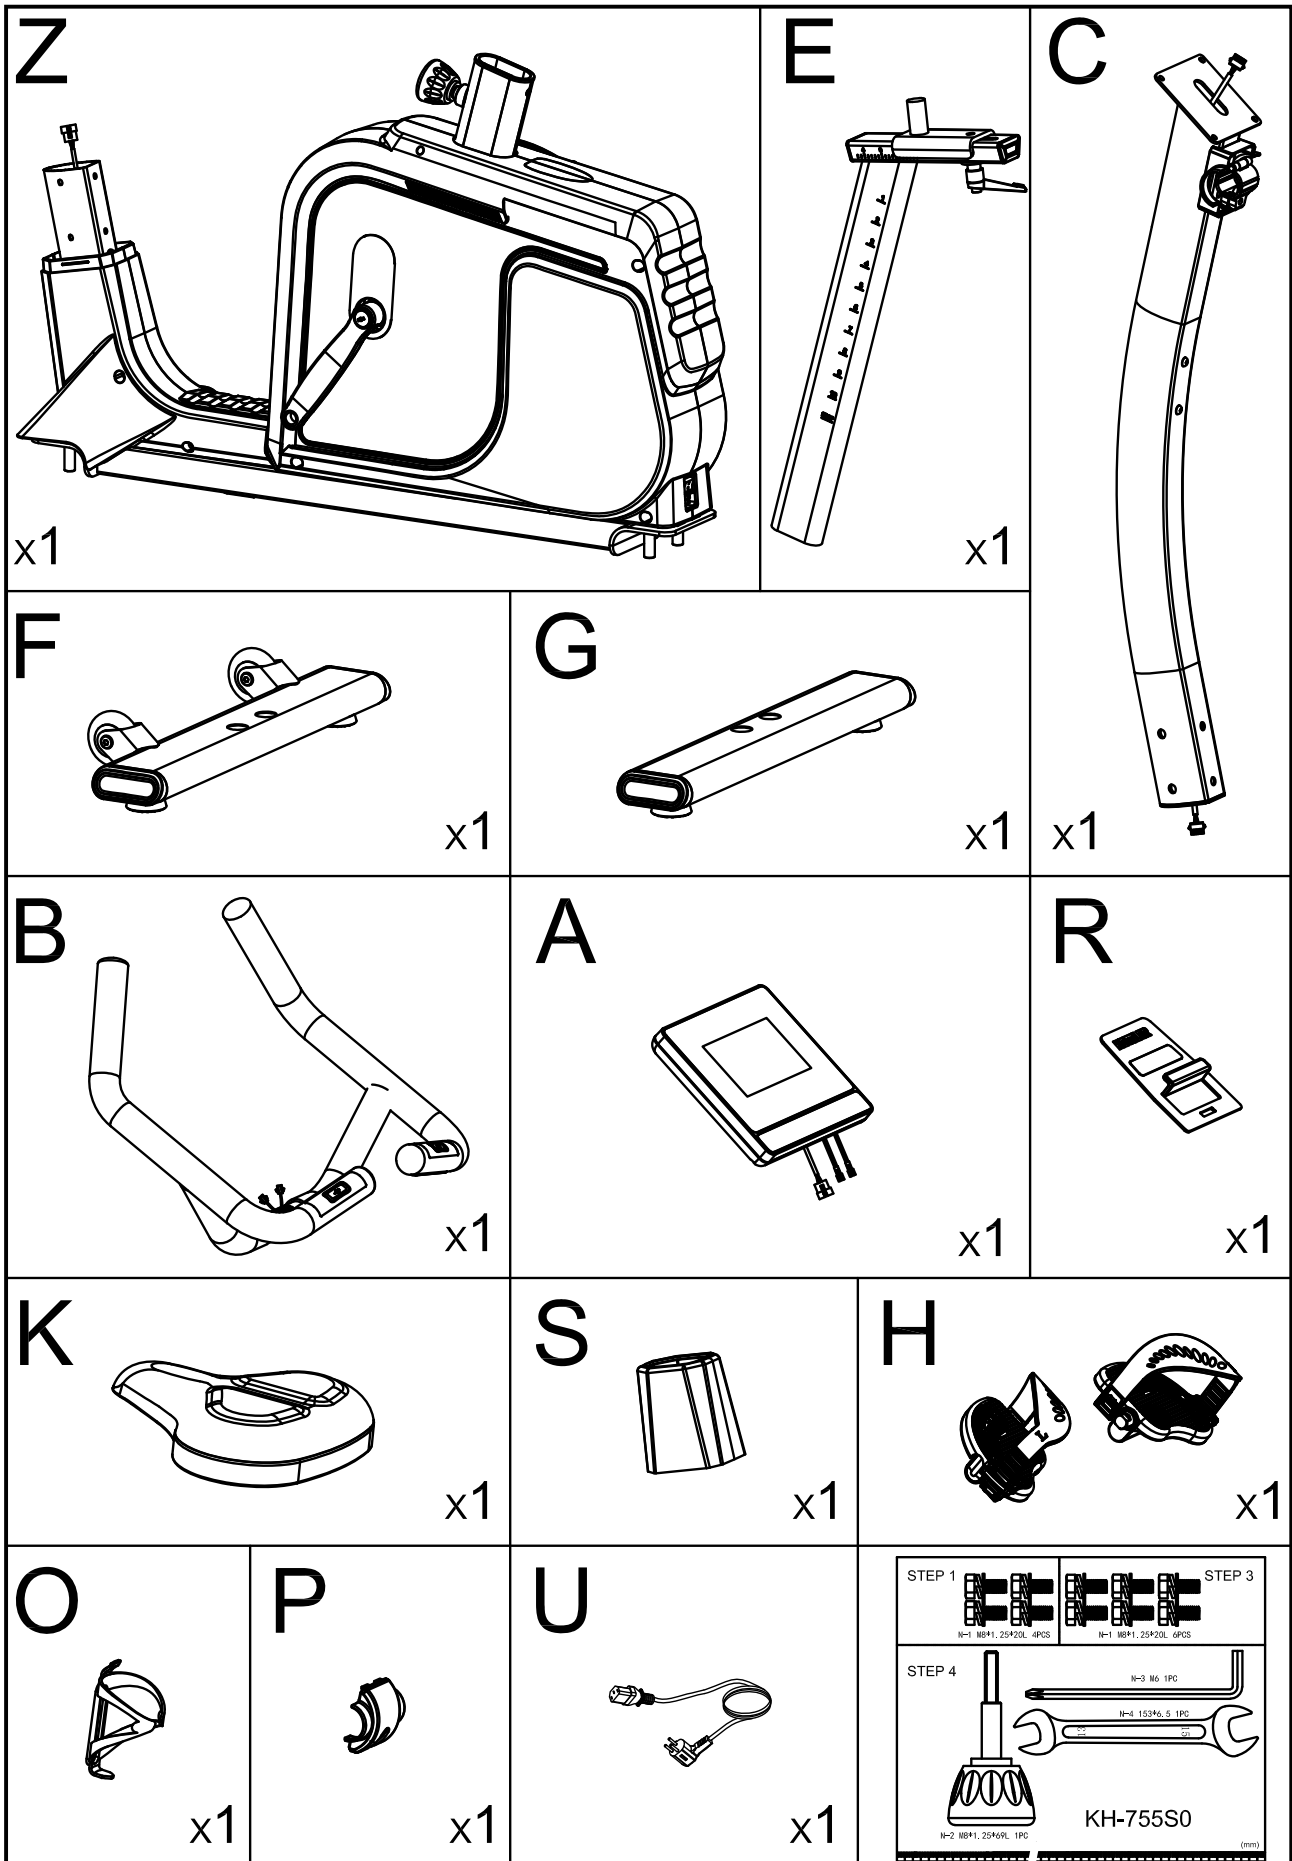


STEP 1

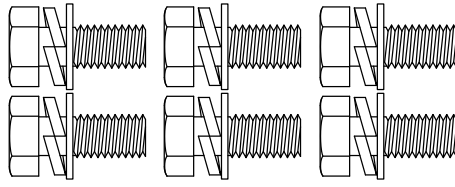


N-1 M8\*1.25\*20L 6PCS

STEP 3

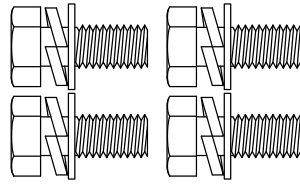


N-1 M8\*1.25\*20L 4PCS

STEP 4

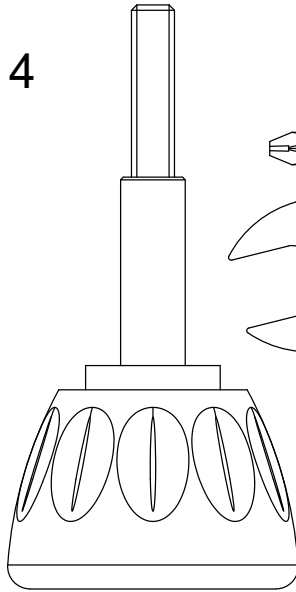

N-2 M8\*1.25\*69L 1PC

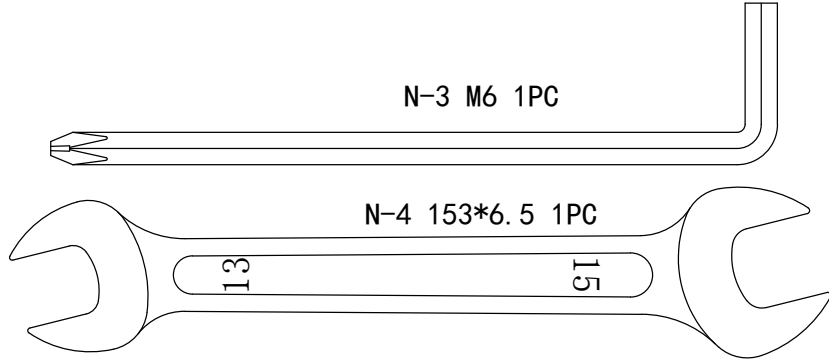

N-3 M6 1PC

N-4 153\*6.5 1PC

## 2.3 Assembly

Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.


### **NOTICE**

- + First loosely screw all parts together and check that they fit properly. Tighten the screws using the tool only when you are instructed to do so.
- + Do not tighten the screws and bolts with excessive force as they could be damaged.
- + If you have difficulty recognising the graphics, we recommend that you open and/or download the PDF instructions stored in the webshop on your end device (e.g. smartphone, tablet or PC). There you have the option of zooming in closer. Please note that the Adobe Acrobat Reader programme must be installed on your end device in order to open the file.

### Step 1: Assembly of the stabilizers

*Tool: wrench*


1. Attach the front stabilizer (F) to the main frame (Z) with two bolt sets (N-1).
2. Attach the rear stabilizer (G) to the main frame (Z) with two bolt sets (N-1).

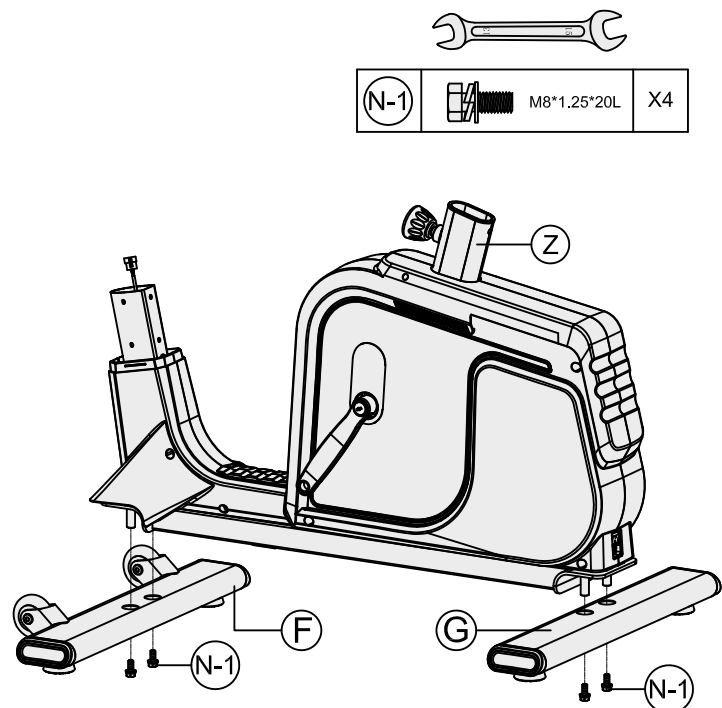

## Step 2: Assembly of the seat

Tool: wrench

1. Loosen the knob on the main frame (Z) by turning it counterclockwise and insert the seat post (E) into the holder (Fig. 2-1).
2. Adjust the seat post (E) to the desired height.
3. Tighten the knob on the main frame (Z) by turning it clockwise.
4. Place the seat (K) onto the seat post (E) (Fig. 2-2).
5. Tighten the seat fastening (Fig. 2-3).

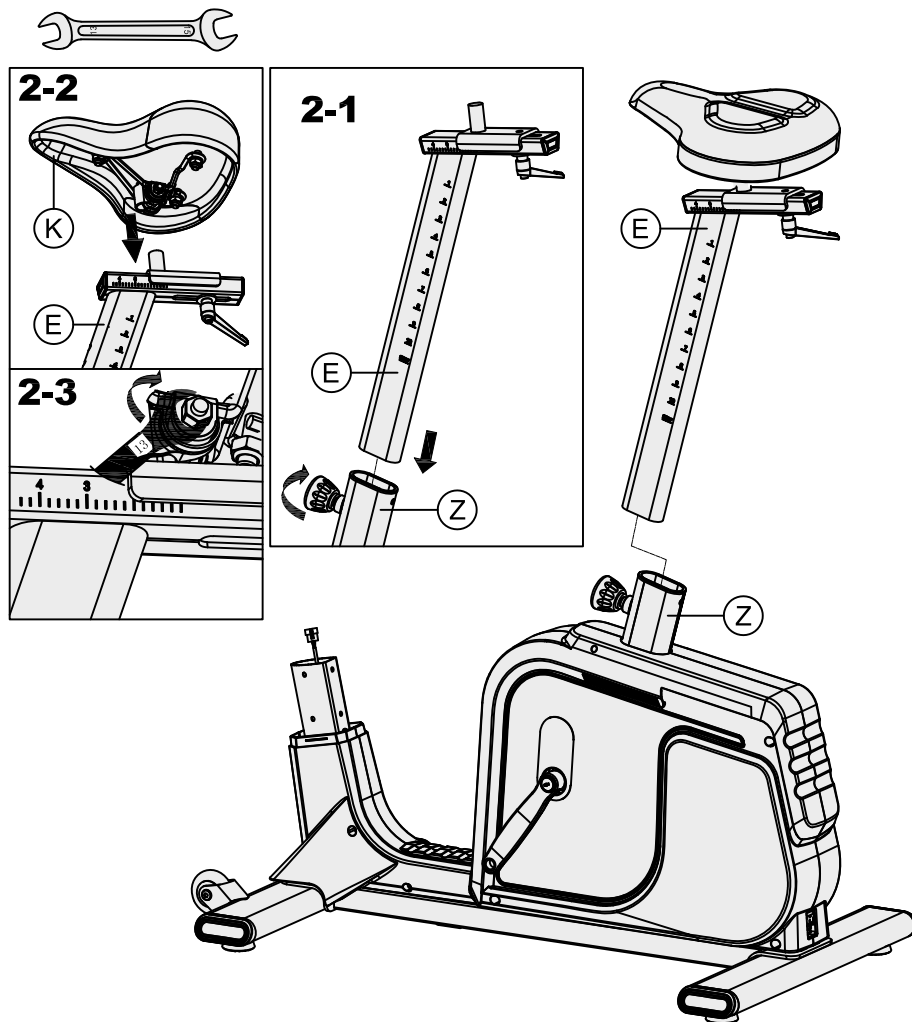


### Step 3: Assembly of the handlebar post

Tool: wrench, allen key

#### ► ATTENTION

- + Make sure not to pinch the cables in the following steps.
  - + Ensure that all connectors are firmly in place.
1. Slide the upper protective cover (S) onto the handlebar post (C) (Fig. 3-1).
  2. Connect cable C-2 and cable D-6 (Fig. 3-2).
  3. Attach the handlebar post (C) to the main frame (Z) with six bolts (N-1).
  4. Attach the bottle holder (O) to the handlebar post (C) with two screws (C-3).

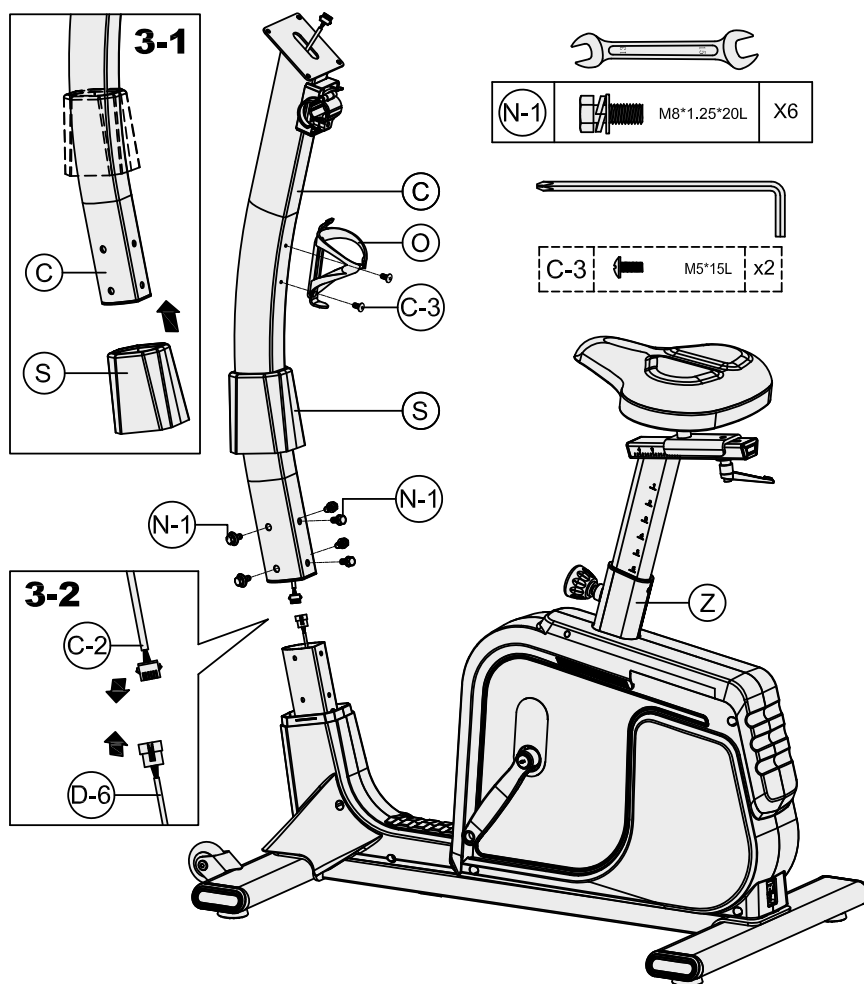


## Step 4: Assembly of the console and the handlebar

Tool: allen key

### ► ATTENTION

- + Make sure not to pinch the cables in the following steps.
  - + Ensure that all connectors are firmly in place.
1. Guide the hand pulse cables (C-2, B-4) through the opening of the handlebar post (C) (Fig. 4-1).
  2. Attach the handlebar (B) together with the knob (N-2) to the handlebar post (C) (Fig. 4-2).
  3. Place the handlebar cover (P) onto the handlebar (B) and attach the handlebar cover (P) to the handlebar post (C) (Fig. 4-3).
  4. Connect the hand pulse cables (C-2, B-4) and the handlebar post cable (C) to the corresponding connectors of the computer (A-1) (Fig. 4-4).
  5. Attach the computer (A-1) to the handlebar post (C) with four bolts (A-2) (Fig. 4-5).
  6. Insert the pad holder (R) into the computer (A-1) (Fig. 4-5).

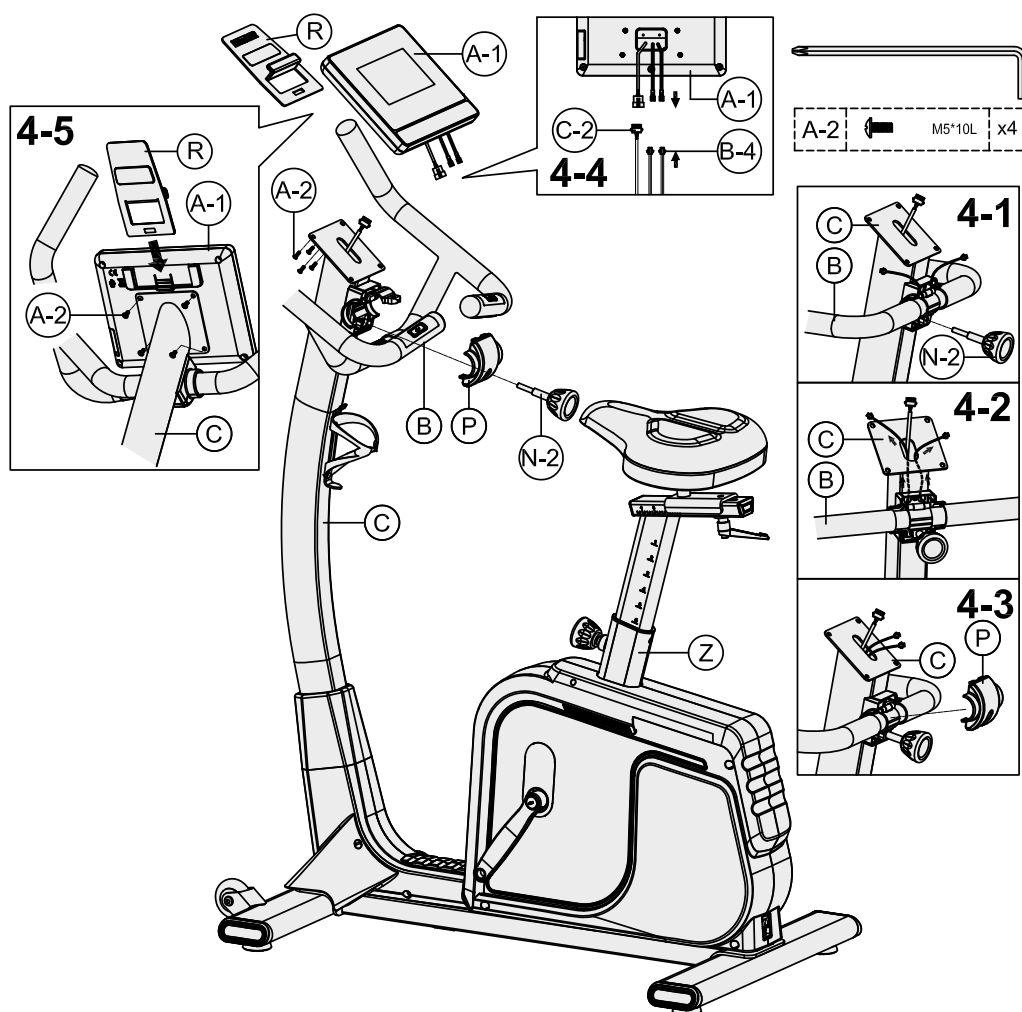


## Step 5: Assembly of the pedals

### CAUTION

Make sure to screw in the pedals completely.


1. Attach the left pedal (H-1) by turning it counterclockwise into the left crank (I-1).
2. Attach the right pedal (H-2) by turning it clockwise into the right crank (I-2).
3. Tighten all screw connections.

→ *The assembly is complete.*

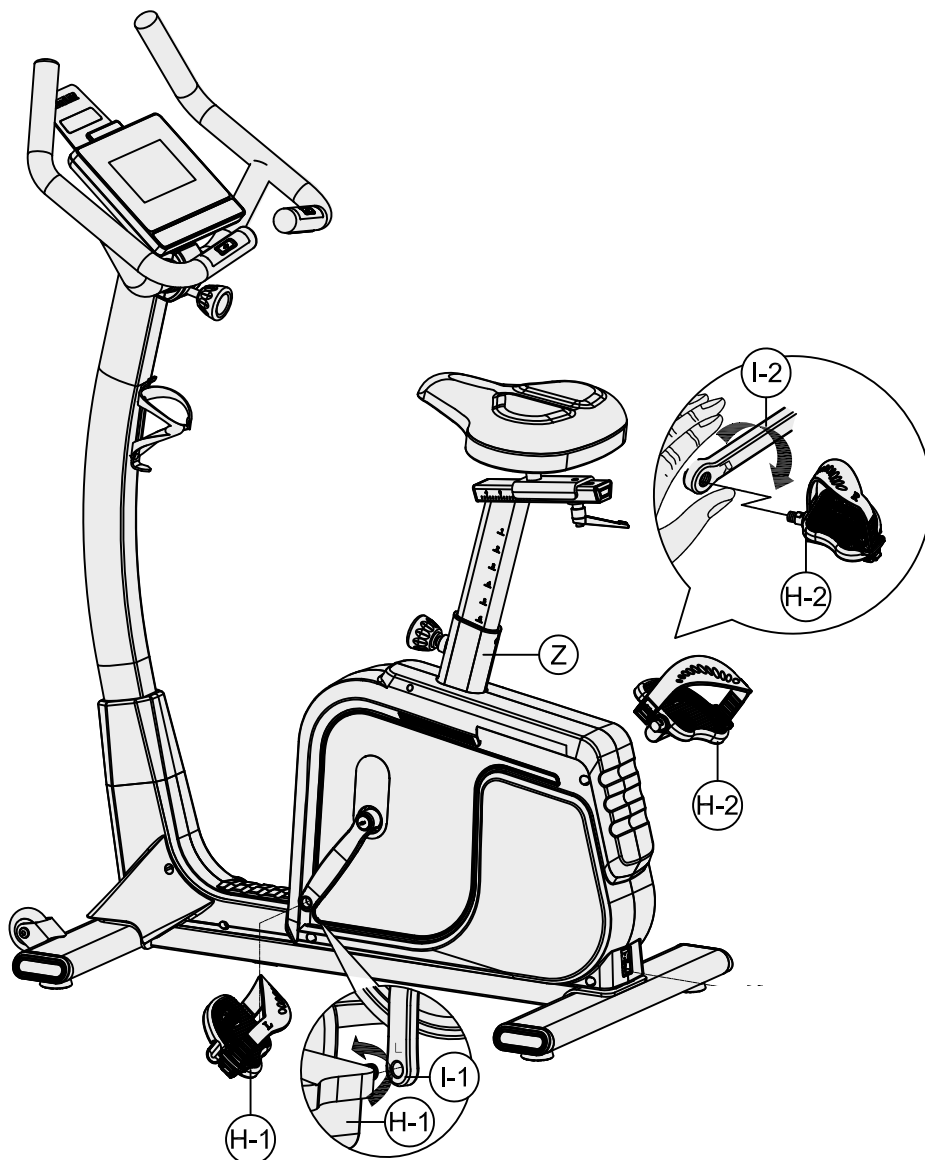

## Step 6: Adjustment of the stabilizers

1. If the floor is uneven, stabilize the device by turning the two leveling screws under the front and rear stabilizer (F, G).
2. Lift the device on the desired side and turn the leveling screw under the stabilizer.
3. Turn the screw clockwise to extend it and raise the device.
4. Turn the screw counterclockwise to lower the device.


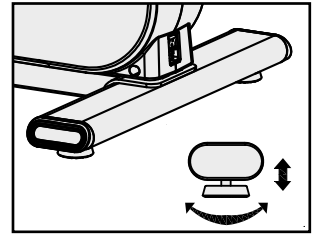


## Step 7: Connecting the device to the power supply

### ► ATTENTION

Do not connect the device to a power strip, as this may result in insufficient power supply and technical malfunctions.

1. Insert the power cable (U) into a socket that complies with the specifications in the electrical safety chapter.

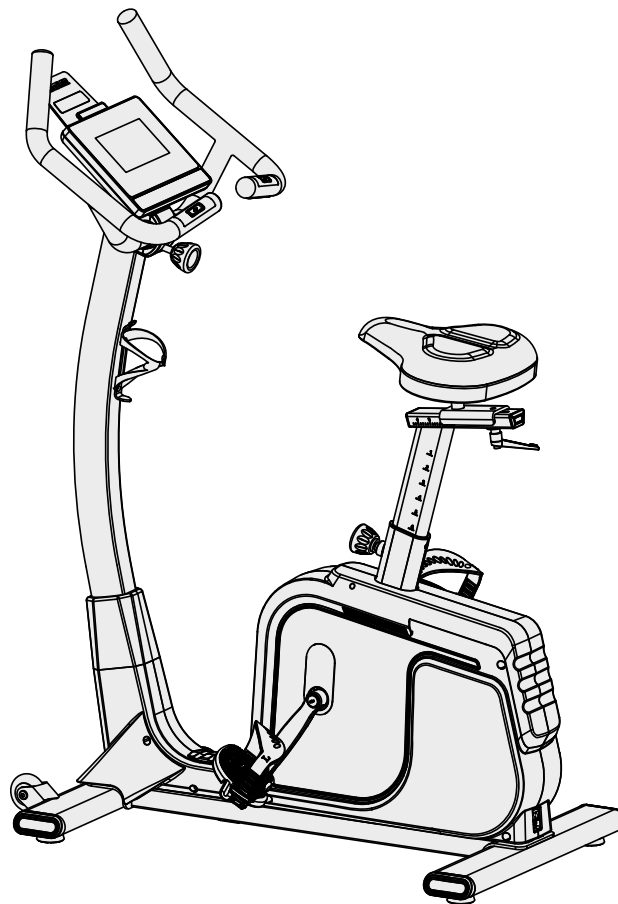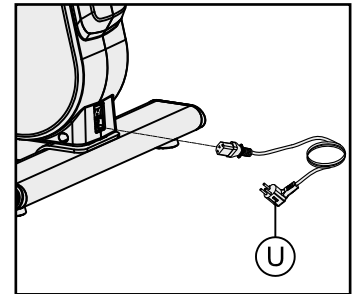

## Step 8: Adjustment of the seat position

### ⚠ CAUTION



When adjusting the seat, ensure that the minimum insertion depth is not exceeded.

1. Loosen the knob by turning it counterclockwise.
2. Adjust the seat to the desired height.

### ⚠ CAUTION


Make sure the knob audibly engages into one of the adjustment holes.

3. Tighten the knob by turning it clockwise.

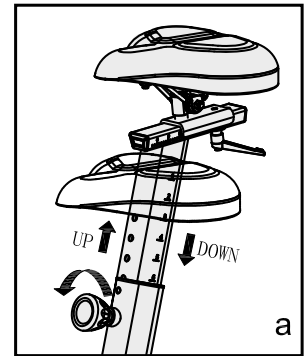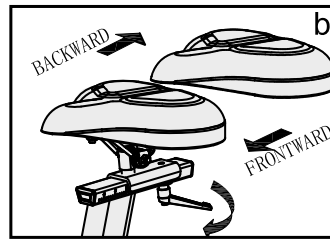

## Step 9: Adjustment of the handlebar

1. Loosen the knob on the handlebar by turning it counterclockwise.
2. Adjust the handlebar to the desired angle.
3. Tighten the knob by turning it clockwise.

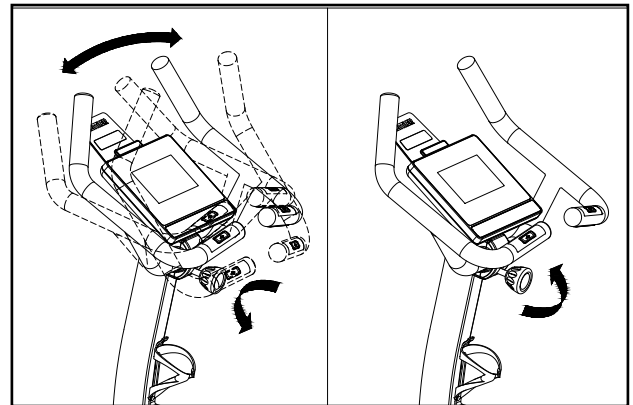


## Step 10: Adjustment of the pedal straps

### ⓘ NOTICE

The strap should rest loosely over the instep and must not press uncomfortably.

1. Place your foot in the center of the pedal.
2. Guide the flexible strap over the instep of your foot downward.
3. Pull one of the rectangular openings of the strap over the holding mechanism on the side of the pedal.

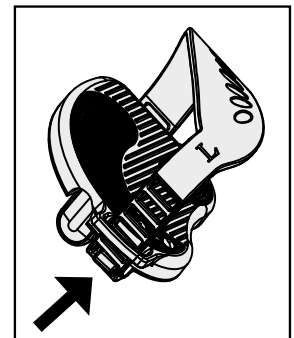

## Correct mounting and dismounting


1. To mount the device, hold both handlebar and place your left foot on the left pedal or your right foot on the right pedal first, then step on with the other foot.
2. To dismount, hold both handlebar and place one foot next to the device, then the other.

## 3 OPERATING INSTRUCTIONS

### ① NOTICE

- + Familiarise yourself with all the functions and setting options of the device before starting training. Have the proper use of this product explained to you by a specialist.
- + Always start your training with low intensity and increase evenly and gently. End your training with a cool-down phase. If you are unsure, please consult your physician.


### 3.1 Console Overview

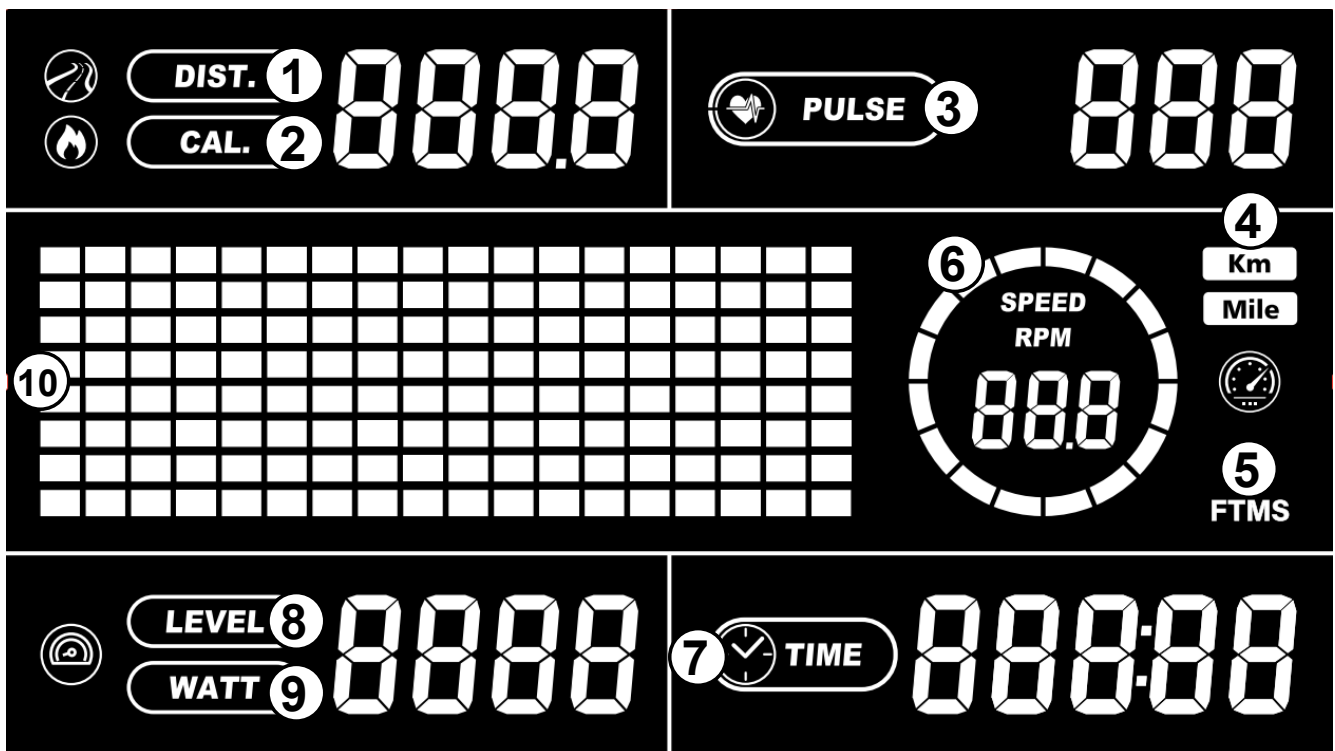





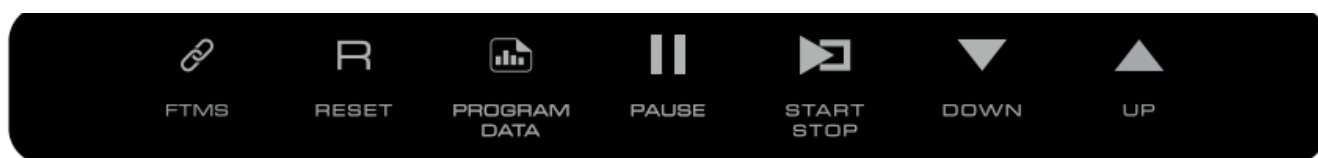


NO.	DISPLAY	NAME	FUNCTION
1	DIST.	Distance	<ul style="list-style-type: none"> <li>+ Displays the training distance.</li> <li>+ Display range: 0.0–999.9</li> <li>+ Setting range: 0.0–999.9</li> <li>+ Counts down in the target programme.</li> </ul>
2	CAL.	Calories	<ul style="list-style-type: none"> <li>+ Displays the burned calories.</li> <li>+ Display range: 0.0–9999</li> <li>+ Setting range: 10.0–9990</li> <li>+ Counts down in the target programme.</li> </ul>
3	PULSE	Pulse	Displays your pulse if the hand pulse sensors or the chest strap are in use. (Chest strap not included)
4	KM/MILE	Kilometers/Miles	Displays the measurement unit.

5	<b>FTMS</b>	<b>FTMS</b>	Displays whether a wireless connection is established.
6	<b>SPEED/ RPM</b>	<b>Speed/RPM</b>	Displays the speed in RPM and km/h. + Display range: 0.0–99.9 km/h + Display range: 0–999 RPM
7	<b>TIME</b>	<b>Time</b>	+ Displays the training time. + Display range: 0:00–999:59 + Setting range: 10:00–999:00 + Counts down in the target programme.
8	<b>LEVEL</b>	<b>Level</b>	+ Displays the resistance level. + Level: 1–32
9	<b>WATT</b>	<b>Watt</b>	Displays how many watts are being generated.
10	<b>MATRIX</b>	<b>Message window/ Performance profile</b>	Displays messages, programme parameters, and performance profiles.

## 3.2 Button Functions



DISPLAY	BUTTON	FUNCTION
 FTMS	<b>FTMS</b>	Establish an FTMS or a wireless connection with your mobile device.
 RESET	<b>RESET</b>	+ Reset the entered value. + Return to standby when you are in the training overview.
 PROGRAM DATA	<b>PROGRAM DATA</b>	+ Select a training programme. + Switch the displayed data during training.
 PAUSE	<b>PAUSE</b>	Pause the training session.
 START STOP	<b>START/STOP</b>	+ Start a training session. + Stop the active training session.

	<b>DOWN</b>	<ul style="list-style-type: none"> <li>+ Navigate down in a selection.</li> <li>+ Decrease the level during training.</li> <li>+ Decrease a value.</li> </ul>
	<b>UP</b>	<ul style="list-style-type: none"> <li>+ Navigate up in a selection.</li> <li>+ Increase the level during training.</li> <li>+ Increase a value.</li> </ul>

### 3.3 Display Modes

The following table provides an overview of the various display modes of the console.

<b>MODE</b>	<b>FUNCTION</b>
<b>STANDBY MODE</b>	<ul style="list-style-type: none"> <li>+ No training programme is in use. All values display 0.</li> <li>+ After 5 minutes of inactivity in training mode, the console enters standby mode.</li> <li>+ Choose a training programme.</li> </ul>
<b>SLEEP MODE</b>	<ul style="list-style-type: none"> <li>+ This is the sleep mode that the console enters after 5 minutes of inactivity in standby mode.</li> <li>+ The console is not lit up and no data is displayed.</li> <li>+ To exit sleep mode, press any button on the device.</li> </ul>
<b>TRAINING MODE</b>	<ul style="list-style-type: none"> <li>+ This display appears during the training session.</li> <li>+ Your training data is displayed in training mode.</li> <li>+ The displayed data switches every 5 seconds.</li> <li>+ Complete/Stop the training session to enter standby mode.</li> </ul>
<b>PAUSE MODE</b>	<ul style="list-style-type: none"> <li>+ This display appears in pause mode.</li> <li>+ To exit pause mode, continue your training.</li> </ul>
<b>TRAINING OVERVIEW</b>	<ul style="list-style-type: none"> <li>+ Displays an overview of your training data.</li> <li>+ After 5 minutes of inactivity in training mode, the console enters standby mode.</li> </ul>

### 3.4 Displayed Values

This chapter provides a description of the displayed values on the console.

VALUE	DESCRIPTION
<b>WATT</b>	+ Displays the current power output. + Displays the training intensity – regardless of the cadence or resistance combination.
<b>RPM</b>	RPM (revolutions per minute) indicates the cadence – the number of pedal revolutions completed per minute.

#### Alternating the displayed values:

**NOTICE**

The following data is displayed in training mode:

- + **DIST./LEVEL/SPEED & CAL./WATT/RPM**
- + To switch the display, press PROGRAM DATA.

### 3.5 Training Programmes

Your device offers a selection of training programmes to help you achieve your training goals. The following training programmes can be accessed:

PROGRAMME	DESCRIPTION	QUANTITY
<b>QUICK START</b>	Manual training without preset settings.	1
<b>TARGET PROGRAMMES</b>	Set a target value for your training session. The selected value starts to count down.	3
<b>HEART RATE CONTROLLED PROGRAMMES</b>	The level is set according to your target heart rate.	3
<b>PRESET PROGRAMMES</b>	Training with preset profiles. Adjust the training data in advance, if desired.	30
<b>TARGET-WATT PROGRAMME</b>	The level is set automatically based on your cadence, so a certain watt value can be reached.	1
<b>USER-DEFINED PROGRAMMES</b>	Create a personal training programme.	2

In the following subchapters you will find detailed descriptions of the training programmes.

### 3.5.1 Quick Start

To start a training session without preset settings, select quick start.

#### Starting the programme:

1. Press START/STOP in standby mode.


*Time counts up.*

2. Set your desired level with  $\wedge/v$ .

#### **i** NOTICE

Switch the displayed data with PROGRAM DATA.

3. To pause the training session, press PAUSE.

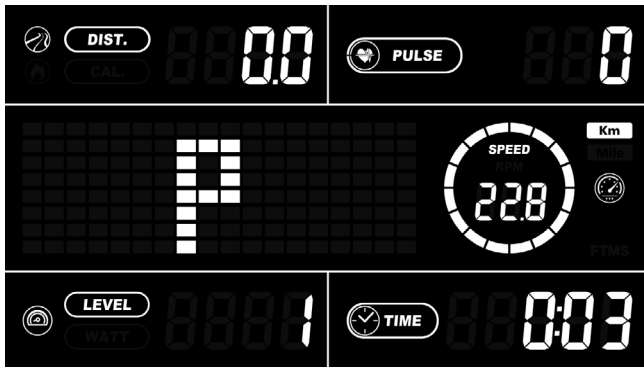

4. To continue the training session, press START/STOP.
5. To end the training session, press START/STOP in training mode.


→ *The console has entered standby mode.*

### 3.5.2 Preset Programmes

To start a training session with presets, select one of the 30 preset programmes. Without a set training time, each training segment lasts one minute. If you set the time, it is divided by 18 and displayed by the segments.

#### Starting the programme:

1. Press PROGRAM DATA in standby mode.
2. Select one of the programmes P01–P30 with  $\wedge/v$ .

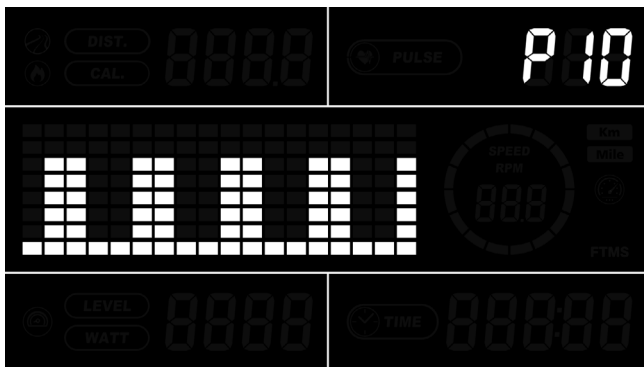

**NOTICE**

- + To exit the programme setting and return to standby mode, you can press RESET at any given moment.
  - + Skip the programme setting or values by pressing PROGRAM DATA.
  - + To start the programme immediately, press START/STOP.
3. To enter the programme settings, press PROGRAM DATA.

*AGE appears in the message window.*

4. To set your age, press ^/v.
5. To confirm your setting, press PROGRAM DATA.

*WEIGHT appears in the message window.*

6. To set your weight, press ^/v.
7. To confirm your setting, press PROGRAM DATA.

*TIME appears in the message window.*

8. To set your training time, press ^/v.




9. To confirm your setting and start the programme, press START/STOP or to edit the programme settings, press PROGRAM DATA.

*The programme starts.*

10. To pause the training session, press PAUSE.
11. To continue the training session, press START/STOP.
12. To end the training session, press START/STOP in training mode.
13. If the set time has been reached, a signal sounds.

END appears in the message window.

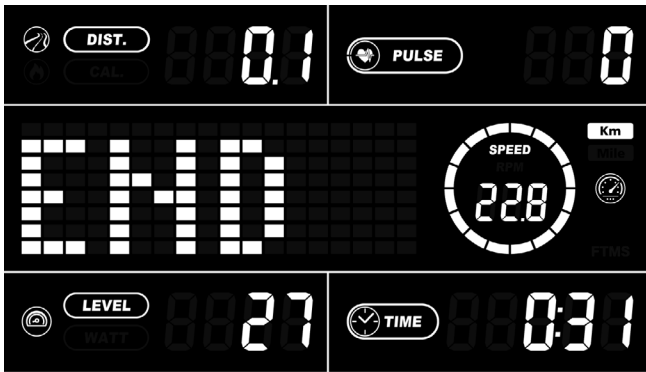

→ The training overview displays your training data.

### 3.5.3 Target Programmes

To start a training session with target values, select one of the three target programmes.

#### Starting the programme:

1. Press PROGRAM DATA in standby mode.
2. Select the programme P00 with ^/v.

#### ⓘ NOTICE

- + To exit the programme setting and return to standby mode, you can press RESET at any given moment.
  - + Skip the programme setting or values by pressing PROGRAM DATA.
  - + To start the programme immediately, press START/STOP.
3. To enter the programme settings, press PROGRAM DATA.

AGE appears in the message window.

4. To set your age, press ^/v.
5. To confirm your setting, press PROGRAM DATA.

WEIGHT appears in the message window.

6. To set your weight, press ^/v.
7. To confirm your setting, press PROGRAM DATA.

TIME appears in the message window.

8. To set your training time, press ^/v.
- 8.1. If you do not want to set a target time, set the value to 0 and press PROGRAM DATA.



*DISTANCE* appears in the message window.


9. To set your target distance, press  $\wedge/v$ .

9.1. If you do not want to set a target distance, set the value to 0 and press PROGRAM DATA.

*CALORIE* appears in the message window.

10. To set your calorie target, press  $\wedge/v$ .

10.1. If you do not want to set a calorie target, set the value to 0.

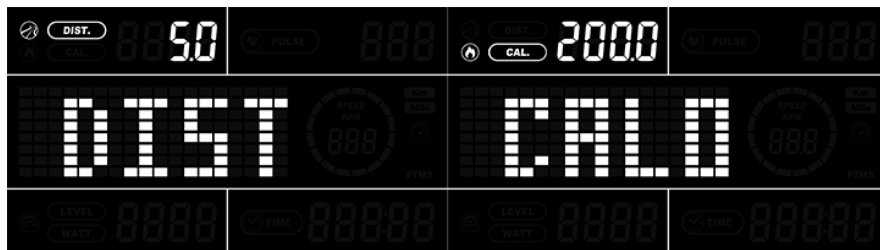

11. To confirm your setting and start the programme, press START/STOP or to edit the programme settings, press PROGRAM DATA.

*The programme starts.*

12. Set your training resistance.


13. To pause the training session, press PAUSE.

14. To continue the training session, press START/STOP.

15. To end the training session, press START/STOP in training mode.

16. If the set time has been reached, a signal sounds.

*END* appears in the message window.

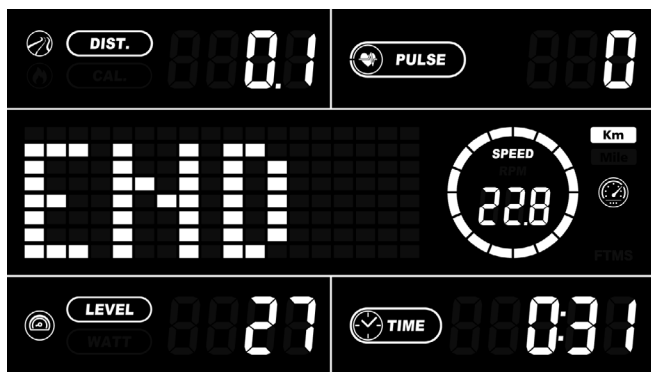

→ *The training overview displays your training data.*

### 3.5.4 Target-Watt Programme

In the target-watt programme you train with a constant power output. The device automatically adjusts the resistance to keep the set watt target as constant as possible, regardless of cadence.

#### Starting the programme:

1. Press PROGRAM DATA in standby mode.
2. Select the programme WATT with  $\wedge/\vee$ .



#### **NOTICE**

- + To exit the programme setting and return to standby mode, you can press RESET at any given moment.
  - + Skip the programme setting or values by pressing PROGRAM DATA.
  - + To start the programme immediately, press START/STOP.
3. To enter the programme settings, press PROGRAM DATA.

*MALE/FEMALE appears in the message window.*

4. To set your gender, press  $\wedge/\vee$ .
5. To confirm your setting, press PROGRAM DATA.



*AGE appears in the message window.*

6. To set your age, press  $\wedge/\vee$ .
7. To confirm your setting, press PROGRAM DATA.

*WEIGHT appears in the message window.*

8. To set your weight, press  $\wedge/\vee$ .
9. To confirm your setting, press PROGRAM DATA.

*TIME* appears in the message window.

10. To set your training time, press ^/v.

10.1. If you do not want to set a target time, set the value to 0 and press PROGRAM DATA.



*TARGET WATT* appears in the message window.

11. To set your target watt, press ^/v.

12. To confirm your setting and start the programme, press START/STOP or to edit the programme settings, press PROGRAM DATA.

*The programme starts.*

**NOTICE**

The device automatically adjusts the resistance to achieve the set target watt and maintain it as consistently as possible.


13. To pause the training session, press PAUSE.

14. To continue the training session, press START/STOP.

15. To end the training session, press START/STOP in training mode.

16. If the set time is reached, a signal sounds.

*END* appears in the message window.

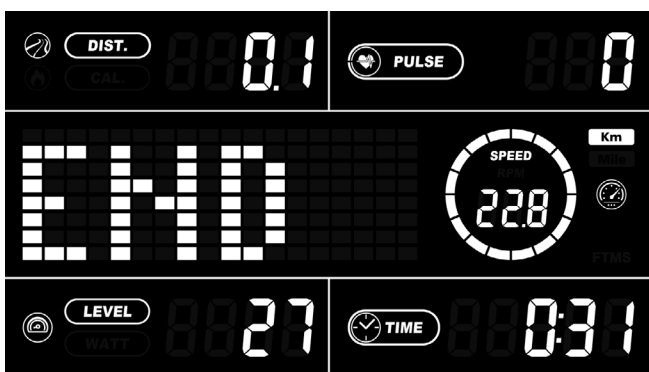

→ *The training overview displays your training data.*

### 3.5.5 Heart Rate Controlled Programmes

#### **WARNING**


Your training equipment is not a medical device. The heart rate measurement of this equipment may be inaccurate. Various factors can affect the accuracy of the heart rate measurement. The heart rate measurement serves only as a training aid.

With the heart rate programmes, you train based on your heart rate. The level is automatically adjusted to maintain the target heart rate. You can choose between three programmes:

- + HRC1: 60 % of the target pulse
- + HRC2: 75 % of the target pulse
- + HRC3: 85 % of the target pulse

#### **Starting the programme:**

1. Press PROGRAM DATA in standby mode.
2. To select between the programmes H01-H03, press ^/v.

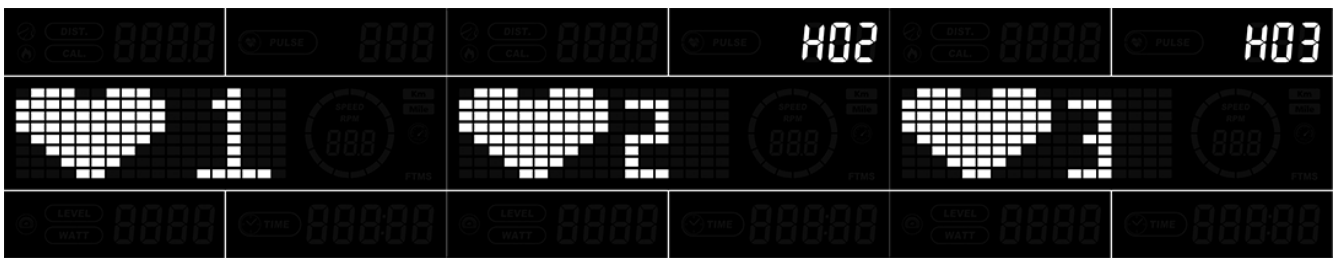

#### **NOTICE**

- + To exit the programme setting and return to standby mode, you can press RESET at any given moment.
  - + Skip the programme setting or values by pressing PROGRAM DATA.
  - + To start the programme immediately, press START/STOP.
3. To enter the programme settings, press PROGRAM DATA.

*AGE appears in the message window.*

4. To set your age, press ^/v.
5. To confirm your setting, press PROGRAM DATA.

*WEIGHT appears in the message window.*


6. To set your weight, press ^/v.
7. To confirm your setting, press PROGRAM DATA.

*TIME appears in the message window.*

8. To set your training time, press ^/v.
- 8.1. If you do not want to set a target time, set the value to 0 and press PROGRAM DATA.



*THR appears in the message window.*

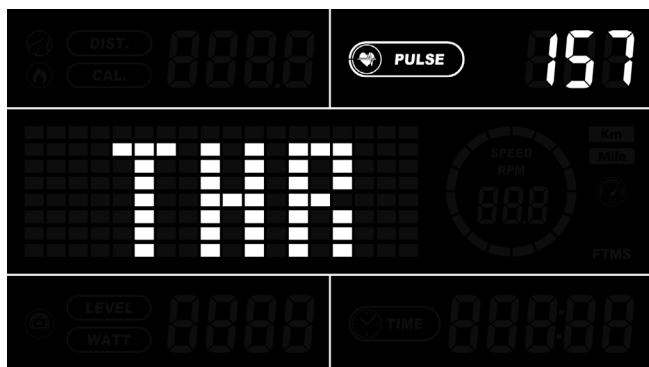

9. To set your target heart rate, press  $\wedge/v$ .
10. To start the programme, press START/STOP or press PROGRAM DATA to set the settings again.

*The training session starts with the lowest resistance.*

*The resistance is automatically adjusted throughout the training session to ensure that the set target heart rate is maintained.*


11. To adjust the target heart rate during the training session, press  $\wedge/v$ .

**① NOTICE**

The heart rate controlled programme can be started without a heart rate signal. If no heart rate signal is detected within a short time, the device automatically ends the training session.

12. To pause the training session, press PAUSE.
13. To continue the training session, press START/STOP.
14. To end the training session, press START/STOP in training mode.
15. If the set time has been reached, a signal sounds.

*END appears in the message window.*

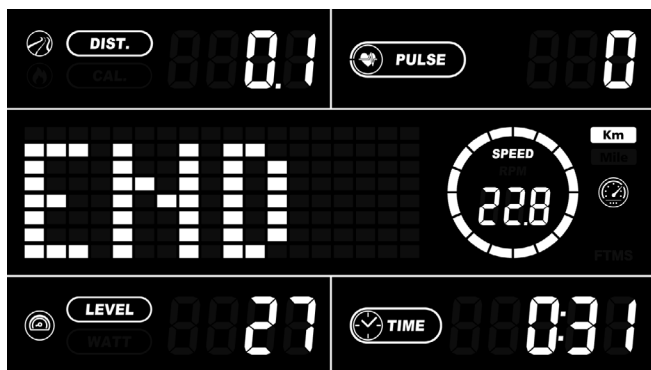

→ The training overview displays your training data.

### 3.5.6 User-Defined Programmes

The user-programmes allow you to create and save individual training profiles. The device offers two user-programmes.

#### Starting the programme:

1. Press PROGRAM DATA in standby mode.
2. To select between the programmes U01-U02, press ^/v.

#### **i** NOTICE

- + To exit the programme setting and return to standby mode, you can press RESET at any given moment.
  - + Skip the programme setting or values by pressing PROGRAM DATA.
  - + To start the programme immediately, press START/STOP.
3. To enter the programme settings, press PROGRAM DATA.

*AGE appears in the message window.*

4. To set your age, press ^/v.
5. To confirm your setting, press PROGRAM DATA.

*WEIGHT appears in the message window.*

6. To set your weight, press ^/v.
7. To confirm your setting, press PROGRAM DATA.

*TIME appears in the message window.*

8. To set your training time, press ^/v.
- 8.1. If you do not want to set a target time, set the value to 0 and press PROGRAM DATA.




*LEVEL* appears in the message window.

9. Set the resistance for each segment with  $\wedge/v$ .
10. Confirm the segment with PROGRAM DATA.
11. To confirm your setting and start the programme, press START/STOP or to edit the programme settings, press PROGRAM DATA.

**NOTICE**

- + The set resistance profile is saved and remains stored until it is changed again.
  - + The training session consists of multiple consecutive segments using the resistance levels you set.
12. To adjust the resistance during the training session, press  $\wedge/v$ .
  13. To pause the training session, press PAUSE.
  14. To continue the training session, press START/STOP.
  15. To end the training session, press START/STOP in training mode.

*END* appears in the message window.

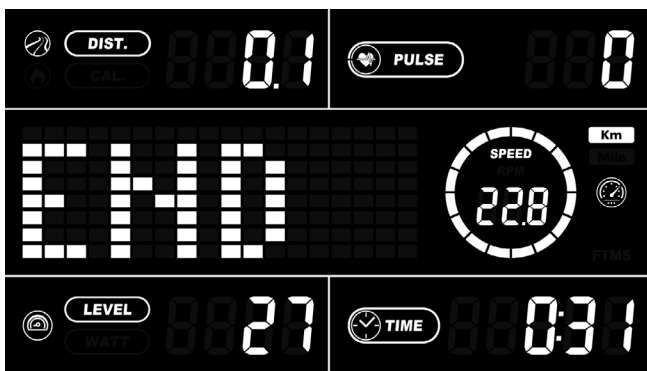

→ The training overview displays your training data.

### 3.6 Training Overview

The following data is displayed in the training overview:

**NOTICE**

- + The training overview is displayed only after a programme has reached a target value or the set time. If a programme is stopped prior to reaching one of the values, you will be redirected to standby mode.
- + To exit the training overview, press RESET.

DISPLAY	DESCRIPTION	FUNCTION
DIST.	Distance	Displays the training distance.
PULSE	Pulse	Displays the average pulse.
SPEED	Speed	Displays the average speed.

<b>WATT</b>	<b>Watt</b>	Displays your generated watt input.
<b>TIME</b>	<b>Time</b>	Displays the trained time.
<b>LEVEL</b>	<b>Level</b>	Displays the average resistance level.
<b>CAL.</b>	<b>Calories</b>	Displays the burned calories.

### 3.7 USB-C Connection

**① NOTICE**

- + You can plug your mobile device into the console to charge it.
- + You need a USB-C cable. (Not included)

### 3.8 Watt Table

This table provides an overview of the generated watt values in relation to the resistance and cadence.

RESISTANCE/RPM	20	30	40	50	60	70	80	90	100	110	120
Level 1	5	8	12	15	20	23	27	30	35	38	43
Level 2	7	12	17	22	29	33	39	44	50	55	61
Level 3	9	16	23	29	38	44	51	57	65	71	79
Level 4	11	20	29	37	47	54	63	71	80	88	97
Level 5	13	23	34	44	56	65	75	85	95	105	115
Level 6	16	27	40	51	65	75	87	99	110	121	133
Level 7	18	31	46	59	74	86	99	112	125	138	152
Level 8	20	35	51	66	83	97	112	126	140	155	170
Level 9	22	39	57	73	92	107	124	140	155	171	188
Level 10	24	43	63	81	101	118	136	153	170	188	206
Level 11	26	47	69	88	110	128	148	167	186	205	224
Level 12	29	51	74	95	119	139	160	181	201	221	242
Level 13	31	55	80	103	128	149	172	194	216	238	261
Level 14	33	59	86	110	137	160	184	208	231	255	279
Level 15	35	62	91	117	146	170	196	222	246	271	297
Level 16	37	66	97	125	155	181	208	235	261	288	315
Level 17	39	70	103	132	164	191	220	249	276	305	333
Level 18	42	74	109	139	173	202	233	263	291	321	351
Level 19	44	78	114	147	182	213	245	276	306	338	369
Level 20	46	82	120	154	191	223	257	290	321	355	388
Level 21	48	86	126	161	200	234	269	304	337	371	406
Level 22	50	90	131	169	209	244	281	317	352	388	424
Level 23	52	94	137	176	218	255	293	331	367	405	442
Level 24	55	98	143	183	227	265	305	345	382	421	460
Level 25	57	101	149	191	236	276	317	358	397	438	478
Level 26	59	105	154	198	245	286	329	372	412	455	496
Level 27	61	109	160	206	254	297	341	386	427	471	515
Level 28	63	113	166	213	263	307	354	399	442	488	533
Level 29	65	117	171	220	272	318	366	413	457	505	551
Level 30	68	121	177	228	281	329	378	427	472	521	569
Level 31	70	125	183	235	290	339	390	440	488	538	587
Level 32	72	129	188	242	300	350	402	454	503	555	605

## 4.1 General Instructions

When training, it is important to perform the exercises correctly in order to avoid injuries and achieve the desired training effect. Make sure you use the correct technique and train at an appropriate intensity level. Always consult an expert such as a trainer or doctor if you are unsure or have health problems. Always start your training with a low load and increase it evenly and gently.

End your training with a cool-down phase. If you have any questions or uncertainties, contact your doctor.

### 4.1.1 Training clothes

During training, wear appropriate sports clothing that is comfortable and breathable. Avoid clothing that restricts you or is uncomfortable. Make sure that your shoes are suitable and offer you sufficient support. In addition, always carry a towel with you to wipe away sweat and keep the equipment clean.

### 4.1.2 Warming up and stretching

It is important to warm up and stretch properly before training to avoid injury and improve performance. Stretching helps to loosen muscles and improve flexibility. Be sure to incorporate a short stretching routine before each workout.

#### Warm-up exercise:

1. Stand upright with your feet about shoulder-width apart.
2. Start with gentle arm circles by slowly moving your arms forwards in small circles in a controlled manner.
3. Perform arm circles backwards to loosen your shoulders and arms.
4. Do squats by slowly squatting down and then straightening up again. Make sure that your knees do not extend beyond your toes.



#### CAUTION

Do not exercise with sore muscles or take it easy on the affected muscles, as this can lead to injuries.



### 4.1.3 Medication

If you regularly take medication and want to exercise, it is important to be aware of possible side effects. Ask your doctor whether your medication affects your workout.

### 4.1.4 Used muscle groups

This training uses the following muscle groups:

- + Gluteal muscle
- + Leg muscles

Make sure you keep your back straight during training. Do not hunch over and do not arch your back.

### 4.1.5 Exercise frequency

Regular exercise is crucial to making progress and staying healthy in the long term. Continuous exercise can strengthen muscles, improve endurance and enhance overall well-being. Remember that even small workouts can be done regularly to achieve long-term results.

#### **Training with heart rate orientation**

Heart rate orientation guarantees an extremely effective and healthy training. Through your age and the following table, you can quickly and easily read and determine the optimal pulse for your training. An acoustic alarm will sound if your heart rate exceeds the set target heart rate. Which target heart rate is important for which training goal can be found out in the following.

**Fat burning (weight management):** The main goal here is to burn deposits of fat. In order to achieve this training goal, a low training intensity (approximately 55% of the maximum heart rate) and a longer training period are required.


**Cardiovascular training (cardio training):** The primary goal is to increase stamina and fitness through an improved provision of oxygen through the cardiovascular system. In order to achieve this training goal, medium intensity (approximately 75% of the maximum heart rate) with a medium training period is required.

**Anaerobic (maximum) load training:** The main goal of maximum load training is to improve recovery after short, intense loads in order to be able to quickly return to the aerobic zone. In order to achieve this training goal, a high intensity (approximately 90% of the maximum heart rate) with short, intense load is required, which is followed by a recovery phase in order to prevent muscle fatigue.

**Example:**

For a 45-year-old man, the maximum heart rate is 175 ( $220 - 45 = 175$ ).

- + The fat burning target zone (55%) is at approximately 96 beats/min. =  $(220 - \text{age}) \times 0.55$ .
- + The cardio target zone (75%) is at approximately 131 beats/min. =  $(220 - \text{age}) \times 0.75$ .
- + The maximum heart rate for an anaerobic load training (90%) is at approximately 157 beats/min. =  $(220 - \text{age}) \times 0.9$ .

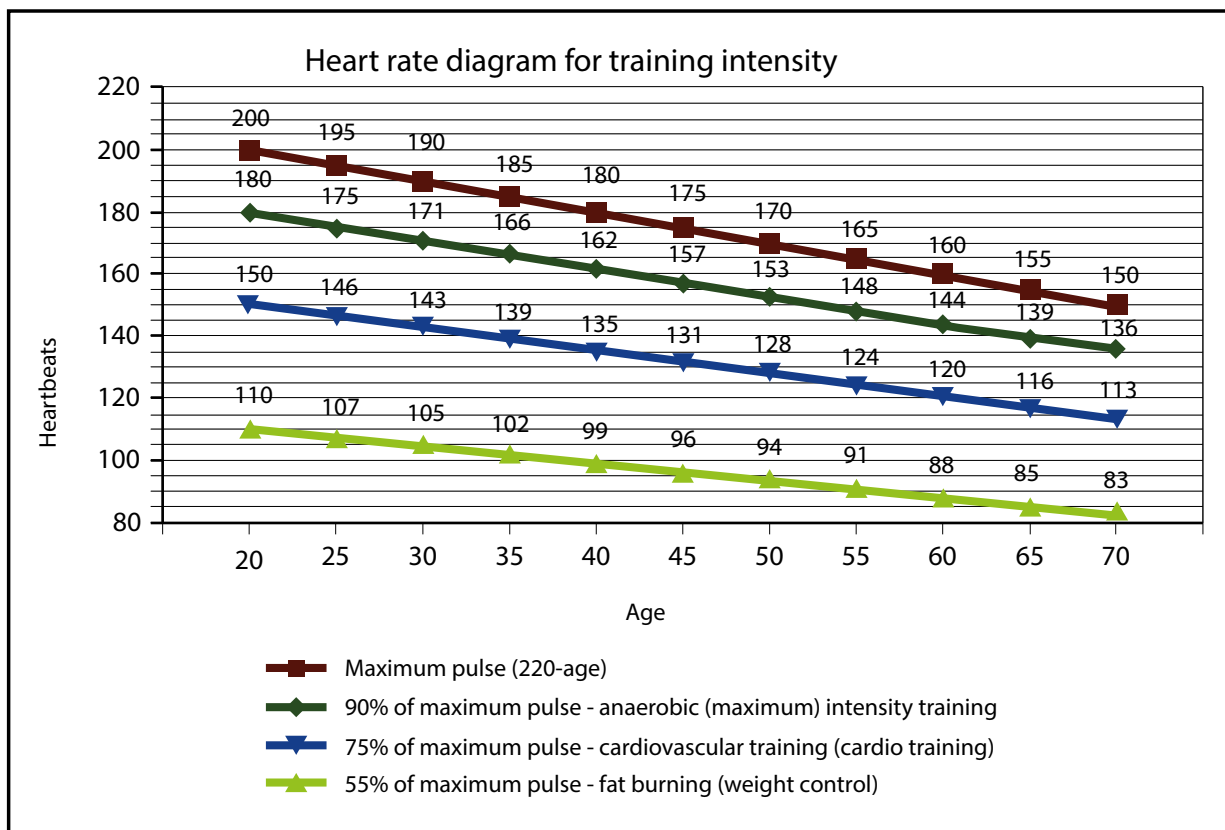



### 4.3 Wireless Connection and Fitness Apps




This console is equipped with a wireless interface. Please take note that your mobile device needs to be compatible with the wireless interface of the treadmill.

To use training apps you will have to activate the wireless connection function on your mobile device (tablet or smart phone) and start the fitness app. Select your fitness equipment. Please follow the instructions given in the app. You will find the name of your fitness equipment on a small sticker on the back of the console.

You will find the fitness apps in the app stores of Google or Apple. There you will find the apps "Kinomap" or "Zwift". Please note that these apps are produced by an external manufacturer. Fitshop does not take any responsibility regarding the availability, functionality or contents of these programmes.

#### ⓘ IMPORTANT NOTE

Some entertainment apps are provided and maintained by third-party providers. Pre-installed apps may change, be updated, or be removed over time. These changes are normal and do not affect your statutory warranty rights. To make sure the pre-installed apps are working correctly, they must be updated regularly. If needed, the respective app will notify you to do so. To update the app, you need a google account. A google email is sufficient. Just follow the instructions on the screen to perform the update. Please note: The system is set up only for the pre-installed apps. Do not install any additional apps as their proper functionality can not be guaranteed. The installation of other apps might cause technical issues.

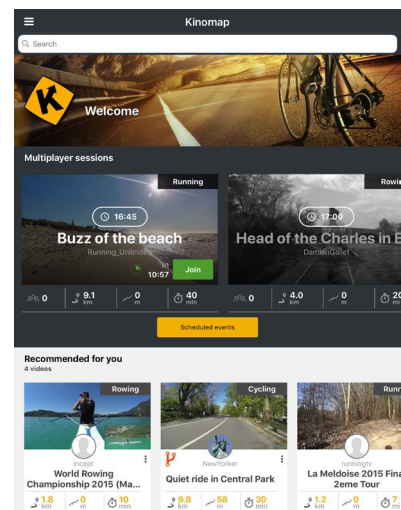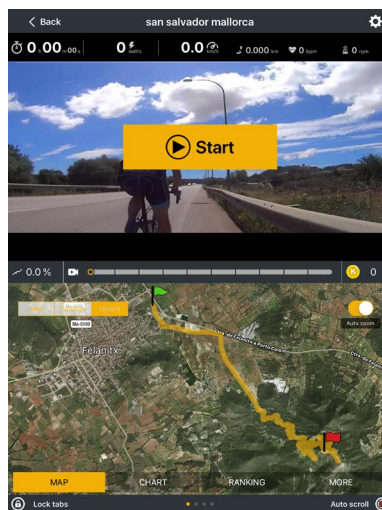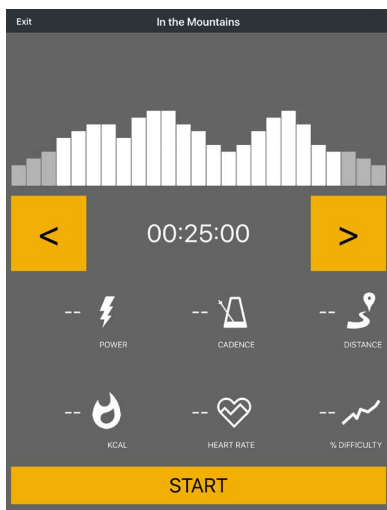

Example: Kinomap

### 5.1 General Instructions

**⚠ WARNING**

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.

**▶ ATTENTION**


- + Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.

### 5.2 Transportation Wheels

**▶ ATTENTION**

If you want to transport your equipment over particularly sensitive and soft floor coverings, such as parquet, planks or laminate, lay out the transport route with cardboard or similar to avoid possible floor damage.

1. Stand behind the equipment and lift it until the weight is transferred to the transportation wheels. After that, you easily can move the equipment to a new position. For long transport distances the equipment should be disassembled and safely packed.
2. Select the new location by following the instructions in the section 1.5 of this manual.

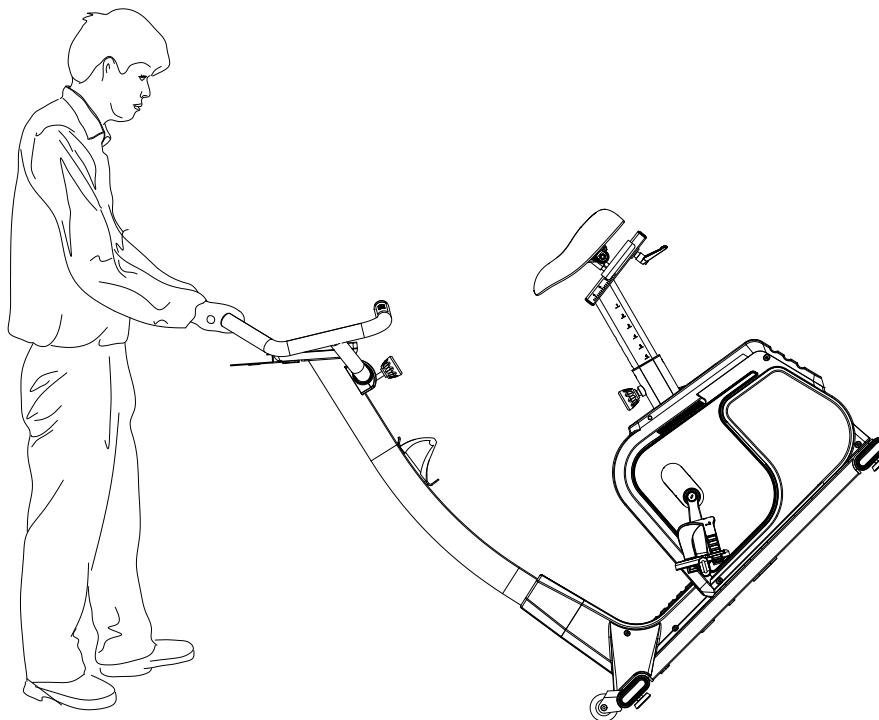

## 6.1 General Instructions



### WARNING

- + Do not make any improper changes to the equipment.



### CAUTION

- + Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

### ▶ ATTENTION

- + In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

## 6.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

Fault	Cause	Solution
Cracking in the pedal area	Pedals loose	Tighten the pedals
Equipment wobbles	Equipment is not level	Align the feet
Handlebar/saddle wobbles	Loose screws	Tighten screws firmly
Display is blank/is not working	Batteries empty or loose cable connection	Replace batteries or check cable connections
No pulse display	<ul style="list-style-type: none"> <li>+ Sources of interference in the room</li> <li>+ unsuitable chest strap</li> <li>+ Wrong position of chest strap</li> <li>+ Chest strap defective or battery empty</li> <li>+ Pulse display defective</li> </ul>	<ul style="list-style-type: none"> <li>+ Eliminate sources of interference (e.g. mobile phone, WLAN, lawn mower and vacuum cleaner robot, etc. ...)</li> <li>+ Use a suitable chest strap (see RECOMMENDED ACCESSORIES)</li> <li>+ Reposition chest strap and/or moisten electrodes</li> <li>+ Changing batteries</li> <li>+ Check if pulse display by hand pulse possible</li> </ul>

## 6.3 Error Codes and Troubleshooting

The electronics of the equipment continuously carries out tests. In case of deviations, an error code appears on the display and normal operation is stopped for your safety.

**Please contact the contract partner for technical support.**

## 6.4 Maintenance and Inspection Calendar

To avoid damage from body sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly
Display console	C	I
Plastic covers	C	I
Screws and cable connections		I
Check pedals for tightness		I
Legend: C = clean; I = inspect		

By scanning the QR-code with the camera function or QR-code scanner app of your smartphone/tablet, a video on general maintenance of an exercise bike opens on YouTube. The video serves to illustrate the maintenance points described in this manual.

Please note that the video may not be available in your language or with appropriate subtitles.

If you cannot scan QR-codes, you can access all Fitshop videos on YouTube by first opening YouTube and entering "Fitshop" in the search field.



## 7 DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an electricals recycling centre. Further information can be obtained from your local authority's recycling service.



The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

## 8 RECOMMENDED ACCESSORIES

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. For elliptical cross trainers this could for example be a **floor mat**, which makes your fitness equipment stand more securely and also protects the floor from sweat or **silicone spray** to keep moving parts in good shape.

If you have purchased a fitness machine with pulse training and want to train your heart rate, we strongly recommend that you use a compatible **chest strap**, as this ensures optimum transmission of the heart rate.

Our range of accessories offers the highest quality and makes training even better. If you would like to find out more about compatible accessories, please go to the detail page of the product in our webshop (the easiest way is to enter the article number in the search field above) and go to the recommended accessories on this page. Of course, you can also contact our customer service: by telephone, e-mail, in one of our branches or via our social media channels. We will be happy to advise you!



saddle cover



chest strap



chest strap contact gel



floor mat



saddle




silicone spray

## 9.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 11 of this operating manual.

**NOTICE**

The serial number of your equipment is unique. It's located on a white sticker. The exact position of this sticker is shown in the following illustration.

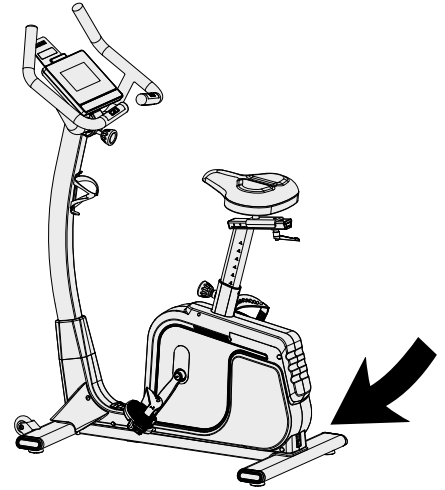

Enter the serial number in the appropriate field.

**Serial number:**

**Brand / Category:**

**Model Name:**

**Article Number:**

## 9.2 Parts List

No.	Name	Supplier Parts No.	Qty.
A			1
A-1	Computer	755S1-6-2501-B0	1
A-2	Bolt M5x0.8x10L	52605-2-0010-F0	4
B	Handlebar complete assembly		1
B-1	Handlebar welding set	755S1-3-2400-B1	1
B-2	Screw ST3.5x1.41x15L	50935-2-0015-F0	2
B-3	Lower fixing plate for handle pulse	737L6-6-2492-B0	2
B-4	Hand pulse cable 700L	755S1-6-2479-00	2
B-5	Handle pulse	737L6-6-2478-00	4
B-6	Upper fixing plate for handle pulse	737L6-6-2491-B0	2
B-7	Dip foam	58015-6-1456-B0	1
C	Handlebar post complete assembly		1
C-1	Handlebar post welding set	755S1-3-2000-J3	1
C-2	Upper computer cable 1000L	755S0-6-2572-02	1
C-3	Screw M5*0.8*15L	52605-2-0015-F0	2
C-4	Handlebar cover plate	755S1-6-3780-B0	1
C-5	Screw ST4.2*15L	52842-2-0015-F0	3
C-6	Innner sleeve 80*55*147	848S0-6-1071-B1	1
D	Main frame set		1
D-1	Main frame	755S1-3-1000-J3	1
D-2	Bearing 6203-2RS	58006-6-1026-01	2
D-3	Knob D54*M16*1.5*26*D8	75402-6-1072-B0	1
D-4	Right inner sleeve	75402-6-1071-B0	1
D-5	left inner sleeve	75402-6-1093-B0	1
D-6	Lower computer cable 1450L	755S0-6-2573-01	1
D-7	Live wire 700L	755S0-6-3480-01	1
D-8	Neutral wire 700L	755S0-6-3479-01	1
D-9	Flexible conduit	755RS-6-3483-00	1
D-10	Sensor cable 450L	815G0-6-2576-00	1
D-11	Screw ST4*1.41*13L,D10	54704-2-0013-F0	2
D-12	Screw M6*1*12L	54806-2-0012-N0	3


D-13	Control board	734S5-6-2597-00	1
D-14	Fixing plate for control board	755S0-6-1085-N0	1
D-15	Screw M5*0.8*10L	54805-2-0010-N0	2
D-16	Switching mode power supplier	755S0-6-2559-00	1
D-17	Screw M3*0.5*10L	53203-2-0010-N0	2
D-18	Grounding wire 100L*4.8	755S0-6-3486-00	1
D-19	Grounding wire 2 100L	26100-6-1788-00	1
D-20	Chain cover fixing tube	755S1-6-1043-J0	1
D-21	Fixing plate	815G0-6-1673-N0	1
D-22	Magnetic ring (small)	755S0-6-2977-00	1
D-23	Filter	755S0-6-3289-00	1
D-24	Bushing	755S0-6-2288-00	2
D-25	Live wire 450L	261A2-6-1789-00	1
D-26	Neutral wire 450L	261A2-6-1791-00	1
D-27	Magnetic ring (Square)	755S0-6-2978-00	1
D-28	Flexible conduit	85402-6-3483-01	1
D-29	Screw ST3*20L	50903-2-0020-D0	2
D-30	Magnetic ring (big)	755S0-6-2979-00	1
C-5	Screw ST4.2*15L	52842-2-0015-F0	4
E	Seat post assembly set		1
E-1	Seat post	755S0-3-2200-J2	1
E-2	End cap	85702-6-2087-B0	2
E-3	Seat adjustment tube	85702-3-4000-J0	1
E-4	Knob M10*35L	52710-1-0035-N0	1
E-5	Flat washer D31.8*D10.5*3T	55110-1-3135-FA	1
E-6	Nylon nut M10*1.5*10T	55210-1-2010-NA	1
F	Front stabilizer assembly set		1
F-1	Front stabilizer	755S0-3-2100-J0	1
F-2	Oval cap	755S0-6-2173-B0	2
F-3	Adjustable wheel	76100-6-2174-B0	2
F-4	Round wheel	846C2-6-2175-00	2
F-5	Bolt M8*1.25*40L	50308-5-0040-F3	2
F-6	Nylon nut M8*1.25*8T	55208-1-2008-FA	2
G	Rear stabilizer assembly set		1

G-1	Rear stabilizer	755S0-3-2112-J0	1
F-2	Oval cap	755S0-6-2173-B0	2
F-3	Adjustable wheel	76100-6-2174-B0	2
H	Pedal set	58029-6-1170-B0	1
H-1	Left Pedal	58029-6-1170-B0-L	1
H-2	Right Pedal	58029-6-1170-B0-R	1
H-3	Left Pedal Strap	58029-6-1170-00-L	1
H-4	Right Pedal Strap	58029-6-1170-00-R	1
I	Crank set		1
I-1	Left crank	58007-6-1082-D0	1
I-2	Right crank	58007-6-1081-D0	1
I-3	Anti-loosen nut M10*1.25*10T	70501-6-2775-N0	2
I-4	Screw cover	81502-6-2779-B0	2
J	Chain cover set		1
J-1	Left chain cover	755S0-6-4501-B0	1
J-2	Right chain cover	755S0-6-4502-B0	1
J-3	Front left decorative cover	755S1-6-4514-B0	1
J-4	Front right decorative cover	755S1-6-4515-B0	1
J-5	Crank hole cover(left)	755S0-6-4544-B0	1
J-6	Crank hole cover(right)	755S0-6-4545-B0	1
J-7	Gasket	755S0-6-4510-B0	1
J-8	Pin	71600-6-4586-60	14
C-5	Screw ST4.2*15L	52842-2-0015-F0	11
K	Seat	58001-6-1352-B0	1
L	Idle wheel fixing plate set		1
L-1	Fixing plate of idle wheel	742G0-6-1601-N1	1
L-2	Idle wheel axle	731S1-6-1602-01	1
L-3	Bearing #99502	58006-6-1016-00	2
L-4	Flat washer D24*D16*1.5T	55116-1-2415-NA	1
L-5	Bolt M8*1.25*16L	51608-5-0016-F0	1
L-6	Bolt M8*1.25*30L	50308-5-0030-C0	1
L-7	Plastic washer D50*D10*1.0T	55110-1-5010-BF	1
L-8	Plastic washer D10*D24*0.4T	55110-1-2404-BF	1
L-9	Flat washer D28*D8.5*3T	55108-1-2830-NA	1

L-10	Nut M8*1.25*6T	55208-2-2006-NA	1
L-11	Spring D2.2*D14*65L	58003-6-1024-N1	1
F-6	Nylon nut M8*1.25*8T	55208-1-2008-FA	1
M	Belt wheel set		1
M-1	Crank axle welding set	75402-3-2903-00	1
M-2	Belt wheel	58008-6-1040-D1	1
M-3	Spacer D22.5*D17.2*6.4T	80700-6-2781-00	1
M-4	Waved washer D22xD17x0.3T	55117-5-2203-DA	2
M-5	Flat washer D23*D17.2*1.5T	55117-1-2315-NA	1
M-6	C ring S-17(1T)	55517-1-0010-00	1
M-7	Belt 430(1092) PJ6	58004-6-1066-00	1
M-8	Bolt M6*1.0*15L	50206-5-0015-C0	4
M-9	Nylon nut M6x1.0x6T	55206-1-2006-CA	4
M-10	Magnet	742G0-6-2574-00	1
N	Assembly kit	755S0-3-5100-00	1
N-1	Bolt M8x1.25x20L	75402-6-3191-F0	10
N-2	Knob	75402-6-2488-B0	1
N-3	Hex wrench M6	58030-6-1031-N1	1
N-4	Open wrench 153*6.5T	58030-6-1050-C0	1
O	Bottle holder	848B2-6-2074-00	1
P	Handlebar cover	75402-6-3781-B0	1
Q	Flywheel set		1
Q-1	EMS magnet system	815S5-2-3100-02	1
Q-2	Screw M6*1.0P*16L	815S1-6-3191-F0	4
Q-3	System connecting cable 500L	738G0-6-3177-00	1
D-30	Magnetic ring (big)	755S0-6-2979-00	1
R	Pad holder Set		1
R-1	Pad holder	75402-6-2466-J0	1
R-2	Buffer strip 1	75402-6-2088-B0	1
R-3	Buffer strip 2	75402-6-2089-B0	1
S	Upper Protective Cover	848S0-6-4580-B0	1
U	Power cable 1700L	26100-6-1775-02	1



### 9.3 Exploded Drawing

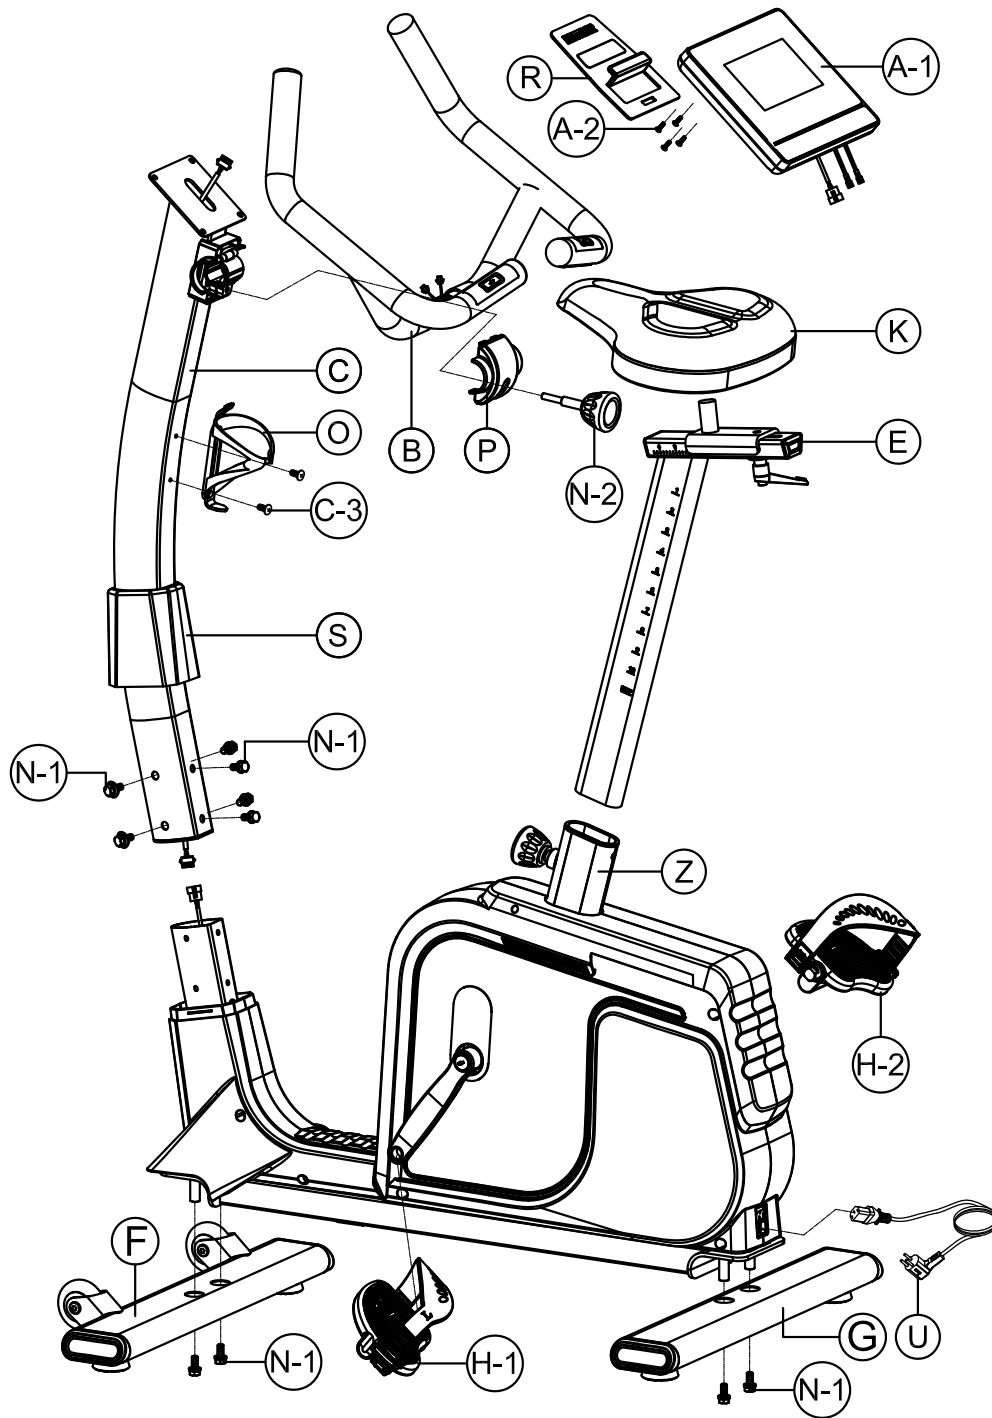

<p><b>A</b></p>	<p><b>B</b></p>	<p><b>C</b></p>	<p><b>D</b></p>
<p><b>E</b></p>	<p><b>F</b></p>	<p><b>G</b></p>	<p><b>J</b></p>
<p><b>H</b></p>	<p><b>I</b></p>	<p><b>L</b></p>	<p><b>M</b></p>
<p><b>K</b></p>	<p><b>O</b></p>	<p><b>P</b></p>	<p><b>Q</b></p>
<p><b>U</b></p>	<p><b>S</b></p>	<p><b>O</b></p>	<p><b>U</b></p>

Products from Kettler® are subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

### **Error Descriptions**

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

**Your statutory rights are not affected.**

### **Warranty**

The warranty is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

#### **Warranty period**

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

### **Repair Costs**

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warranty holder personally and are not a part of repair. After the expiration of the warranty period, the responsibility for parts costs, repair costs, installation costs and delivery costs lies with the warranty holder.

### **The terms of use are defined as follows:**

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

### **Warranty Service**

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.

## **Warranty Conditions**

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

### **Warranty claims are invalid in case of damage resulting from:**

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

### **Proof of Purchase and Serial Number**

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

### **Service outside of the Warranty Period**

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

### **Communication**

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

# 11 CONTACT

DE	DK	EN
<p><b>TECHNIK</b></p> <p>☎ +49 4621 4210-900            📠 +49 4621 4210-698            ✉ technik@fitshop.de            🕒 Öffnungszeiten entnehmen Sie unserer Homepage.</p> <p><b>SERVICE</b></p> <p>☎ 0800 20 20277 (kostenlos)            ☎ 04621 4210 - 0            ✉ info@fitshop.de            🕒 Öffnungszeiten entnehmen Sie unserer Homepage:  <a href="https://stg.fit/statit7">https://stg.fit/statit7</a></p>	<p><b>TEKNIK OG SERVICE</b></p> <p>☎ 80 90 16 50            +49 4621 4210-945            ✉ info@fitshop.dk            🕒 Åbningstider kan findes på hjemmesiden:  <a href="https://stg.fit/statit7">https://stg.fit/statit7</a></p>	<p><b>CUSTOMER SUPPORT</b></p> <p>☎ 00800 2020 2772            +494621 4210 944            ✉ service@fitshop.com            🕒 You can find the opening hours on our homepage:  <a href="https://fsg.fit/en">https://fsg.fit/en</a></p>
	FR	BE
	<p><b>TECHNIQUE &amp; SERVICE</b></p> <p>☎ +33 (0) 189 530984            +49 4621 42 10 933            ✉ info@fitshop.fr            🕒 Vous trouverez les heures d'ouverture sur notre site Internet:  <a href="https://stg.fit/statit4">https://stg.fit/statit4</a></p>	<p><b>TECHNIQUE &amp; SERVICE</b></p> <p>☎ 02 732 46 77            +49 4621 4210 933            ✉ info@fitshop.be            🕒 Vous trouverez les heures d'ouverture sur notre site Internet:  <a href="https://stg.fit/statit8">https://stg.fit/statit8</a></p>
ES	NL	INT
<p><b>TECNOLOGÍA Y SERVICIOS</b></p> <p>☎ 911 238 029            ✉ info@fitshop.es            🕒 Consulta nuestro horario de apertura en la página web:  <a href="https://stg.fit/statit5">https://stg.fit/statit5</a></p>	<p><b>TECHNISCHE DIENST &amp; SERVICE</b></p> <p>☎ +31 172 619961            ✉ service@fitshop.nl            🕒 De openingstijden vindt u op onze homepage:  <a href="https://stg.fit/statit3">https://stg.fit/statit3</a></p>	<p><b>TECHNICAL SUPPORT &amp; SERVICE</b></p> <p>☎ +49 4621 4210-944            ✉ service-int@fitshop.de            🕒 You can find the opening hours on our homepage:  <a href="https://stg.fit/statita">https://stg.fit/statita</a></p>
PL	AT	CH
<p><b>DZIAŁ TECHNICZNY I SERWIS</b></p> <p>☎ 22 307 43 21            +49 4621 42 10-948            ✉ info@fitshop.pl            🕒 Godziny otwarcia można znaleźć na stronie głównej:  <a href="https://stg.fit/statit6">https://stg.fit/statit6</a></p>	<p><b>TECHNIK &amp; SERVICE</b></p> <p>☎ 0800 20 20277 (Freecall)            +49 4621 42 10-0            ✉ info@fitshop.at            🕒 Öffnungszeiten entnehmen Sie unserer Homepage:  <a href="https://stg.fit/statitb">https://stg.fit/statitb</a></p>	<p><b>TECHNIK &amp; SERVICE</b></p> <p>☎ 0800 202 027            +49 4621 42 10-0            ✉ info@fitshop.ch            🕒 Öffnungszeiten entnehmen Sie unserer Homepage:  <a href="https://stg.fit/statit9">https://stg.fit/statit9</a></p>

Please find a detailed overview including address and opening hours for all stores of the Fitshop Group in Germany and abroad on the following website:

[www.fitshop.com/en/stores](http://www.fitshop.com/en/stores)

# KETTTLER

## WEBSHOP AND SOCIAL MEDIA


Since 2024 Kettler sports equipment is part of the Fitshop brand family, Europe's largest specialist retailer for home fitness equipment. Kettler equipment such as treadmills, cross trainers, and rowing machines have always played an important role in Fitshop's more than 40-year history. Kettler stands for the highest product quality, reliability, and tradition. Kettler sports equipment helps you lead an active and healthy life. They make exercise fun for young and old. As part of the Fitshop Group, Kettler Sport remains true to these values.

Visit us also on our social media platforms or our online shop!

	<a href="http://www.fitshop.com/kettler">www.fitshop.com/kettler</a> <a href="http://www.kettlersport.com">www.kettlersport.com</a>
	<a href="http://www.facebook.com/fitshopgroup/">www.facebook.com/fitshopgroup/</a>
	<a href="http://www.instagram.com/fitshopgroup/">www.instagram.com/fitshopgroup/</a>
	<a href="http://www.linkedin.com/company/fitshop-gmbh">www.linkedin.com/company/fitshop-gmbh</a>
	<a href="http://www.stg.fit/YouTube_DE">www.stg.fit/YouTube_DE</a>

Kettler is part of the Fitshop Group.

Notes

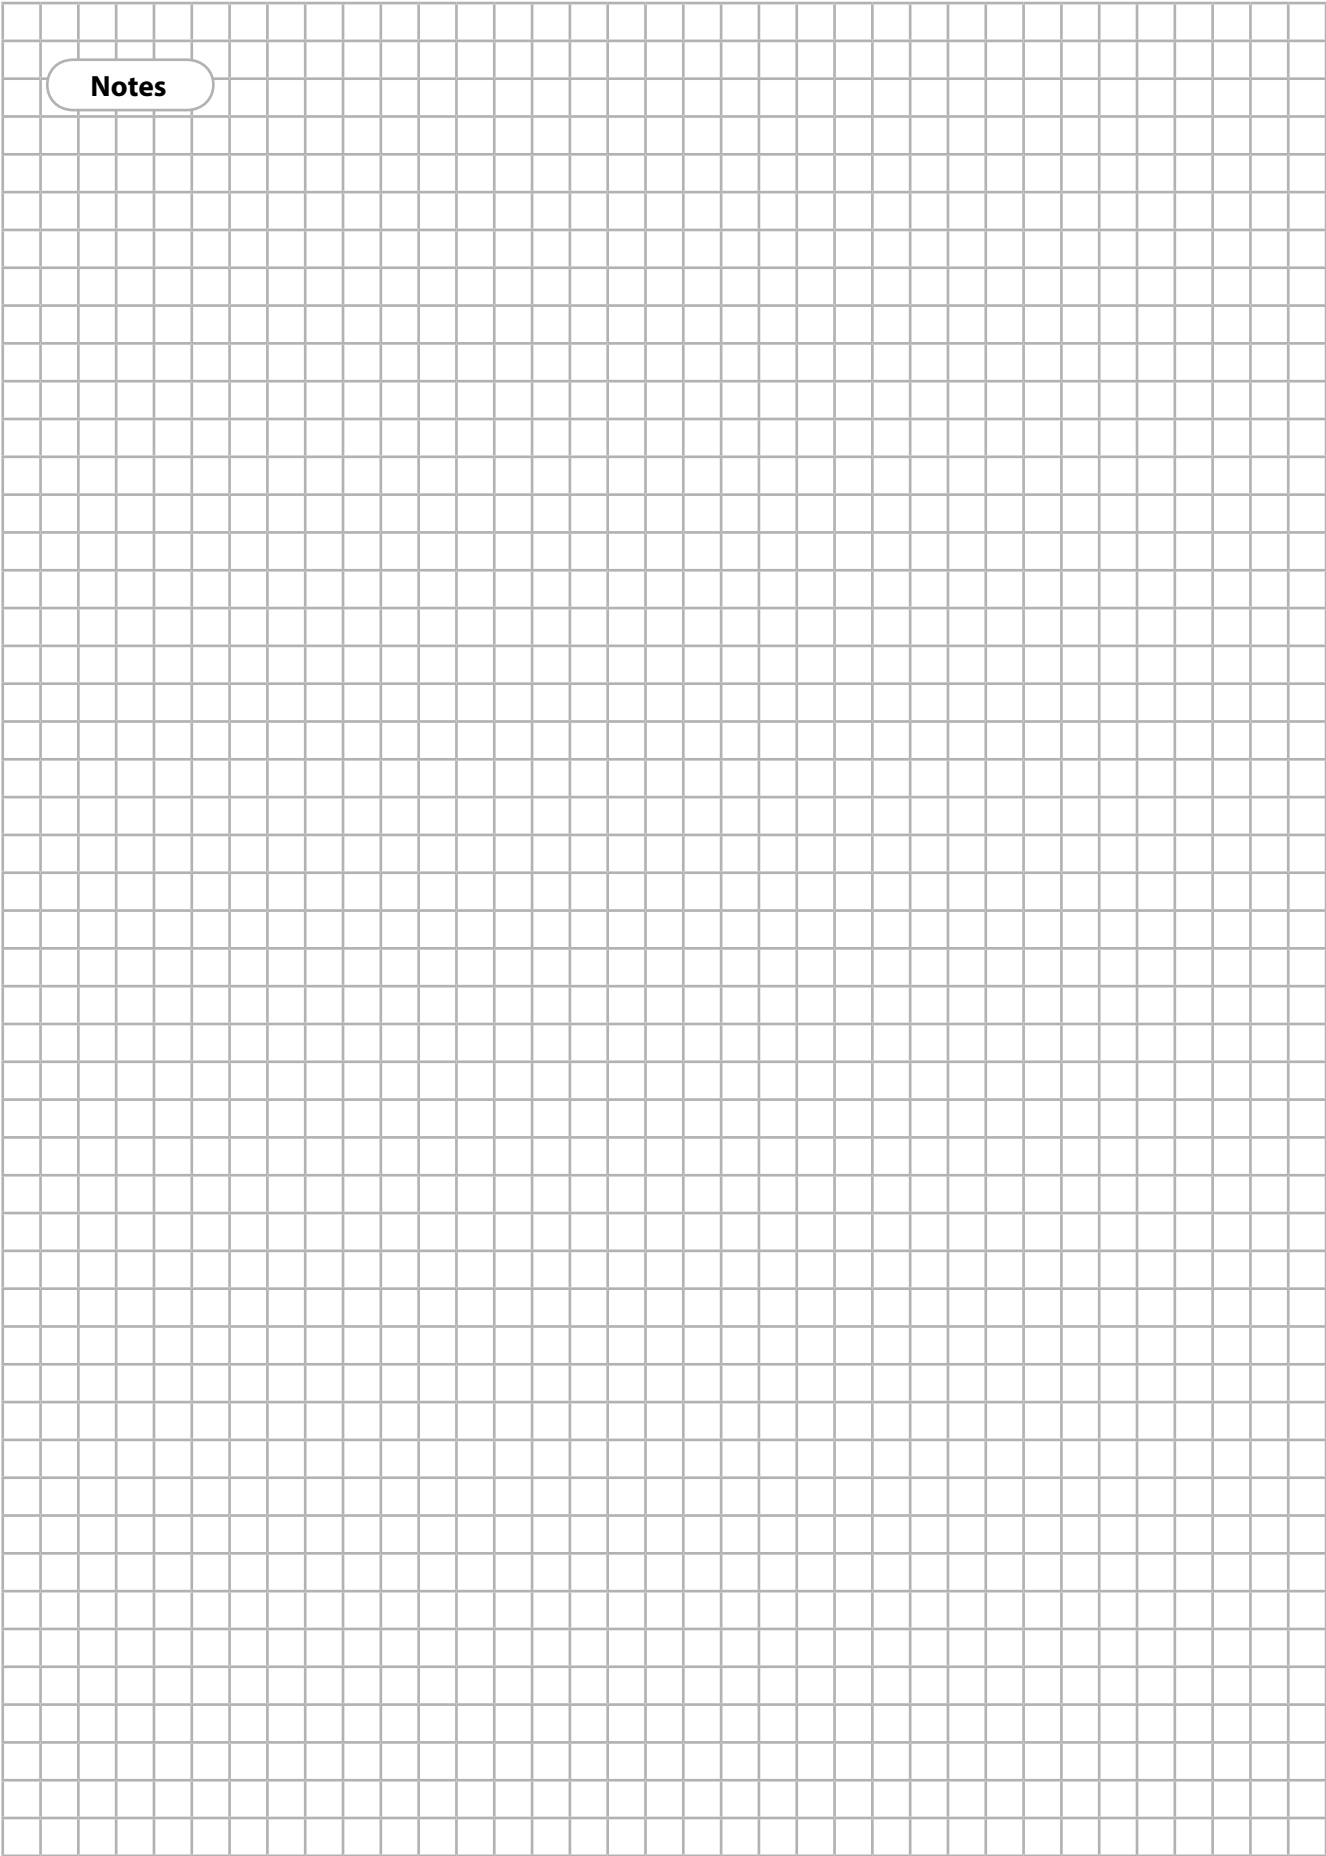



# KETTTLER

**TOUR** 600