

Owner's Manual



V BENCH LEG CURL IT95

Table Of Contents

CAUTION!

Read all precautions and instructions in this manual before using this equipment.

| Important Safety Instructions | 3 |
|---------------------------------|----|
| Instructions | 5 |
| Exploded View and Parts List | 6 |
| Measurement Guide | 16 |
| Assembly Instructions | 17 |
| Assembly | 18 |
| Adjust Instructions | 32 |
| Exercise Instructions | 33 |
| Maintenance Schedule | 34 |
| General Maintenance Information | 35 |
| Weight Training Tips | 36 |



Please assemble according to the actual **Weights** you buy!

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- 1. Read all instructions before using the equipment.

 These instructions are written to ensure your safety and to protect the unit.
- 2. Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- 3. The product should only be used on a level surface and is with 0.5 meters space around the product.

 Do not use the equipment outdoors.
- 4. Do not allow children on or near the equipment. And children are not allowed to use this equipment.

 Teenagers should use this equipment with adult supervision.
- 5. Do not overexert yourself or work to exhaustion. Do not attempt to lift more weight than you can control safely. If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- 6. This equipment is not used as medical apparatus and instruments.
- 7. Never operate the unit when it has been dropped or damaged. Never drop or insert anything into any opening in the equipment. Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition. Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear. Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- 8. Be careful when getting on or off the equipment.
- 9. Wear proper exercise clothing and shoes for your workout, no loose clothing.


Important Safety Instructions

Personal Safety During Assembly

Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.

Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

Training Area and Free Area

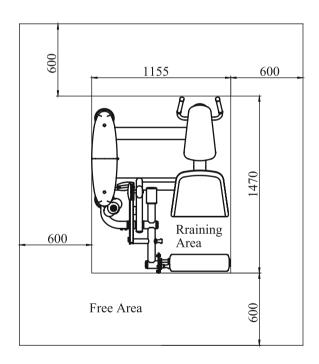

Specifications

Class: S


Maximum Wt. Capacity: 134kg/ 295lbs Maximum User Weight: 150kg/ 330lbs Product Total Surface: 1155*1470mm Product Total Mass: 131.5kg/ 290lbs

Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

Tools Required

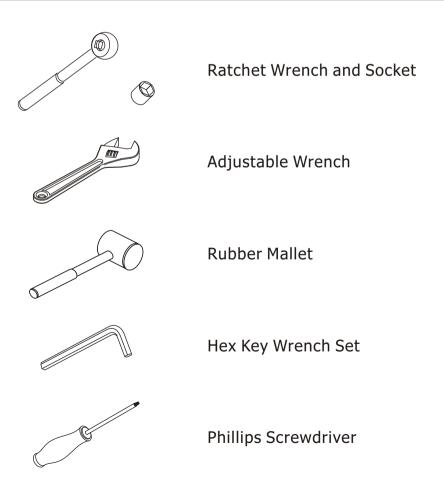


Overall


| ItemNo. | Grade No. | Part No. | Description | QTY |
|---------|-----------|-----------------|---|-----|
| 1 | 1 | IT952101ASSY | Weight Stack Frame ASSY | 1 |
| 2 | 2 | IT952102ASSY | Main Frame ASSY | 1 |
| 3 | 3 | IT95170300 | Bottom Cross Brace | 1 |
| 4 | 4 | IT952104ASSY | Front Support Frame ASSY | 1 |
| 5 | 5 | IT950505ASSY | FOAM Frame ASSY | 1 |
| 6 | 6 | IT952106ASSY | Swing Frame ASSY | 1 |
| 7 | 7 | IT952107ASSY | Wheel Frame ASSY | 1 |
| 8 | 8 | IT952108ASSY | Handle Frame ASSY | 1 |
| 9 | 9 | IT95210900 | Support Frame | 1 |
| 10 | 10 | IT95211000 | Seat Pad II | 1 |
| 11 | 11 | IT95191400 | Seat Pad | 1 |
| 12 | 12 | IT95211100 | Cable ASSY | 1 |
| 13 | 13 | IE95052800 | FOAM ASSY | 1 |
| 14 | 14 | IT950121ASSY | Top Bracket ASSY | 1 |
| 15 | 15 | IT950122ASSY | Bottom Bracket ASSY | 2 |
| 16 | 16 | IT95012300 | Rear Bracket | 1 |
| 17 | 17 | IT95014200 | Top Plate | 1 |
| 18 | 18 | IT95014400 | Guide Rod ∮19*1242 | 2 |
| 19 | 19 | IT95015100 | Top Cover | 1 |
| 20 | 20 | IT95015200 | Training Placard Cover | 1 |
| 21 | 21 | IT95055400 | Left Front Shroud | 1 |
| 22 | 22 | IT95085400 | Right Front Shroud | 1 |
| 23 | 23 | IT95015500 | Top Rear Shroud | 1 |
| 24 | 24 | IT95015600 | Rear Shroud | 1 |
| 25 | 25 | IT95016000 | Plastic Cover | 3 |
| 26 | 26 | IT95016100 | Guide Rod Fixing Sleeve Φ 25* Φ 19*45 | 2 |
| 27 | 27 | IT95016500 | Spout Plug Φ 16.5*6.88 | 2 |
| 28 | 28 | IT90012000V1 | Selector Pin W/Coil | 1 |
| 29 | 29 | IT80023000 | Weight Rubber Bumper | 2 |
| 30 | 30 | IT801210300P11C | Cup Holder | 1 |
| 31 | 31 | FE97211900 | Сар ф 60 | 2 |
| 32 | 32 | FE97212000 | Circle Ring ∮62.5*5 | 1 |

Overall

| ItemNo. | Grade No. | Part No. | Description | QTY |
|---------|-----------|-------------------|--------------------------------------|-----|
| 33 | 33 | IT95062000 | Cap ASSY | 1 |
| 34 | 34 | IE950912800 | Plastic Ring | 1 |
| 35 | 35 | CWRVL0101100 | Plate | 1 |
| 36 | 36 | SG500110400V5 | 4.5" Pulley | 3 |
| 37 | 37 | SD1000B3000ASSY | Adjustable Foot Plate | 2 |
| 38 | 38 | HFOPT900-04A0602 | Spring | 2 |
| 39 | 39 | HFOPT900-04A1400 | Aluminium Sheath | 1 |
| 40 | 40 | V22500 | Plug | 1 |
| 41 | 41 | GB70BTM12*135DN18 | Socket Head Cap Screw M12*135 | 6 |
| 42 | 42 | GB70BTM12*30DN18 | Socket Head Cap Screw M12*30 | 2 |
| 43 | 43 | GB70BTM10*80DN18 | Socket Head Cap Screw M10*80 | 4 |
| 44 | 44 | GB70BTM10*75DN18 | Socket Head Cap Screw M10*75 | 4 |
| 45 | 45 | GB70BTM10*50DN18 | Socket Head Cap Screw M10*50 | 3 |
| 46 | 46 | GB70BTM10*45DN18 | Socket Head Cap Screw M10*45 | 2 |
| 47 | 47 | GB70BTM10*25DN18 | Socket Head Cap Screw M10*25 | 9 |
| 48 | 48 | GB70BTM10*130DN18 | Socket Head Cap Screw M10*130 | 2 |
| 49 | 49 | GB70M8*20N19 | Socket Head Cap Screw M8*20 | 2 |
| 50 | 50 | CNLM10*25DS20 | Flat Head Cap Screw M10*25 | 2 |
| 51 | 51 | GB818M6*20DHS2 | Cross Recessed Pan Head Screw M6*20 | 18 |
| 52 | 52 | GB818M6*16DHS2 | Cross Recessed Pan Head Screw M6*16 | 4 |
| 53 | 53 | GB818M6*10DHS2 | Cross Recessed Pan Head Screw M6*10 | 4 |
| 54 | 54 | NM10DN2 | Nylon Lock Nut M10 | 13 |
| 55 | 55 | GB9512DN2 | Flat Washer Φ 13* Φ 24*2.5 | 8 |
| 56 | 56 | GB9510DN2 | Flat Washer Φ 11* Φ 20*2 | 34 |
| 57 | 57 | GB958DN2 | Flat Washer φ 9* φ 16*1.6 | 2 |
| 58 | 58 | GB9310N19 | Spring Washer Φ 10 | 2 |
| 59 | 59 | GB894.125FH12 | Circlips For Shaft | 1 |
| 60 | 60 | NBS6DHS | Hex Key S=6 | 1 |
| 61 | 61 | NBS8DHS | Hex Key S=8 | 1 |
| 62 | 62 | LW200BS | Wrench Φ6*117 | 1 |
| 63 | 63 | YHY | Lube | 1 |

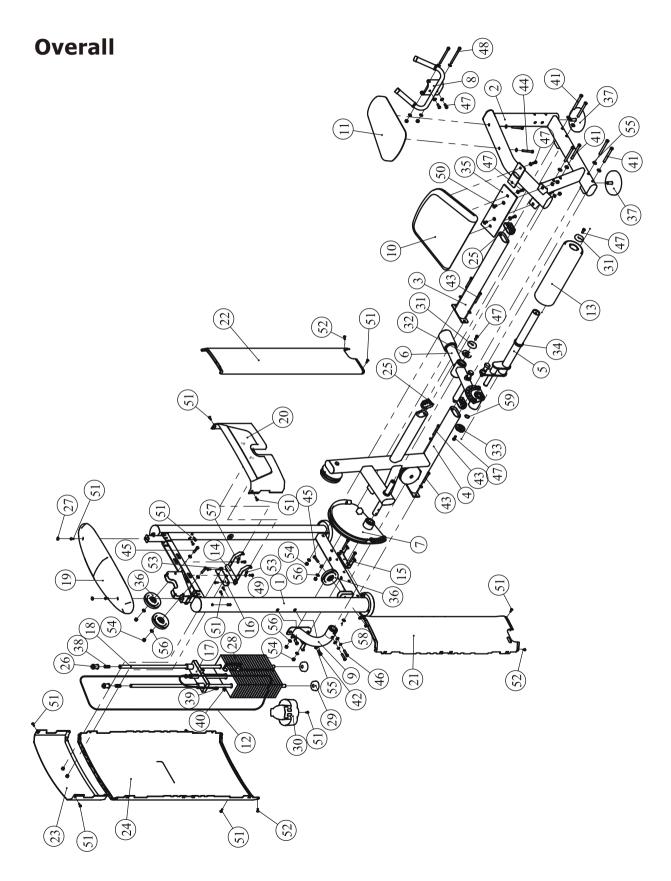


Weight Stack Frame ASSY

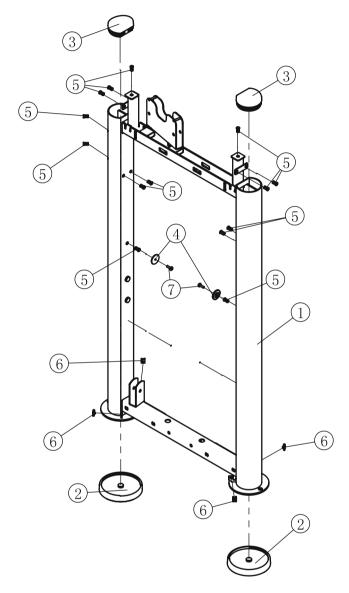


| ItemNo. | Grade No. | Part No. | t No. Description | |
|---------|-----------|-------------------------------|-------------------------------------|----|
| 1 | 1.1 | IT95210100 Weight Stack Frame | | 1 |
| 2 | 1.2 | IT95015700 Foot Plate | | 2 |
| 3 | 1.3 | IT95015800 | Plug φ 95*81.1 | 2 |
| 4 | 1.4 | IT95015900 | Plastic Block | 2 |
| 5 | 1.5 | GB17880.5M6*16.5DS17 | Rivet Nut M6 | 14 |
| 6 | 1.6 | AC32705800 | U-nut M6 | 4 |
| 7 | 1.7 | GB818M6*20DHS2 | Cross Recessed Pan Head Screw M6*20 | 2 |

Main Frame ASSY

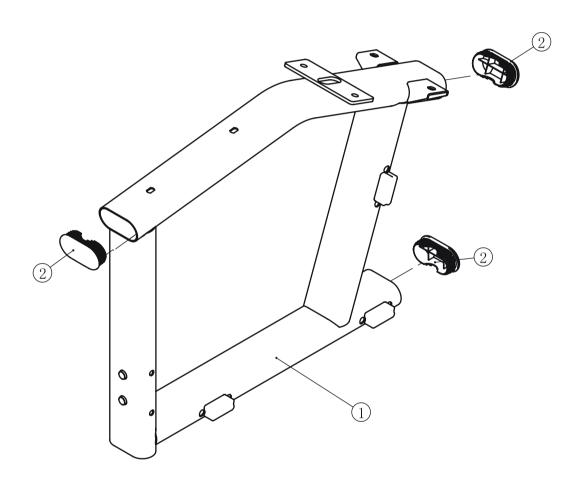


| ItemNo. | Grade No. | Part No. | Description | QTY |
|---------|-----------|----------------|---------------|-----|
| 1 | 2.1 | IT95210200 | Main Frame | 1 |
| 2 | 2.2 | IT90013800P11C | Plug RT50*100 | 3 |

Front Support Frame ASSY

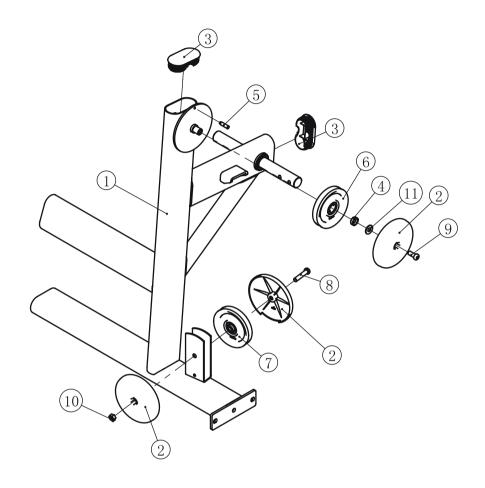


| ItemNo. | Grade No. | Part No. | Description | QTY |
|---------|-----------|----------------------------|------------------------------------|-----|
| 1 | 4.1 | IT95210400 | Front Support Frame | 1 |
| 2 | 4.2 | IT95016400 | Pulley Cover | 3 |
| 3 | 4.3 | IT90013800P11C | Plug RT50*100 | 2 |
| 4 | 4.4 | FE97122100 Pulley Spacer 1 | | 1 |
| 5 | 4.5 | FE97122300 | Threaded Cloumn | 1 |
| 6 | 4.6 | IT95057800 | Thin 4.5" Pulley | 1 |
| 7 | 4.7 | SG500110400V5 | 4.5" Pulley | 1 |
| 8 | 4.8 | GB70BTM10*50DN18 | Socket Head Cap Screw M10*50 | 1 |
| 9 | 4.9 | GB70BTM10*25DN18 | Socket Head Cap Screw M10*25 | 1 |
| 10 | 4.10 | NM10DN2 | Nylon Lock Nut M10 | 1 |
| 11 | 4.11 | DQ10N19B | Flat Washer Φ 11* Φ 25*2 | 1 |

FOAM Frame ASSY

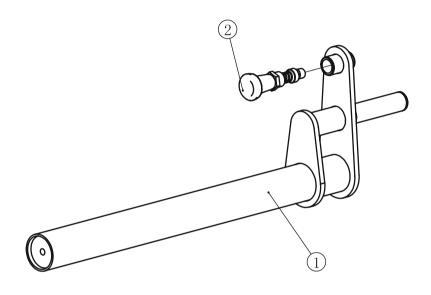


| ItemNo. | Grade No. | Part No. | Description | QTY |
|---------|-----------|------------|-------------|-----|
| 1 | 5.1 | IT95050500 | FOAM Frame | 1 |
| 2 | 5.2 | IT95221700 | Pin | 1 |

Swing Frame ASSY

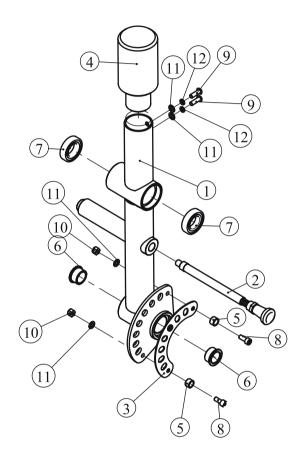


| ItemNo. | Grade No. | Part No. | Description | QTY |
|---------|-----------|-----------------|------------------------------|-----|
| 1 | 6.1 | IT95210600 | Swing Frame | |
| 2 | 6.2 | IT950521ASSY | Long Pin | 1 |
| 3 | 6.3 | IT95052200 | Lining Board 1 | 1 |
| 4 | 6.4 | IT95121200 | Counter Poise Block | 1 |
| 5 | 6.5 | IN-S10111200 | Rubber Sleeve Φ 17*10.5 | 2 |
| 6 | 6.6 | M02502000 | Spacer φ 38* φ 32* φ 25.4*18 | 2 |
| 7 | 6.7 | GB2766006-2ZNBK | Bearing | 2 |
| 8 | 6.8 | GB70M8*20DN20 | Socket Head Cap Screw M8*20 | 2 |
| 9 | 6.9 | PNLM8*25DN20 | Button Head Cap Screw M8*25 | 2 |
| 10 | 6.10 | NM8DN2 | Nylon Lock Nut M8 | 2 |
| 11 | 6.11 | GB958DN2 | Flat Washer Ф 9* Ф 16*1.6 | 4 |
| 12 | 6.12 | GB938N19 | Spring Washer $\Phi8$ | 2 |

Wheel Frame ASSY

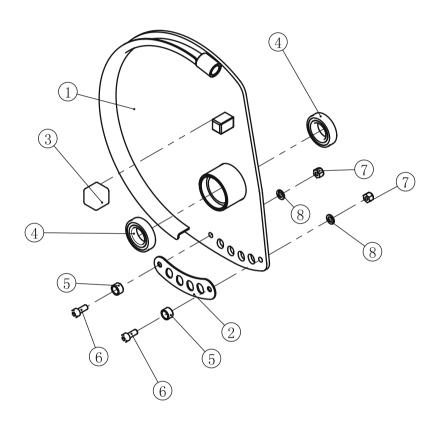


| ItemNo. | Grade No. | Part No. | Description | QTY |
|---------|-----------|-----------------|-------------------------------------|-----|
| 1 | 7.1 | IT95210700 | Wheel Frame | 1 |
| 2 | 7.2 | IT95052300 | Lining Board 2 | 1 |
| 3 | 7.3 | FE97213100 | Square Rubber Sleeve | 1 |
| 4 | 7.4 | GB2766006-2ZNBK | Bearing | 2 |
| 5 | 7.5 | IN-S10111200 | Rubber Sleeve Φ 17*10.5 | 2 |
| 6 | 7.6 | GB70M8*20DN20 | Socket Head Cap Screw M8*20 | 2 |
| 7 | 7.7 | NM8DN2 | Nylon Lock Nut M8 | 2 |
| 8 | 7.8 | GB958DN2 | Flat Washer Φ 9* Φ 16*1.6 | 2 |

Handle Frame ASSY

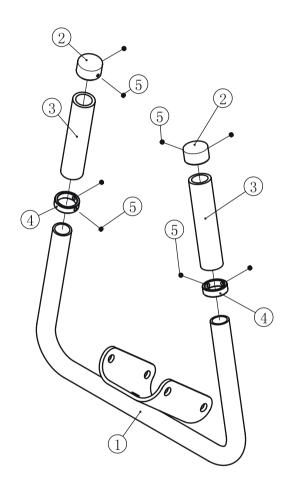

| ItemNo. | Grade No. | Part No. Description | | QTY |
|---------|-----------|-------------------------|-------------------------------|-----|
| 1 | 8.1 | IT95210800 Handle Frame | | 1 |
| 2 | 8.2 | V39600 | Aluminum Grip Cap | 2 |
| 3 | 8.3 | 026-01PL0206-12 | Grip | 2 |
| 4 | 8.4 | V39500 | Aluminum Grip Ring | 2 |
| 5 | 8.5 | YZGB7710-32*3.2N19 | Socket Set Screw 10-32UNF*3.2 | 8 |

Measurement Guide

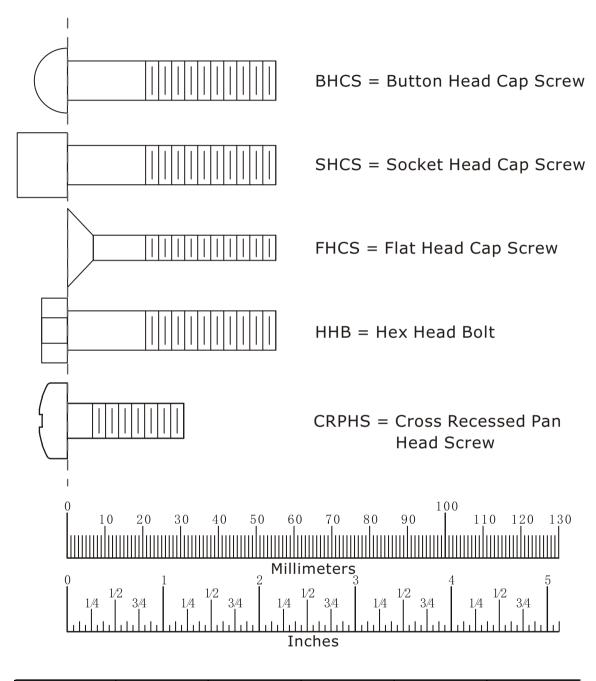

| Diameter of bolt (mm/inch) M6(1/4") | | M8(5/16") M10(3/8") | | M12(1/2") | M16(5/8") |
|--|------|---|------------------|--|-------------------|
| Tightening torque (N.m) | 9~12 | 22~30 | 45~59 | 78~104 | 193~257 |
| Operational methods for adult men The strength of the wrist | | The strength of the wrist and forearm | I he strength of | The strength of the arm and upper body | with all strength |

Assembly Instructions

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.


№ NOTE


As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

STEP 1

- 1. Attach two Adjustable Foot Plates (#37) to the Main Frame ASSY (#2).
- 2. Attach the Rear Bracket (#16) to the Top Rear Shroud (#23) using: two M6*10 CRPHS (#53)

Note: Wrench Tighten Bolts.

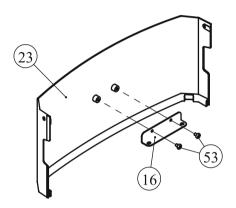

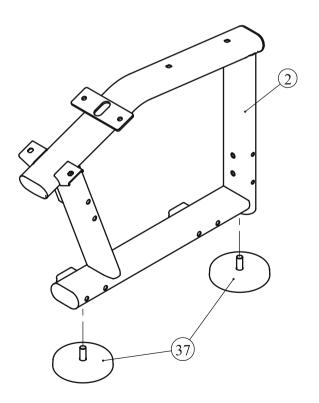

STEP 2

1. Attach the Front Support Frame ASSY (#4) and the Bottom Cross Brace (#3) to the Main Frame ASSY (#2) using:


three Plastic Cover (#25) six M12*135 SHCS (#41) six Φ13*Φ24*2.5 Flat Washer (#55)

2. Attach the Wheel Frame ASSY (#7) and the Support Frame (#9) to the Front Support Frame ASSY (#4) using:

two M10*45 SHCS (#46) two Φ11*Φ20*2 Flat Washer (#56) two Φ10 Spring Washer (#58)

Note: 1. Wrench Tighten Bolts and Nylon Lock Nuts.

2. Adjust the Adjustable Foot Plates to make the machines stable.

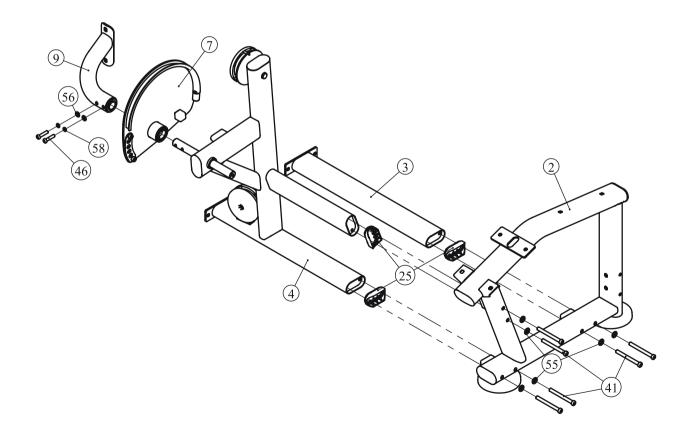

STEP 3

1. Attach the Front Support Frame ASSY (#4), the Bottom Cross Brace (#3) and the Support Frame (#9) to the Weight Stack Frame ASSY (#1) using:

four M10*80 SHCS (#43)

two M12*30 SHCS (#42)

four M10 Nylon Lock Nut (#54)

eight Φ11*Φ20*2 Flat Washer (#56)

two Φ13*Φ24*2.5 Flat Washer (#55)

2. Attach one 4.5" Pulleys (#36) to the Weight Stack Frame ASSY (#1) using:

one M10*50 SHCS (#45)

two Φ11*Φ20*2 Flat Washer (#56)

one M10 Nylon Lock Nut (#54)

3. Attach the Top Bracket ASSY (#14) and two Bottom Bracket ASSY (#15) to the Weight Stack Frame ASSY (#1) using:

two M8*20 SHCS (#49)

two Φ9*Φ16*1.6 Flat Washer (#57)

two M10*75 SHCS (#44)

four Φ 11* Φ 20*2 Flat Washer (#56)

two M10 Nylon Lock Nut (#54)

Note: Wrench Tighten Bolts and Nylon Lock Nuts.

STEP 4

1. Attach the Swing Frame ASSY (#6) to the Front Support Frame ASSY (#4) using:

one Cap Φ60 (#31)

one Circle Ring Φ62.5*5 (#32)

one M10*25 SHCS (#47)

2. Attach the FOAM Frame ASSY (#5) to the Swing Frame ASSY (#6) using:

one Circlips For Shaft (#59)

one Cap ASSY (#33)

one M10*25 SHCS (#47)

3. Attach the Plate (#35) and Adjustable Handle Frame ASSY (#8) to the Main Frame ASSY (#2) using:

two M10*130 SHCS (#48)

two M10*25 SHCS (#47)

two M10*25 FHCS (#50)


four M10 Nylon Lock Nut (#54)

eight Φ 11* Φ 20*2 Flat Washer (#56)


Note: 1. Wrench tighten bolts and Nylon Lock Nuts.

2. Pay attention to the relative location between the Wheel Frame ASSY (#7) and the Swing Frame ASSY (#6).

STEP 3

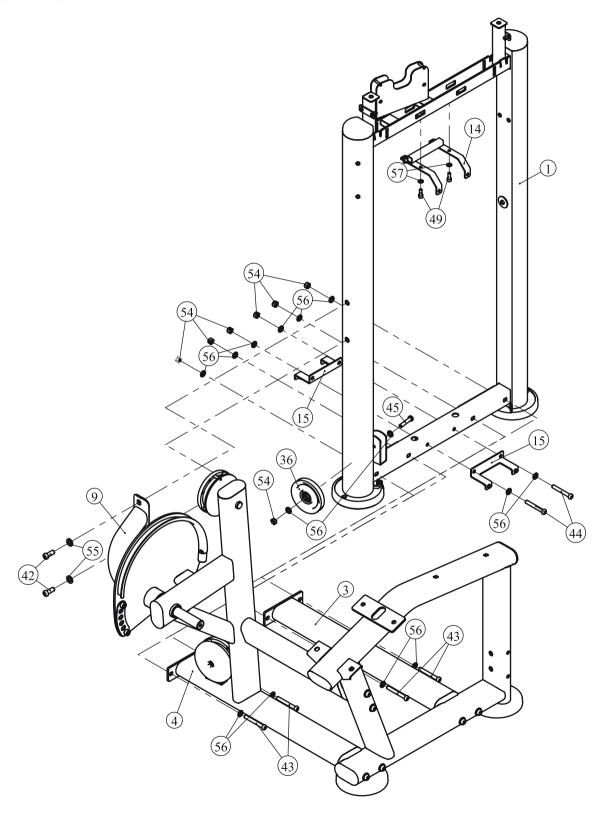



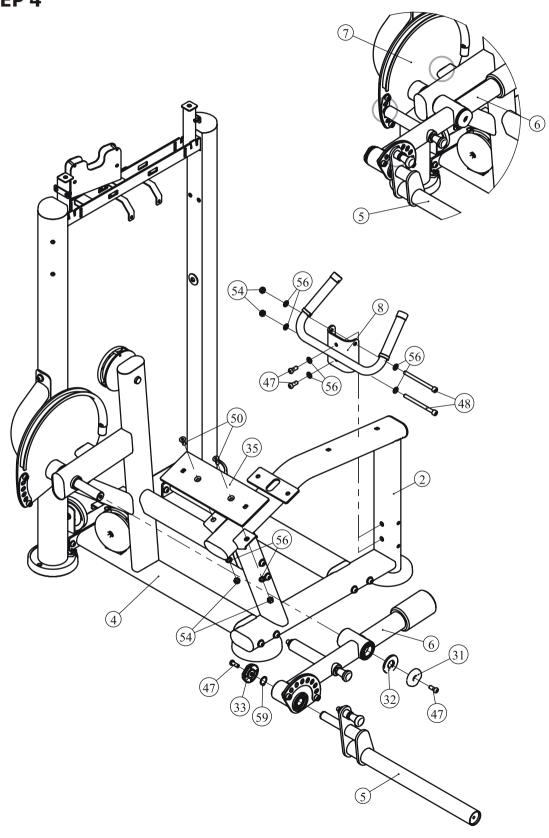

STEP 5

Here is the assembly instruction for **160LBS Weights!**

1. Attach:

two Guide Rod Φ19*1242 (#18)

two Weight Rubber Bumper (#29)

fifteen Weight Plate 10LBS (#65)


two weight stack space (#66)

one Top Plate (#17)

to the Weight Stack Frame ASSY (#1) using:

two Guide Rod Fixing Sleeve Φ25*Φ19*45 (#26)

two Spring (#38)

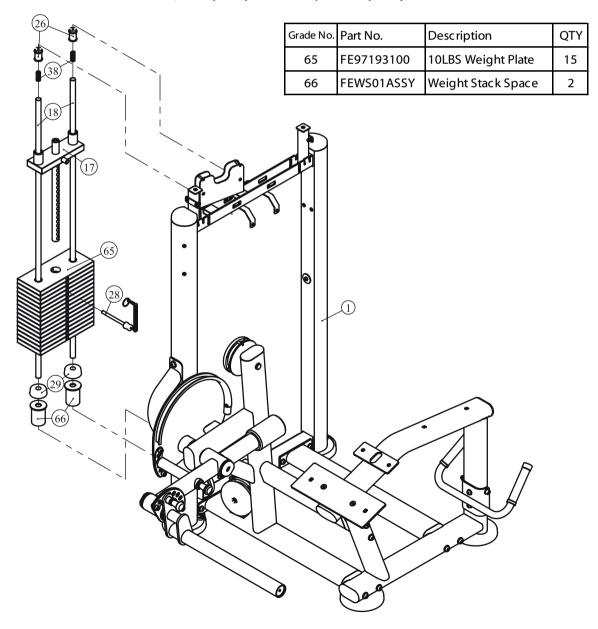


STEP 5

Here is the assembly instruction for **200LBS Weights!**

1. Attach:

two Guide Rod Φ19*1242 (#18)
two Weight Rubber Bumper (#29)
nineteen Weight Plate 10LBS (#65)
one Top Plate (#17)
to the Weight Stack Frame ASSY (#1) using:
two Guide Rod Fixing Sleeve Φ25*Φ19*45 (#26)
two Spring (#38)

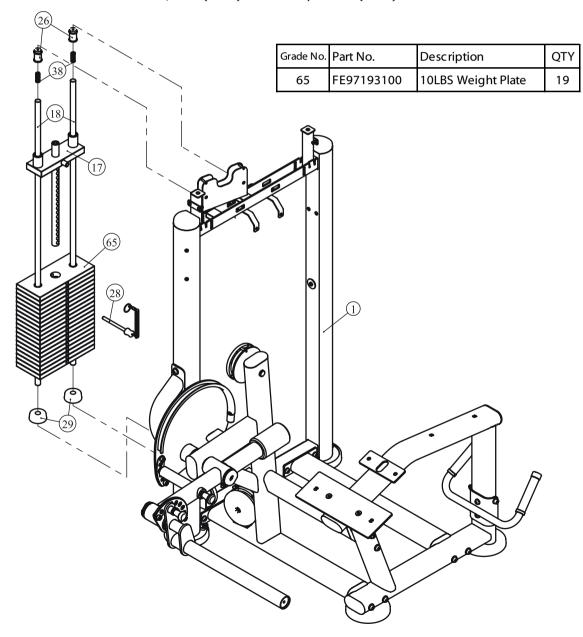

STEP 5

Here is the assembly instruction for 235LBS Weights!

1. Attach:

two Guide Rod Φ19*1242 (#18)

two Weight Rubber Bumper (#29)

fifteen Weight Plate 15LBS (#67)


two weight stack space (#66)

one Top Plate (#17)

to the Weight Stack Frame ASSY (#1) using:

two Guide Rod Fixing Sleeve Φ25*Φ19*45 (#26)

two Spring (#38)

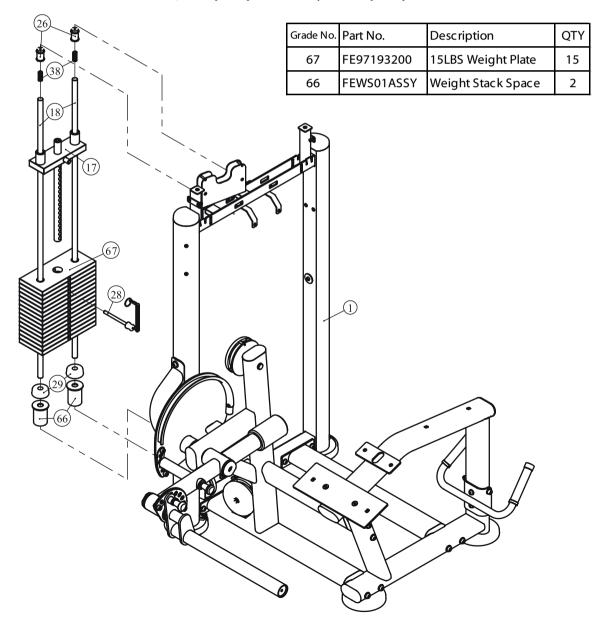


STEP 5


Here is the assembly instruction for 295LBS Weights!


1. Attach:


two Guide Rod Φ19*1242 (#18)
two Weight Rubber Bumper (#29)
nineteen Weight Plate 15LBS (#67)
one Top Plate (#17)
to the Weight Stack Frame ASSY (#1) using:
two Guide Rod Fixing Sleeve Φ25*Φ19*45 (#26)
two Spring (#38)

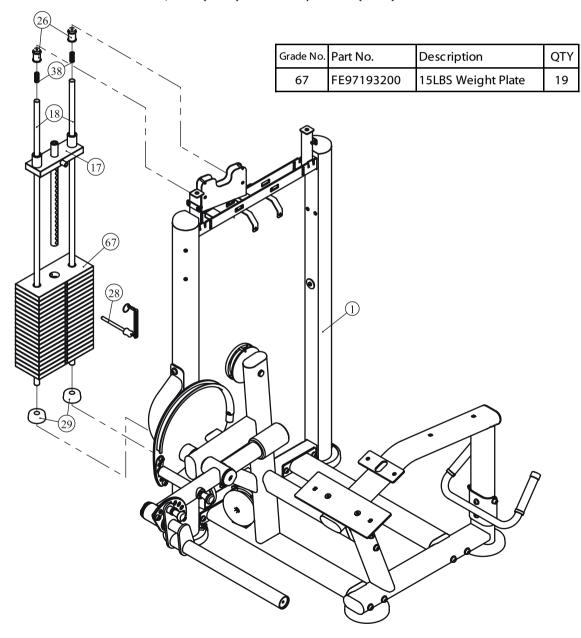

 All weight plate sticker paste schematic diagram




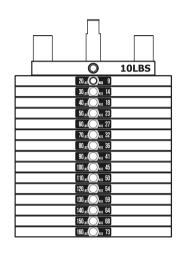


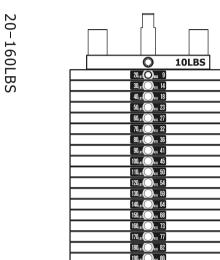

20-200LBS



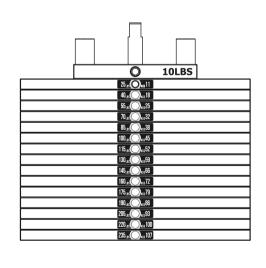

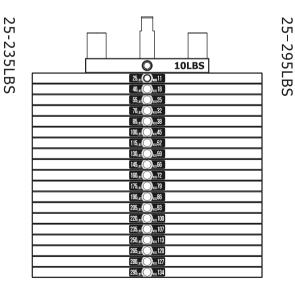

Step 6

1. Attach two 4.5" Pulleys (#36) to the Weight Stack Frame ASSY (#1) using:

```
two M10*50 SHCS (#45)
```

four Φ 11* Φ 20*2 Flat Washer (#56)

two M10 Nylon Lock Nut (#54)

- 2. Attach the Cable ASSY (#12) to the Top Plate(#17).
- 3. Attach the Cable ASSY (#12) to the Wheel Frame ASSY (#7) using: one Aluminium Sheath (#39)
- 4. Attach the Plug (#40)to the Wheel Frame ASSY (#7).

Note: Wrench tighten bolts and Nylon Lock Nuts.

STEP 7

Tips: Pre-assemble the 8 bolt into the Weight Stack Frame ASSY and Bottom Bracket ASSY, not wrench tighten Bolts, Assemble the shroud with the bolt on. Then wrench tighten Bolts.

1. Attach the Left Front Shroud (#21) and the Right Front Shroud (#22) to the Weight Stack Frame ASSY (#1) and the Bottom Bracket ASSY (#15) using:

```
four M6*20 CRPHS (#51)
two M6*16 CRPHS (#52)
```

2. Attach the Rear Shroud (#24) to the Weight Stack Frame ASSY (#1) and the Bottom Bracket ASSY (#15) using:

```
four M6*20 CRPHS (#51)
two M6*16 CRPHS (#52)
```

3. Attach the Training Placard Cover (#20) to the Weight Stack Frame ASSY (#1) and the Top Bracket ASSY (#14) using:

```
two M6*20 CRPHS (#51)
two M6*10 CRPHS (#53)
```

4. Attach the Top Rear Shroud (#23) to the Weight Stack Frame ASSY (#1) and the Top Bracket ASSY (#14) using:

```
four M6*20 CRPHS (#51)
```

5. Attach the Top Cover (#19) to the Weight Stack Frame ASSY (#1) using:


```
two M6*20 CRPHS (#51)
two Spout Plug Φ16.5*6.88 (#27)
```

6. Attach the Cup Holder (#30) to the Weight Stack Frame ASSY (#1) using:


```
two M6*20 CRPHS (#51)
```

Note: Wrench tighten bolts.

STEP 6

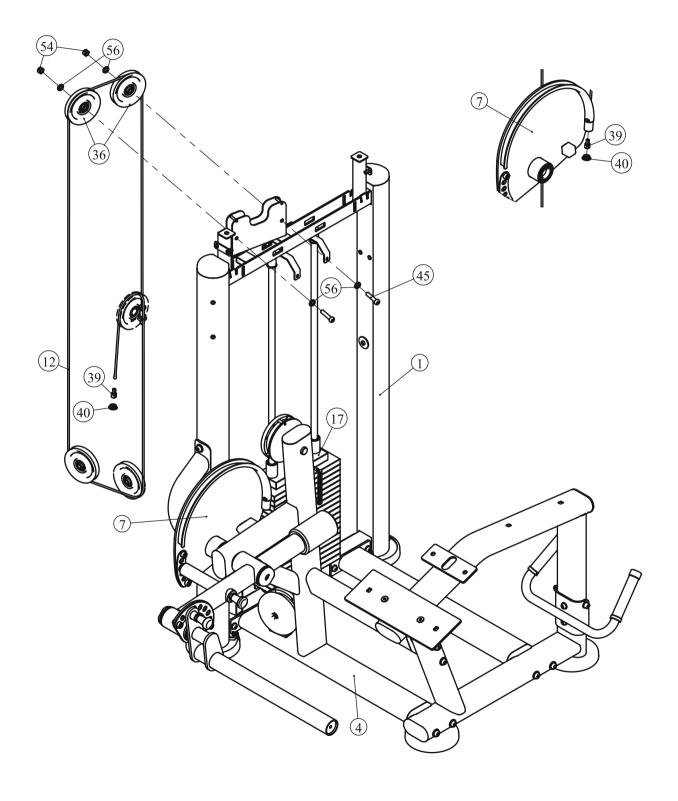

STEP 7

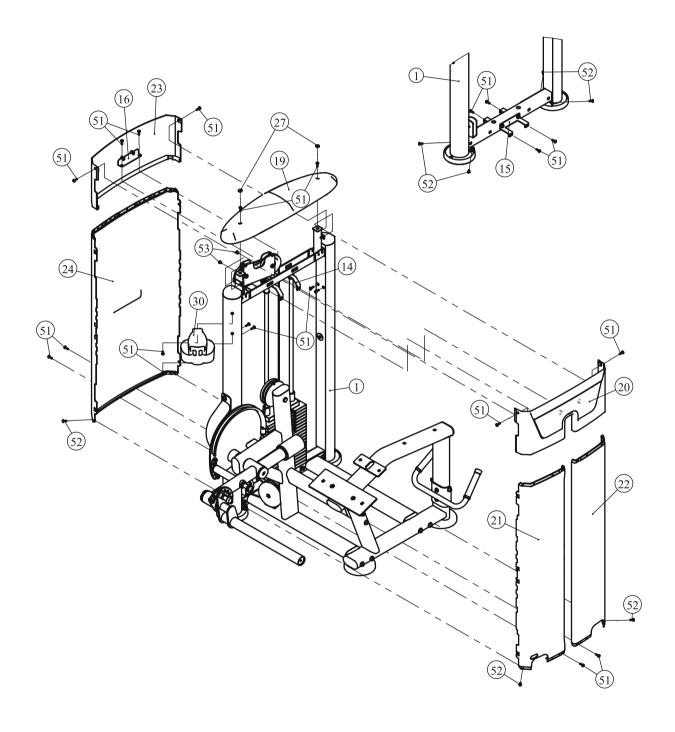


STEP 8

1. Attach Seat Pad II (#10) to the Main Frame ASSY (#2) and the Plate (#35) using: four M10*25 SHCS (#47) four Φ 11* Φ 20*2 Flat Washer (#56)

2. Attach the Seat Pad (#11) to the Main Frame ASSY (#2) using: two M10*75 SHCS (#44) two Φ 11* Φ 20*2 Flat Washer (#56)

3. Attach the FOAM ASSY (#13) to the FOAM Frame ASSY (#5) using: one Plastic Ring(#34) one Cap Φ 60 (#31) one M10*25 SHCS (#47)

Note: Wrench tighten bolts and Nylon Lock Nuts.

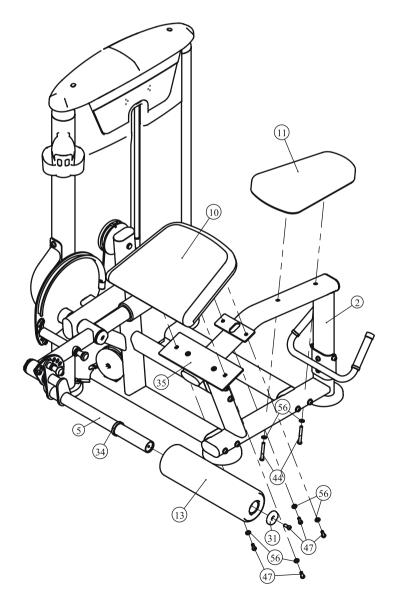

Adjust Instructions

The use of Selector Pin W/Coil


- 1. Select an appropriate weight and put the Selector Pin W/Coil into the hole on it.
- 2. Make sure the Selector Pin W/Coil gets into the hole completely.

The FOAM Frame adjustment


- 1. Pull out the Adjustable support and adjust the Foam Frame ASSY to the desired position .
- 2. Make sure the pin get into the hole completely.


The Wheel Frame adjustment

- 1. Pull out the Adjustable support and adjust the Swing Frame ASSY to the desired position
- 2. Make sure the pin get into the hole completely.

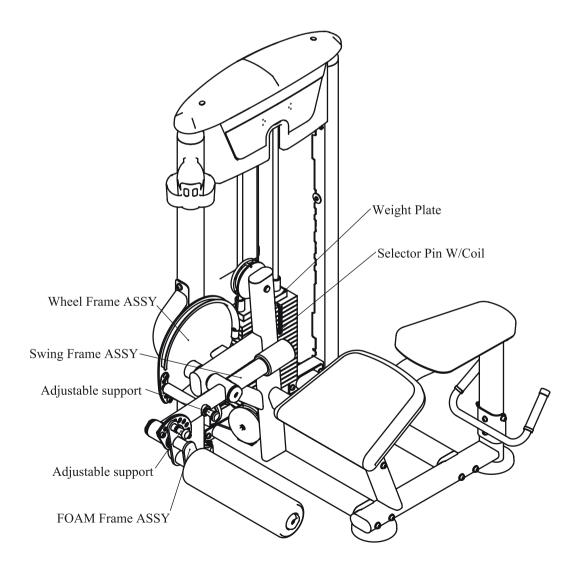



Exercise Instructions

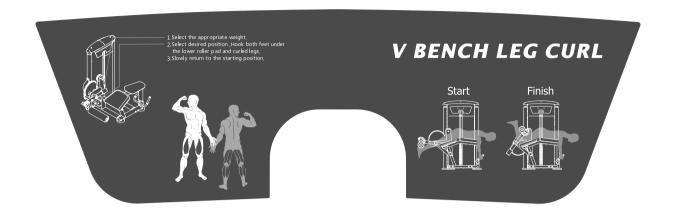

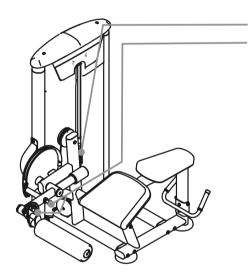

- 1. Select the appropriate weight.
- 2. Select desired position , Hook both feet under the lower roller pad and curled legs.
- 3. Slowly return to the starting position.

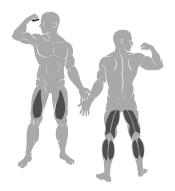

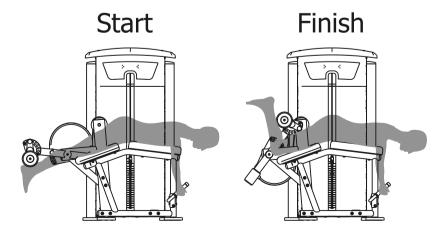

Maintenance Schedule

| ROUTINE | COMMERCIAL MAINTENANCE | HOME MAINTENANCE | LATEST DATE ENTRY | | | | |
|--|---------------------------|---------------------|-------------------|--|--|--|--|
| Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins | DAILY | WEEKLY | | | | | |
| Clean; Upholstery | DAILY | WEEKLY | | | | | |
| Inspect; Cables or Belts and their tension | DAILY | WEEKLY | | | | | |
| Inspect; Accessory Bars, and Handles | WEEKLY | 3 MONTHS | | | | | |
| Inspect; All Decals | WEEKLY | 3 MONTHS | | | | | |
| Inspect; All Nuts and Bolts, Tighten if needed | WEEKLY | 3 MONTHS | | | | | |
| Inspect; Anti-Skid Surface | WEEKLY | 3 MONTHS | | | | | |
| Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube) | MONTHLY | 3 MONTHS | | | | | |
| Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing | MONTHLY | 3 MONTHS | | | | | |
| Clean and Wax; All Glossy Finishes | 6 MONTHS | YEARLY | | | | | |
| Repack with Grease; Linear Bearings | 6 MONTHS | YEARLY | | | | | |
| Replace; Cables, Belts and Connecting Parts | YEARLY | 3 YEARS | | | | | |

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- * Check all pieces for signs of visible wear or damage.
- * Check springs in snap hooks and pull-pins for proper tension and alignment.
- * If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- * To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- * Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- * Replace ripped or warn upholstery immediately.
- * Keep sharp or pointed objects clear of all upholstery.

Decals:

* Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- * Inspect all nuts and bolts for any loosening and tighten if needed.
- * Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

* These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- * We uses only high quality belt, and mil-spec cables.
- * Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- * While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- * Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- * Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- * Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- * Wipe down adjusting tubes with a dust free rag before applying lubricant.
- * Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

* Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.







