

Assembly and Operating Instructions







FSTWFMSB.01.01 FSTWFMSG.01.01



Content

1	GENERAL INFORMATION	8
1.1	Technical Data	8
1.2	Personal Safety	9
1.3	Electrical Safety	10
1.4	Set-Up Place	11
2	ASSEMBLY	12
2.1	General Instructions	12
2.2	Scope of Delivery	13
2.3	Assembly	14
3	OPERATING INSTRUCTIONS	16
3.1	Preparation	16
3.2	Programmes	16
4	STORAGE AND TRANSPORT	17
4.1	General Instructions	17
5	TROUBLESHOOTING, CARE AND MAINTENANCE	18
5.1	General Instructions	18
5.2	Faults and Fault Diagnosis	18
5.3	Error Codes and Troubleshooting	18
5.4	Maintenance and Inspection Calendar	19
6	DISPOSAL	19
7	ORDERING SPARE PARTS	20
7.1	Serial Number and Model Name	20
7.1	Parts List	21
7.2	Exploded Drawing	23
7.5	- Exploded Drawing	23
8	WARRANTY	24
10	CONTACT	26
		_





Dear customer,

Thank you for choosing a Taurus wellness device. With the Taurus Wellness Line, we offer you relaxation, regeneration and massage for your home. In this way, the Taurus Wellness Line can contribute to greater health and well-being. We wish you a relaxing time. If you have any questions about these or other devices of the Taurus brand, please feel free to contact us.

Further information can be found at www.fitshop.com.

Intended Use

The equipment may only be used for its intended purpose.

The equipment is only suitable for home use. The equipment is not suitable for semi-professional (e.g. hospitals, associations, hotels, schools, etc.) and commercial or professional use (e.g. fitness studios).

Legal Notice

Fitshop GmbH Europe's No. 1 for home fitness

International Headquarters Flensburger Straße 55 24837 Schleswig Germany Management:

Christian Grau

Sebastian Campmann

Dr. Bernhard Schenkel

No. HRB 1000 SI

Local Court Flensburg

European VAT Number: DE813211547

Disclaimer

© Taurus Wellness is a registered brand of the company Fitshop GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Fitshop is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.



Europe's No.1 for Home Fitness



ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.

Due to ongoing changes and software optimisations, the manual may have to be updated. If you notice any discrepancies during assembly or use, please refer to the manual uploaded to the webshop. The latest manual is always available there.



This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Training devices must be classified according to accuracy and use. Accuracy classes are only applicable to devices that display training data.

Accuracy classes

Class A: high accuracy. Class B: medium accuracy. Class C: low accuracy.

The use classes explain the intended use of the training device.

Use classes

Class S (studio): professional and/or commercial use.

These training devices are intended for the use in training rooms of facilities such as sports clubs, school facilities, hotels, clubs and studios whose access and supervision is specifically regulated by the owner (person with legal responsibility).

Class H (home use): use at home.

These stationary training devices are intended for the use in private homes where access to the training device is regulated by the owner (person with legal responsibility).



Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

ATTENTION

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

CAUTION

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

↑ WARNING

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

↑ DANGER

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

(i) NOTICE

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.



1.1 Technical Data

Programmes in total: 5

Automatic timer: 15 Minutes

Power input: 220 - 240 V, 50-60 Hz

Power consumption: 60 W

Dimensions and Weight

Article weight (gross, incl. packaging) approx.: 13.75 kg

Article weight (net, excl. packaging) approx.: 12 kg

Package dimensions (L x W x H) approx.: 46 cm x 45 cm x 50.5 cm

Set-up dimensions (L x W x H) approx.: 43 cm x 40 cm x 48 cm

Maximum user weight: 100 kg (without massage function)

Class:



1.2 Personal Safety

↑ WARNING

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. This applies in particular to:
 - + People with pacemakers or other medical devices that can cause electromagnetic interference.
 - + People with cardiovascular diseases.
 - + Pregnant women, sick persons or persons in poor physical condition.
 - + People who are advised against massages due to pre-existing conditions (e.g. vascular diseases or dermatitis).
 - + People suffering from osteoporosis, a vertebral fracture or other acute illnesses.
 - + People with an irregular curvature of the spine.
 - + People who suffer from impaired perception due to a peripheral circulatory disorder (e.g. diabetes).
- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + The equipment is strictly for use by one person at a time.
- + The owner must communicate all warnings and instructions to the user.
- + Do not use the device with covers or pillows. The device may overheat, resulting in electric shocks, fires and/or personal injuries.
- + Do not use the device in rooms where aerosol sprays or oxygen are administered.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + Do not use the device on swollen and/or inflamed parts of the body or on irrated skin regions.
- + Do not use the device on aching parts of the body for which the cause of pain has not been determinded.
- + Should you experience unusual discomfort during the use, switch the device off and do not use it any further. Get in contact with a doctor.
- + Use a soft massage programme for your first use. Avoid massage sessions of more than 15 minutes and do not massage one spot for more than 5 minutes at a time. Excessive massages can lead to overstimulation of the muscles and nerves and result in injuries.
- + If the device or power cable happens to be damaged, refrain from using the device.

CAUTION

- + Use the device when seated.
- + Use the device in a relaxed posture. Do not apply pressure to specific areas of the body when the rollers are in motion.

ATTENTION

+ Do not insert any objects of any kind into the openings of the device.



1.3 Electrical Safety

↑ DANGER

+ In order to reduce the risk of an electric shock, always unplug the equipment from the mains socket immediately after your workout, before assembly or dismantling, and before maintenance or cleaning. Do not pull on the cable.

MARNING

- + Do not leave the equipment unattended while the mains cable is plugged into the mains socket. During your absence, the mains cable must be removed from the mains socket to prevent improper use by third parties or children.
- + If the mains cable or plug is damaged or defective, contact your contract partner. Until repair, the equipment must not be used.

ATTENTION

- + The equipment requires a mains connection of 220-240 V with 50/60 Hz mains voltage.
- + The equipment may only be connected directly to an earthed socket using the supplied mains cable. Extension cables must conform to VDE guidelines. Always completely unwind the mains cable.
- + The socket must be protected by a fuse with a minimum fuse rating of "16 A, slow blow".
- + Do not make any changes to the mains cable or the mains plug.
- + Keep the mains cable away from water, heat, oil and sharp edges. Do not route the mains cable underneath the equipment or under a carpet or rug, and do not place any objects on top of it.
- + Do not remove the power cable before the device has been switched off.



1.4 Set-Up Place

↑ WARNING

- + Do not place the equipment in main corridors or escape routes.
- + To avoid fires, do not place the appliance near or in rooms with high heat (e.g. near a heater).

CAUTION

- + Choose the place in which to set up the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.

ATTENTION

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.
- + To prevent the cover from fading or wearing out more quickly, do not place the unit in locations exposed to direct sunlight and/or high heat.



2.1 General Instructions

M DANGER

+ Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.

MARNING

+ Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.

CAUTION

- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.

► ATTENTION

+ To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.

(i) NOTICE

+ Ideally, assemble the equipment at its later set-up place.



2.2 Scope of Delivery


The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.


CAUTION

If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

(i) NOTICE

The device arrives assembled. An assembly is not neccassary.

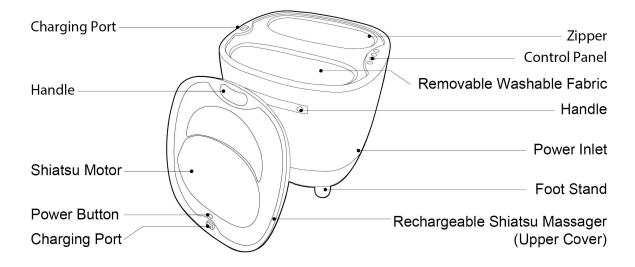

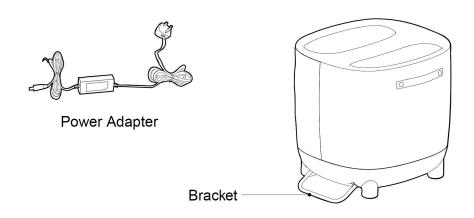



2.3 Assembly

(i) NOTICE

If you have difficulty recognising the graphics, we recommend that you open and/or download the PDF instructions stored in the webshop on your end device (e.g. smartphone, tablet or PC). There you have the option of zooming in closer. Please note that the Adobe Acrobat Reader programme must be installed on your end device in order to open the file.

- 1. Place the device on the flat floor.
- 2. Remove the Shiatsu cover off the device.
- 3. Plug the power plug into a wall outlet that complies with the instructions in the chapter on electrical safety.

► ATTENTION

The equipment must not be connected to a multiple socket, otherwise it cannot be guaranteed that the equipment will be supplied with sufficient power. Technical errors can result.


- 4. Take a seat on a chair and put your feet into the device.
- 5. Push the power button on the control panel and start your massage.

(i) NOTICE

The massage programmes will turn off automatically after 15 minutes.

- 6. Push the power button on the control panel and turn off the device.
- 7. Pull the plug out of the socket and let the device cool off.



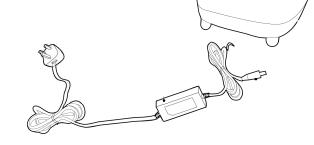

Shiatsu Massage

(i) NOTICE

- + The stool cover is intended for Shiatsu massages.
- + You can take your Shiatsu massage at the same time as your foot massage.
- 1. Remove the Shiatsu cover off the device.
- 2. Push the power button and start your massage.

(i) NOTICE

A Shiatsu massage on the back and abdomen is subject to the intended use. A massage on any other body part is purely a decisoin made by the customer. User discretion is advised.





3. Push the power button and turn off the device. Let the device cool off.

(i) NOTICE

The massage will turn off automatically after 15 minutes.

CAUTION

Do not touch the charging port of the stool cover as the power connect points may be hot.

(i) NOTICE

- + You may charge the Shiatsu cover by putting the cover on top of the massage stool. After a charging time of 2.5 hours the cover can be used for 2 hours straight. Battery charging indicator: red=charging, green=fully charged
- + Use the device as a stool by placing the Shiatsu cover on top of the stool.



Inner Cover

The inner covers are equipped with zippers to be be taken out of the device for cleaning. The covers can be washed by hand and machine washing.

ATTENTION

- + Wash the covers in 30°C water to prevent shrinkage.
- + Only use mild detergents (no benzenne, thinner or corrosive detergents).



NOTICE

Familiarise yourself with all the functions and setting options of the device before starting training. Have the proper use of this product explained to you by a specialist.

3.1 Preparation

Please note the following before use:

CAUTION

- + Do not use the device on bare skin.
- + Do not apply any lotion on your skin, neither before nor during a massage.
- + Avoid excessive intensity during massages on and around the neck.
- + The recommended massage time is 30 minutes per day.

3.2 Programmes

(h)	ON/OFF Turns the device on/off.
	AUTO MODE Choose among five automatic programmes:
	Programme 1: Airbag massage (blue light) Programme 2: Rolling and tapping massage (red light) Programme 3: Soft massage (green light) Programme 4: Moderate massage (purple light) Programme 5: Strong massage (white light)
-\\(\frac{\dagger}{\dagger}\)	HEAT Turns the heat on/off.
	INTENSITY Choose among massage intensity:
	Light (green light) Moderate (blue light) Strong (red light)
	SHIATSU COVER
	Heat massage: Push the power button for 2 seconds to activate the heat massage.
(U)	Massage direction: Push the power button again to change the massage direction. The massage direction changes automatically every one minute.
	Turn off heat massage: Push the power button again to turn off the heat massage.
	Turn off massage/device: Push the button again to turn off the massage. The device turns off.



4.1 General Instructions

↑ WARNING

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.

ATTENTION

- + Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.
- + Cover the device with a dustproof cover when the device isn't in use.



5.1 General Instructions

MARNING

+ Do not make any improper changes to the equipment.

CAUTION

+ Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

ATTENTION

+ In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

5.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

Fault	Cause	Solution
	Interrupted power connection	+ Check cable connection+ Power switch to on
The device does not	The automatic timer has expired	To switch the device on again, press the On/Off button
work	Excessive use of the device	Disconnect the device from the mains socket and allow the device to cool down for at least 60 minutes before using it again.

5.3 Error Codes and Troubleshooting

The electronics of the equipment continuously carries out tests. In case of deviations, an error code appears on the display and normal operation is stopped for your safety.

Please contact the contract partner for technical support.



5.4 Maintenance and Inspection Calendar

To avoid damage from body sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session. Pull the plug and make sure the device is cooled off before you proceed with the cleaning. Ensure that the device is completely dry before proceeding with the next training session.

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly	Quarterly	Half-yearly	Yearly
Display console	С	I			
Plastic covers	С	I			
Screws and cable connections		ı			
Legend: C = clean; I = insp	pect		-	-	

6

DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an electricals recycling centre. Further information can be obtained from your local authority's recycling service.



The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.



7.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 9 of this operating manual.

(i) NOTICE

The serial number of your equipment is unique. It's located on a white sticker.

Enter the serial number in the appropriate field.

Serial number:	

Brand / Category:

Taurus Wellness / massage stool

Model Name:

Taurus Wellness Foot Massage Stool Black

Taurus Wellness Foot Massage Stool Grey

Article Number:

TW-FMS-B/TW-FMS-G



7.2 Parts List


No.	Name	Qty.
1	Seat cushion cloth cover component	1
2	Backrest upper cover	1
3	Backrest Lower cover	1
4	Main borad	1
5	Upper cover	1
6	Foot iron component	1
7	Leg airbag sleeve	1
8	Button	1
9	Hand control board	1
10	Leg airbag bracket	1
11	Backrest motor assembly	1
12	Supporting feet	1
13	Left and right side panels	1
14	Foot reinforcement version	1
15	Shock absorber ring 1	1
16	Shock absorber ring 2	1
17	Big Air pumb	1
18	Double headed motor	1
19	Double gear cover	1
20	Roller	1
21	Eccentric wheel-1	1
22	Lampshade board	1
23	Air pump bracket	1
24	transmission shaft	1
25	Anti slip foot pads	4
26	Drive shaft fixing seat	1
27	Mainboard cover	1
28	660 angle support bracket assembly	1
29	Left side of calf strengthening plate metal plate	1
30	Seat cushion switch button	1
31	Base	1
32	Knead cloth retaining ring	1



		1
33	Vibration component	1
34	Motor component	1
35	Shoe cover component	1
36	Backrest motor component	1
37	Mainboard	1
38	Upper cover contact plate (Hall)	1
39	Seat cushion power indicator light board	1
40	Closing the lid and closing the positioning board (Hall)	1



7.3 Exploded Drawing

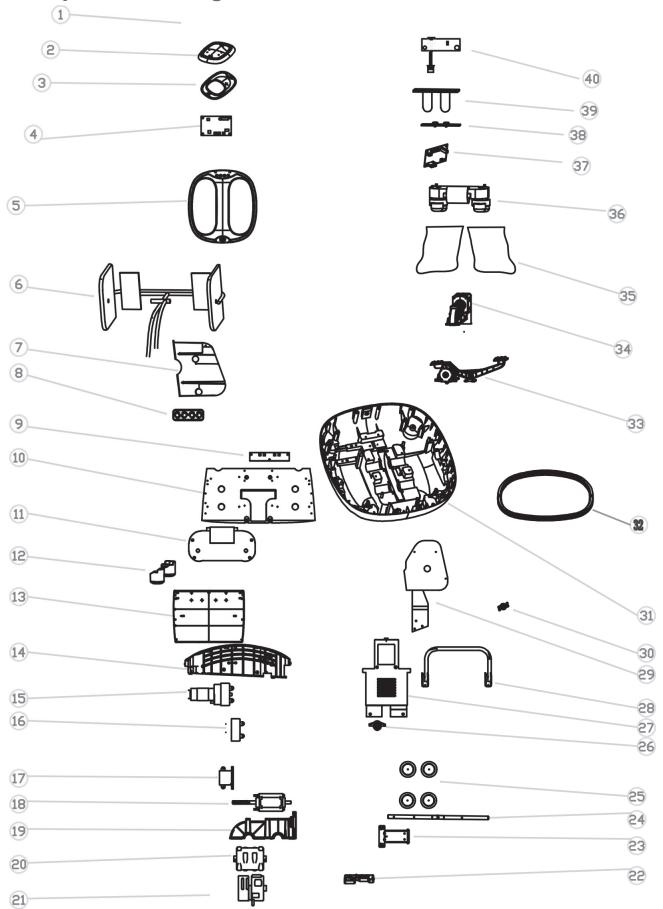



Products from TAURUS Wellness® are subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

Error Descriptions

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

Your statutory rights are not affected.

Warrantee

The warrantee is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

Warranty period

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

Repair Costs

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warrantee personally and are not a part of repair. After the expiration of the warranty period, the responsibility for parts costs, repair costs, installation costs and delivery costs lies with the warranty holder.

The terms of use are defined as follows:

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

Warranty Service

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.



Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.



DE	DK	UK
TECHNIK	TEKNIK OG SERVICE	CUSTOMER SUPPORT
+49 4621 4210-900 +49 4621 4210-698 technik@fitshop.de Offnungszeiten entnehmen Sie unserer Homepage.	80 90 16 50 +49 4621 4210-945 info@fitshop.dk hjemmesider kan findes på hjemmesiden: https://stg.fit/statit7	 ♦ 00800 2020 2772 +494621 4210 944 ▶ info@fitshop.co.uk ♠ You can find the opening hours on our homepage: https://stg.fit/statitc
SERVICE		25
© 0800 20 20277 (kostenlos)	FR TECHNIQUE & SERVICE	BE TECHNIQUE & SERVICE
 ○ 04621 4210 - 0 ☑ info@fitshop.de ☐ Öffnungszeiten entnehmen Sie unserer Homepage: https://stg.fit/statita 	+33 (0) 189 530984 +49 4621 42 10 933 info@fitshop.fr Vous trouverez les heures d'ouverture sur notre site Internet: https://stg.fit/statit4	 Color of the color of the colo
ES	NL	INT
TECNOLOGÍA Y SERVICIOS	TECHNISCHE DIENST & SERVICE	TECHNICAL SUPPORT & SERVICE
 ♀ 911 238 029 ☒ info@fitshop.es Consulta nuestro horario de apertura en la página web: https://stg.fit/statit5 	+31 172 619961 service@fitshop.nl De openingstijden vindt u op onze homepage: https://stg.fit/statit3	+49 4621 4210-944 service-int@fitshop.de You can find the opening hours on our homepage: https://stg.fit/statita
info@fitshop.es Consulta nuestro horario de apertura en la página web:	service@fitshop.nl De openingstijden vindt u op onze homepage:	service-int@fitshop.de You can find the opening hours on our homepage:

Please find a detailed overview including address and opening hours for all stores of the Fitshop Group in Germany and abroad on the following website:

www.fitshop.com/en/stores




WE LIVE FITNESS

WEBSHOP AND SOCIAL MEDIA

Fitshop is Europe's largest specialist store for home fitness equipment with currently over 70 stores and one of the world's most renowned online mail order companies for fitness equipment. Private customers order via the 25 web shops in the respective national language or have their desired equpiment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

Fitshop offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.


Visit us also on our social media platforms or our blog!

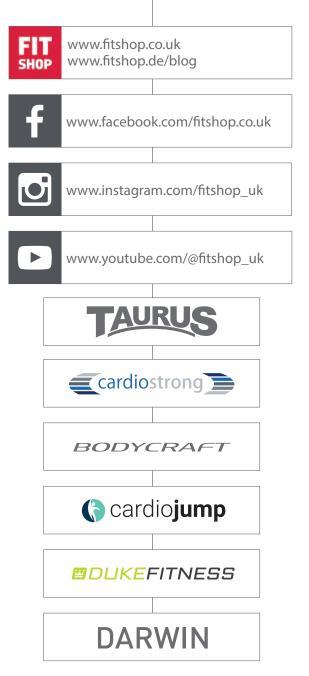



	\forall																									
		No	ote	S)												Н								\neg	
	\exists																									
	\dashv																Н								\dashv	
	\dashv																									
	\dashv																Н								\dashv	
	\dashv	-				Н		H									Н		Н				Н		-	_
	\dashv																								-	
		_																							\dashv	_
	_																									
						Ш		Ш									Ш					_	Ш			
								Ш									Ш		Ш				Ш			
																	Ш									
\Box																	\Box				İ			\Box	\neg	
	\dashv																									
	\dashv																								\neg	
								Н									Н		Н				Н			
	\dashv																H		Н					Н	\dashv	
	\dashv	-															Н								\dashv	
	\dashv	-															Н								\dashv	
	\dashv																								-	
		_		_																					\dashv	
								Щ											Щ				Щ		_	
_																										
Щ						Ш	Ш	Ш	Ш								Ш		Ш				Ш			
								Ш											Ш				Ш			
																	H				İ				\neg	
\dashv																	П							П	\neg	
\dashv								Н									H		Н				Н	Н	\dashv	
-						Н	Н	Н	Н	\vdash			\vdash	\vdash			H		Н				Н	Н	\dashv	
																									\dashv	
-																									-	
\vdash									\square										$\vdash \vdash$					\square	\dashv	



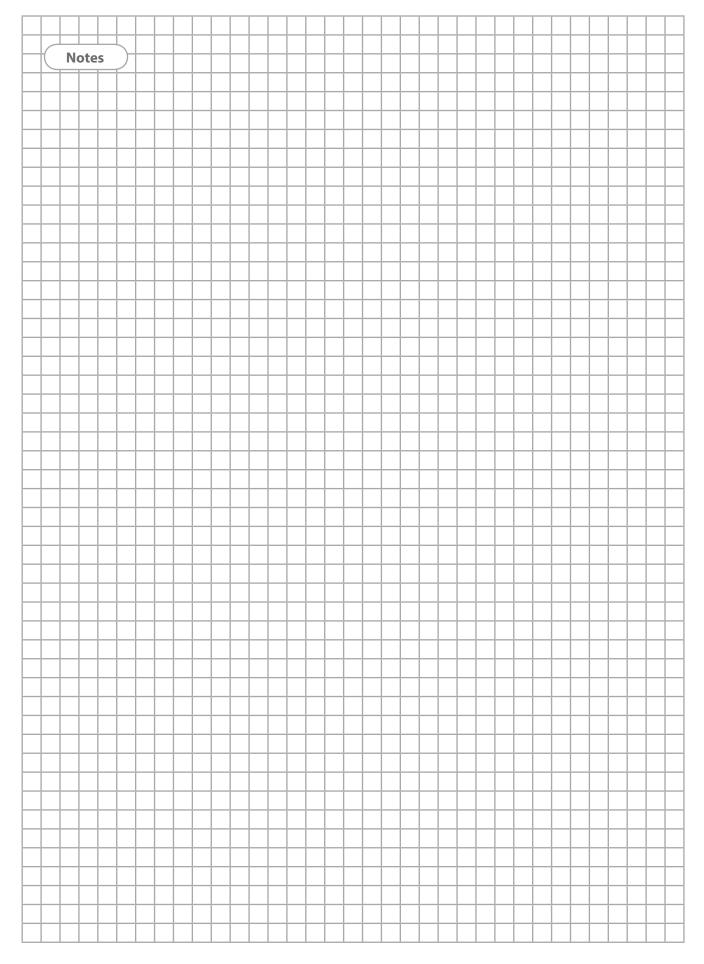



	Ne	ote	S	<u>}</u>																				
	Ne	ote	S								-					_	_	\rightarrow	_	-	_	_		_
							-																	
																						\exists		
																		T				一		Г
																						\neg		
+																						\dashv		
																						\dashv		
+																						\dashv		
+						Н				Н												\dashv		
+		H			Н	H		Н		Н				H				\dashv				\dashv	-	
+																						_		
+																								
+						H		Н														\dashv		
++					H	H		H						\vdash			-	\dashv	-	H		\dashv	\dashv	
++		Н			H	H		Н		H		-		Н	\vdash	\vdash		\dashv	_			\dashv	-	
+								Н			Н			Н								\dashv		\vdash
+																						_		
\dashv																						-		
$\dashv \dashv$					Н	Н				Н									-	H		\dashv	-	\vdash
+					Н	H		Н		Н								\dashv	-	H	\dashv	\dashv	-	\vdash
$\dashv \dashv$														-								\dashv		H
\dashv																						-		H
\dashv																						\dashv	_	H
$\dashv\dashv$																						\dashv	_	H
+								Ш														-		L
+																						-		L
\dashv																								L
\perp																						-		L
$\perp \perp$											Щ											-		
$\perp \perp$								Ш						Ш				_				_	_	L
$\perp \perp$														Ш								_		L
-																						_		
\perp																								
$\perp \perp$								Ш														_		
$\perp \!\!\! \perp \!\!\! \perp$								Ш						Щ				_				_		
$\perp \perp$		Щ						Ш	Щ		Щ			Щ								_		L
$\perp \perp$																						ļ		
$\perp \perp$																								
\perp						Ш		Ш																
																								L
$\exists \exists$																								
11																						\neg		





