

PELOTON

TREAD

USER MANUAL

TABLE OF CONTENTS

WARNINGS AND SAFETY INSTRUCTIONS	4
MEMBER SUPPORT	7
LABELS	8
NOTICES	10
CLEARANCES FOR OFF-TREAD VISION WORKOUTS	11
SPECIFICATIONS	12
SETTING UP THE PELOTON TREAD	16
GROUNDING INSTRUCTIONS	16
LOCATION REQUIREMENTS	17
LEVELING	18
MOVING THE TREAD	18
STORAGE	19
PLUGGING IN AND POWERING ON / OFF	19
MOUNTING	20
ADJUSTING THE TOUCHSCREEN	20
SAFETY KEY	21
USING THE PELOTON TREAD	22
CENTER BUTTON	22
INCLINE	22
SPEED	22

CONNECTING TO THE INTERNET	23
GETTING STARTED	24
LOGGING IN	24
TREAD LOCK	24
SELECTING A CLASS	25
CLASS TYPES	25
ADDING A PROFILE	25
CLASS SCREEN	26
MAINTENANCE AND CARE	27
MAINTENANCE SCHEDULE	27
CLEANING THE TREAD	28
ADJUSTING THE BELT TENSION	29
RUNNING HOME INSTALLER	29
ASSESSING BELT ALIGNMENT	31
POWER OFF THE PELOTON TREAD	32
LIMITED WARRANTY	33

 **WARNING:** Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference. The information in this manual may not reflect recent updates as we continue to improve our product.

For the latest version of the manual, please see onepeloton.com/manuals.

WARNINGS AND SAFETY INSTRUCTIONS

Set up and operate the Tread on a solid, level surface and in an area not accessible to children, pets, or anyone else who should not have access to the Tread.

People under the age of 16 and persons with reduced physical, sensory, or mental capabilities that impair the safe use of the equipment must not use the Tread. People over the age of 16 and persons with a lack of experience and knowledge must be given supervision or instruction before using the Tread.

Keep children, pets, and objects away from the Tread at all times. Never allow children of any age to play with or on the Tread.

Inspect the Tread for loose, worn, damaged, or incorrect parts before using. Do not use before parts are replaced, repaired, or tightened.

Always keep the running surface clean and dry.

Never operate the Tread if it isn't working properly, or if the power cord has been damaged. Keep power cord away from heated surfaces, sharp edges, and water.

Check before each use to ensure the power cord is not being pinched or trapped under the Peloton Tread support legs. The power cord must never pass under the Tread.

Ensure that the power supply is plugged into a dedicated outlet that supports 15 amps in the US and Canada, 13 amps in the UK, 16 amps in Germany, or 10 amps or more in Australia and complies with local building codes. Never plug any power cord directly into the Touchscreen.

The Tread power cord is a locking power cord and may not be replaced with any other power cord.

To reduce the risk of burn, fire, electric shock, or injury to persons, connect this appliance only to a properly grounded outlet. See the Grounding Instructions in this manual.

Users must not be under 105 lb/48 kg or over 300 lb/136 kg.

Make sure you have at least 78.7 in/2 m of clearance directly behind the Tread, and 24 in/60 cm of clearance on each side of the Tread. Keep the area around the Tread clear of furniture, equipment, and accessories.

Exposed moving parts can cause serious injury. Keep hands away from moving parts. Never touch the moving belt or reach under the Tread while it is powered on. Never put items under the deck.

Use only as described. Misuse of this equipment may result in serious injury or death. Peloton is not responsible for damage or injury caused by inappropriate use.

Read and follow all warnings, instructions, and procedures before using the Peloton Tread. It is the owner's responsibility to ensure that all users are aware of all warnings and precautions.

Keep the area around the Tread clear of furniture, exercise equipment or other objects, and abide by clearance requirements at all times.

Always use the Safety Key when using the Peloton Tread. After finishing your workout, always make sure the console has entered Tread Lock mode and always remove the Safety Key. Always store the Safety Key away from the Tread and out of the reach of children.

Keep the area surrounding the Safety Key and the Safety Key opening dry and free from moisture and don't use liquid cleaners. If the Safety Key, Safety Key opening or surrounding area are exposed to liquid (including cleaners or sweat) or appear wet or moist, dry the Safety Key and the surrounding area immediately. After drying, follow the directions in the Maintenance section of the User Manual to ensure the Safety Key is working properly.

Use caution when stepping on and off the Peloton Tread.

Be careful when mounting and dismounting. Never mount or dismount while the belt is moving. Use handrails for support, but avoid resting your whole weight on the handrails. Do not start the Tread before stepping onto the running surface.

Consult a physician before beginning a new fitness plan. Incorrect or excessive training can result in serious injury.

If you experience faintness, chest pain, or shortness of breath, stop exercising immediately and consult a physician.

Metrics on the screen, including heart rate monitoring, may be inaccurate. Use values for reference only.

Ensure that the power cable never passes under the Peloton Tread. Never operate the Tread if it isn't working properly, or if the power cord has been damaged. Keep the power cord away from heated surfaces and sharp edges. Always keep the power cable clean and dry. Sweat, spills, and other damage to the power cable may result in property damage or bodily harm.

The Tread is for indoor use only. Do not store or operate the Tread outdoors, at high humidity levels, or in damp or wet locations.

The Tread is designed for home use. Do not use in a commercial or rental setting.

Do not write down or share the Tread Lock passcode with people under the age of 16 or persons with reduced physical, sensory or mental capabilities that impair the safe use of the equipment.

Familiarize yourself with emergency stop procedures before using the Tread.

To prevent personal injury, do not wear loose or dangling clothing while using the Tread. Keep towels and loose clothing away from the belt. Make sure your shoelaces don't extend past the soles of your shoes.

Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

If an error occurs during operation, the Tread belt may come to a gradual or sudden stop, depending on the error and your speed. Always remain alert while using the Tread.

Use only original parts from Peloton.

Unauthorized changes or modifications to this equipment could damage the Tread and impair its operation.

Do not attempt to service the Tread yourself other than performing the basic maintenance described in this manual. Service other than basic maintenance should be performed by authorized personnel.

Do not attempt to **move** or **transport** the Tread with fewer than two people.

Cleaning:

- Always switch power off, unplug the Tread, and remove the Safety Key before cleaning and when the Tread is not in use.
- Do not soak or spray Tread surfaces with liquid. Clean using a damp cloth.

**SAVE THESE
INSTRUCTIONS.**

MEMBER SUPPORT

Member satisfaction is a top priority for Peloton. If you require assistance or are experiencing issues with your Peloton Tread, please contact Support for additional help.

support.onepeloton.com

business.onepeloton.com/support

When you contact member support, have the following information ready:


- 1 Tread ID/serial number*
- 2 Purchase Date
- 3 Your order number or the email address associated with your Tread purchase

* To access the Tread ID/serial number from the touchscreen, tap the menu icon at the lower right, and select **About**.

LABELS


Familiarize yourself with all warnings on the Tread before use.

If any label is damaged or lost, contact member support for a replacement immediately.

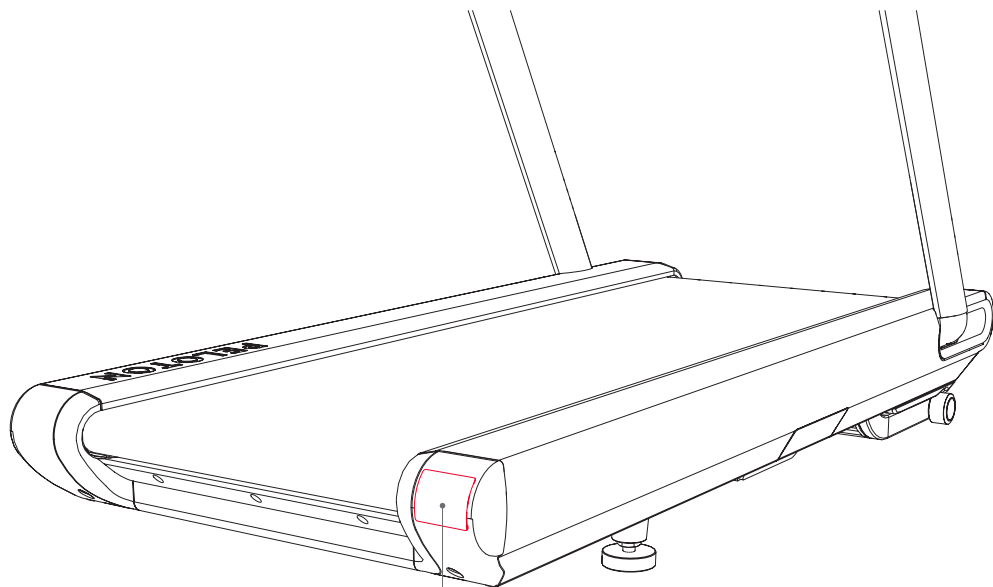

⚠ WARNING:

Exposed moving parts can cause injury. Keep clear. • People under 16 may not use the treadmill. Keep children and pets away from the treadmill at all times. • Keep the area around and behind the treadmill clear. • Keep shoelaces, towels, and loose clothing away from the running surface.

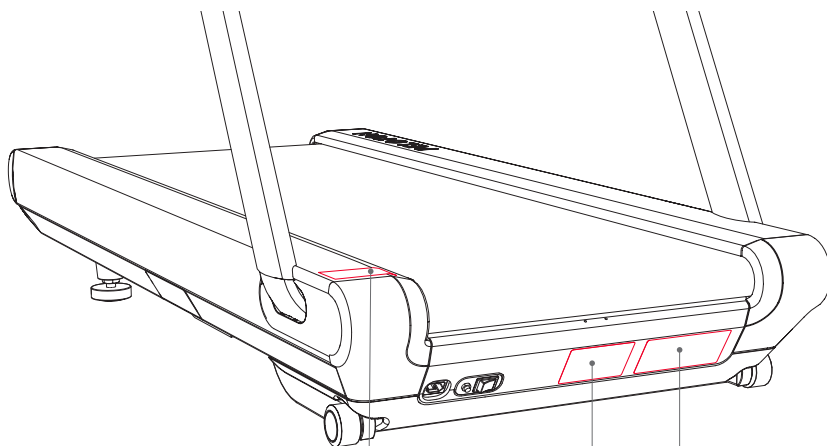

⚠ WARNING:

Keep young children away from this machine at all times. Contact with the moving surface may result in severe friction burns.

Product Label here:

The serial number on the Product Label indicates this unit's date of construction. For example, 'RAIDP1200417xxxx' would mean that the unit was constructed on 17 April 2020.

⚠ WARNING:

Misuse of this equipment may result in serious injury or death. • Read and understand the user manual prior to use. • Follow all warnings and instructions in the manual and on the equipment. • Keep the area surrounding the Safety Key and the Safety Key opening dry and free from moisture and don't use liquid cleaners. If the Safety Key, Safety Key opening or surrounding area are exposed to liquid (including cleaners or sweat) or appear wet or moist, dry the Safety Key and the surrounding area immediately. After drying, follow the directions in the Maintenance section of the User Manual to ensure the Safety Key is working properly. • Unplug the treadmill and remove the safety key before servicing and when it is not in use. Always store the safety key away from the treadmill and out of the reach of children. • Do not share the Tread Lock passcode with people under the age of 16 or others who should not use the Tread. • Inspect the equipment before use. Do not use if it is worn or damaged. • Exposed moving parts can cause injury. Keep clear. • Use caution when stepping on and off the treadmill. • If you feel faint or dizzy, or experience pain while exercising, stop immediately. • User weight must not exceed 300 lb/136 kg. • Do not touch moving parts. Keep shoelaces, loose clothing, and accessories away from the running surface. • Metrics on the screen, including heart rate monitoring, may be inaccurate. Use values for reference only. • For consumer use only.

NOTICES

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device must not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1 Reorient or relocate the receiving antenna.
- 2 Increase the separation between the equipment and receiver.
- 3 Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- 4 Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

- 1 To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.
- 2 This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
3. Changes or modifications to this device not expressly approved by Peloton Interactive, Inc., could void the user's authority to operate this equipment.



Waste electrical products must be handed over to a designated collection point for disposal to be recycled in an environmentally sound manner. Improper disposal of this product could result in harm to the environment or to human health. Check with your local waste authority or the retailer where you purchased this product for available collection facilities or further recycling advice.

Please avoid the generation of waste from electrical products as much as possible, e.g. by giving preference to products with a longer service life or by reusing used electrical products instead of disposing of them.

You are responsible for deleting any personal data from this product before disposing of it.



DISTRIBUTED BY:

US/CANADA (MANUFACTURER)

Peloton Interactive, Inc.
441 9th Ave, 6th Floor
New York, NY 10001
USA

UK

Peloton Interactive UK Limited
1 Langley Street
London WC2H 9JG
United Kingdom

DE


Peloton Interactive Deutschland GmbH
Karl-Liebknecht-Straße 29A
10178 Berlin
Germany

AUSTRALIA

Peloton Interactive Australia Pty Ltd
The Commons
32 York Street
Sydney NSW 2000
Australia

CLEARANCES FOR OFF TREAD VISION WORKOUTS


The Tread Vision screen features an embedded camera with movement tracking and form feedback features. Below are the recommended distances for off Tread Vision workouts depending on where the camera is pointed.

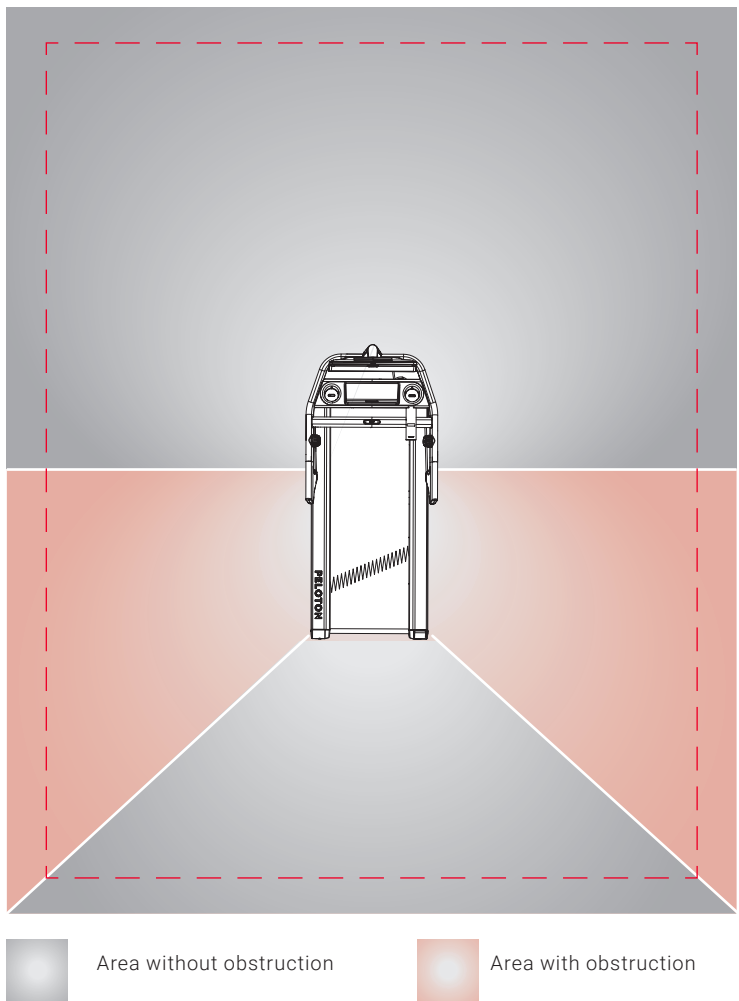

- Off Tread Vision workout recommended distances:
- At least 2 ft away for areas without obstruction
 - At least 4 ft away for areas with obstruction
 - Within 6.5 ft in all cases

SPECIFICATIONS

- | | | |
|------------------------|------------------------------|-----------------------|
| A Screen | H Upright Bolt Covers | M Upright Caps |
| B Phone Tray | I Heel Covers | N Speed Knob |
| C Cup Holders | J Leveling Feet | O Safety Key |
| D Handrail | K Plastic End Caps | P Incline Knob |
| E Power Cord | L Deck | |
| F On/Off Switch | | |
| G Uprights | | |

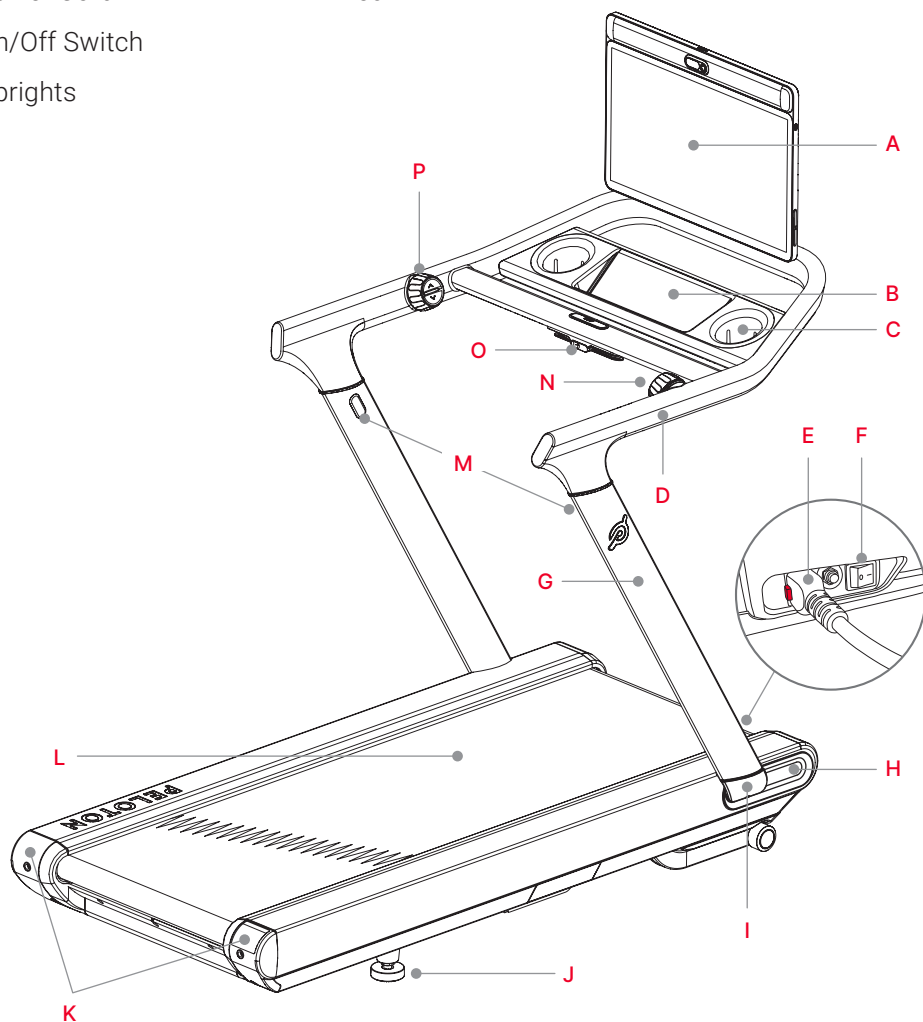


Q Camera
R Power Button


S Volume
T USB-C Power/Data Port

U Neck
V Back Panel

SCREEN FRONT VIEW

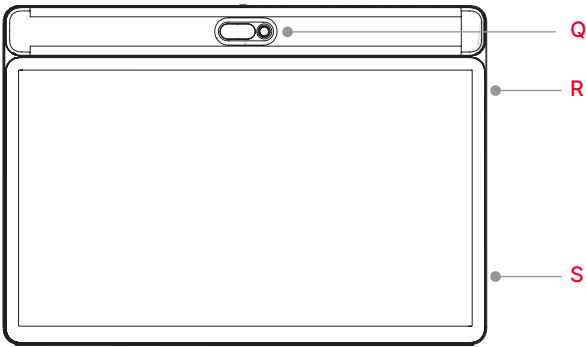

SCREEN REAR VIEW

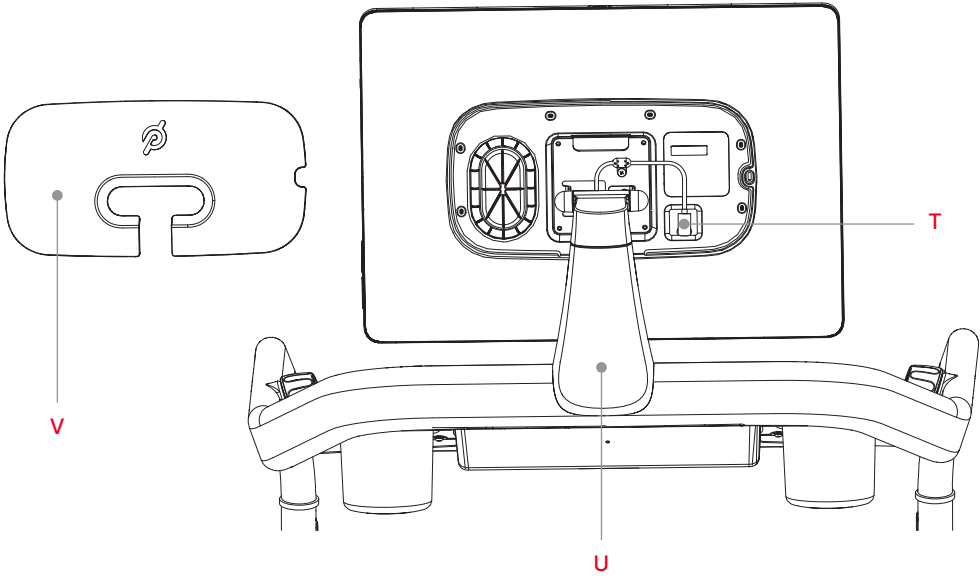

DIMENSIONS

Total: 68 in L x 33 in W x 66 in H (173 cm L x 84 cm W x 168 cm H)

Screen: 24 in/61 cm diagonal

Belt: 59 in L x 20 in W (150 cm L x 51 cm W)

Step-up height: 8 in/20 cm

Weight: 316 lbs/ 143 kg

TECHNOLOGY

Screen: 1080p HD touchscreen

USB-C network/charging port

User Controls:

Speed and Incline knobs with up and down arrow buttons

On-screen speed and incline shortcuts

Volume up/down controls

Sound:

NM 72.5 x 42.9 x 23.9H (mm) racetrack driver

NM 127 x 80 x 38.5H (mm) driver

103±3dB: 400-1.5Khz

103±3dB: 150-400Hz

THD: 5% @10KHz

THD 5% 150-400Hz

Weighted emission sound pressure at runner's ear: <65dbA*

*Noise emission under load is higher than without load.

Connection:

Wi-Fi® 802.11 a/b/g/n/ac/ax

2x2 DB MIMO

Bluetooth® 5.2

PERFORMANCE

Speed: 0-12.5 mph/0-20 kph

Incline: 0-12.5% grade

Motor: 3 HP DC*

Screen Adjustment: 0-50 degree vertical tilt

Screen Adjustment: 180 degrees horizontal swivel in both directions

Safety: Removable Safety Key

Power Requirements:

AU models : 230V 50Hz, 10A

US/Canada models : 120Vac, 60Hz, 12A

UK/Germany models : 230V 50Hz, 10A

CAUTION: The Peloton Tread is designed to meet the specific power requirements for each country of sale. Although the Tread is supported in multiple countries, Members moving from one supported country to another are advised to check the power requirements of the Peloton Tread with those of the other country in order to avoid damaging the Tread. For example, a Tread sold in the US has different power requirements than the Treads sold in the UK and cannot be used interchangeably in either region.

USER REQUIREMENTS

Height: 4 ft 11 in - 6 ft 4 in/150 - 193 cm

Weight: 105 - 300 lb/48 - 136 kg

Age: 16 years or older

POWER CONSUMPTION

Networked Standby Mode:

Power Consumption: 1.9W

Power consumption with all interfaces connected: 1.9W

Time to enter Standby Mode: 20 mins of inactivity

Off Mode:

Power Consumption: 0.0W

Time to enter Off mode: N/A; Turn off equipment using power switch

* Horsepower (HP) ratings are certified by the motor manufacturer and provided to consumers for comparison purposes. The rating does not reflect the actual operating power of the treadmill. Many factors affect actual operating power and the treadmill does not operate at the rated HP.

SETTING UP YOUR TREAD

⚠ WARNINGS AND SAFETY INSTRUCTIONS

Keep the area around the Tread clear of furniture, exercise equipment or other objects, and abide by clearance requirements at all times. Never put anything under the Tread or reach under the Tread while it is powered on.

Comply with all local codes and ordinances for electrical installation when installing the Tread. Consult an electrician if you are not sure whether your outlet can support the Tread.

Do not use extension cords or adapters. Do not attach other appliances to the same circuit. If no suitable outlet is available, contact an electrician.

Changes or modifications to this unit not expressly approved by Peloton could result in damage to the Tread, or cause injury to the user.

Use a dedicated, grounded circuit capable of carrying 15 or more amps (US/CAN model), 13 or more amps (UK model), 16 or more amps (DE model), or 10 or more amps (AU model). If the circuit is not properly grounded there is a risk of electric shock.

Never put anything under the Tread or reach under the Tread while it is powered on. Keep the area around the Tread free of obstructions.

GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord that has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed

and grounded in accordance with all local codes and ordinances.


⚠ DANGER: Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product – if it will not fit in the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit in the US and a nominal 230-volt circuit in the AU/DE/UK. Grounding plugs and sockets look like the ones pictured here.

WARNING: Make sure that the product is connected to an outlet having the same configuration as the plug. Do not use an adapter with this product.			
COUNTRY	GROUNDING PLUG	GROUNDING SOCKET	TYPE RATING
US/CANADA			Type B 120V/60Hz
UK			Type G 230V/50Hz
AUSTRALIA			Type I 230V/50Hz
EU (DE/AT)			Type E/F (CEE 7/7) 230V/50Hz

LOCATION REQUIREMENTS

- Make sure you have at least 78.7 in/2m of clearance behind the Tread and 24 in/60 cm of clearance on each side of the Tread.
- Install the Tread in an area not accessible to children or pets.
- Always keep the area around the Tread clear of exercise equipment, furniture and other objects.
- Store the Tread in a dry, indoor area.
- Install the Tread on a hard, flat, stable surface. Avoid high pile carpets. If you put a mat under the Tread, choose a hard, thick mat that won't curl up or interfere with the incline mechanism.
- Bootcamp and Floor classes take place off or partially off the Tread. Make sure that you have adequate space to work out behind or alongside the Tread.
- The Tread deck can incline to a height of 15 in/38 cm. Make sure that the area above your Tread is free of obstructions and that the ceiling height is at least 20 in/51 cm greater than the height of your tallest Tread user.
- Make sure the Tread is situated within 5 ft/152 cm of an outlet. The provided power cord must be able to reach the outlet at minimum and maximum incline, with some slack. The power cord must never pass under the Tread.


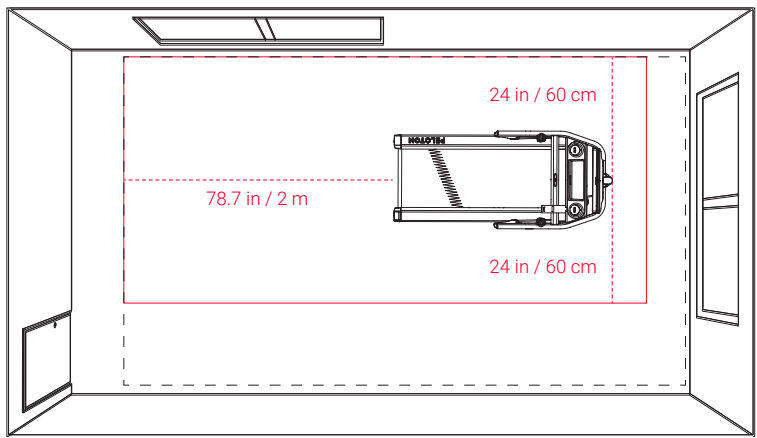


- Tread required clearance
- Tread workout footprint: 10 ft/3 m long x 6 ft/2 m wide
- - - - - Tread bootcamp workout footprint: 10 ft/3 m long x 8 ft/2.5 m wide

LEVELING

If the Tread rocks or wobbles, stabilize it by adjusting the back feet. **If it is stable and level, skip this step.**

- 1 Use a 27mm wrench or an adjustable wrench to loosen the nut at the top of each back leg.
- 2 Turn one or both feet clockwise until all feet rest firmly on the ground.
- 3 Tighten the locking nuts.

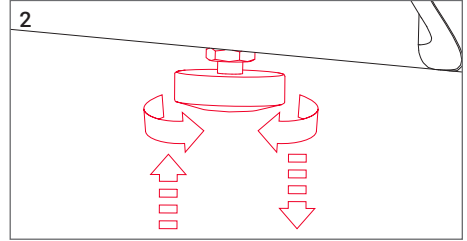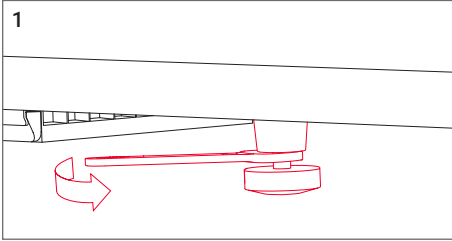


MOVING THE TREAD

⚠ WARNING: Do not attempt to transport the Peloton Tread with fewer than two people. These instructions are only to be used when moving the Tread within the same room. Moving the Tread from room to room or to another location requires disassembly.


- Make sure to power down and unplug the Tread before moving it. You will need to press the red button on the top of the cord to remove it. **CAUTION:** Failure to unplug the power cord from the Tread base when moving can damage the Tread base and power cord.
- One person stands at front, holding the handrail.
- One person lifts from the back.
- Tilt the Tread forward.
- Slowly and carefully roll the Tread backwards or forwards.

For more information on transporting the Tread to a new location, contact member support.

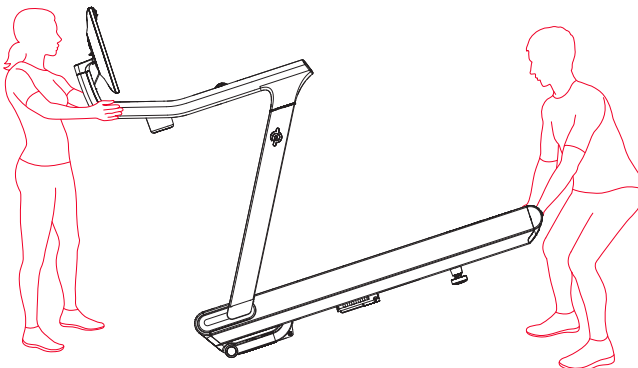

STORAGE

- Store the Tread in a dry, indoor area.
- Remove the Safety Key and store it in a separate location when the Tread is not in use.
- To reattach the Safety Key, fit the magnet into the notch under the center button. Wrap the cord around the cleat twice and place the clip on the magnet.

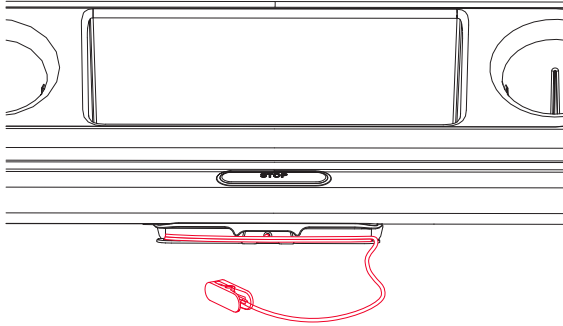



PLUGGING IN AND POWERING ON

⚠ WARNING: Always switch power off, unplug the Tread, and remove the safety key before cleaning and when the Tread is not in use.

- 1 Plug in the locking power cord. Make sure it is fully seated.
- 2 Switch the Tread on.
- 3 Press the center button to wake the Tread.


POWERING OFF

- 1 Press and hold the center button.
- 2 Switch the Tread off.

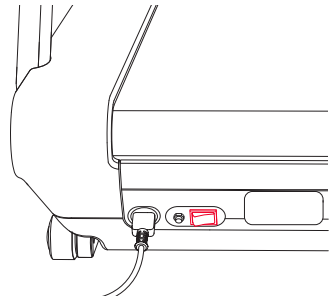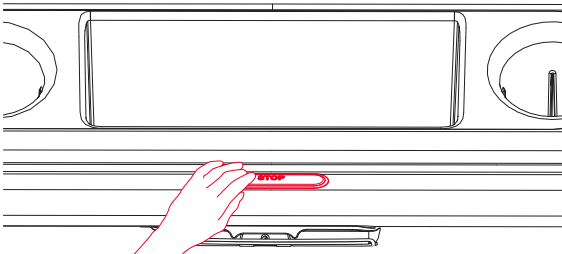


MOUNTING

⚠ WARNING: Do not start the Tread before stepping onto the running surface. Step onto the Tread from the rear, using handrails for balance. Avoid putting your full weight on the handrails.

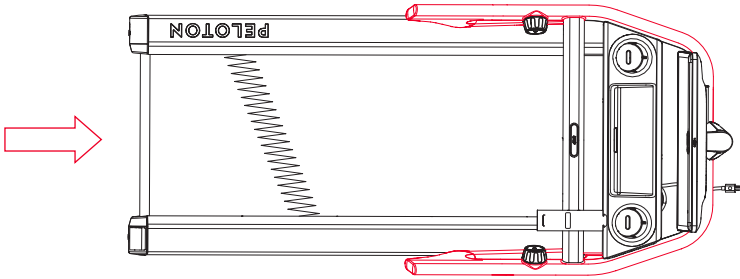

ADJUSTING THE TOUCHSCREEN


- Hold the top and bottom of the screen and tilt back or forward.
- Hold the left or right side of the screen to tilt left and right.

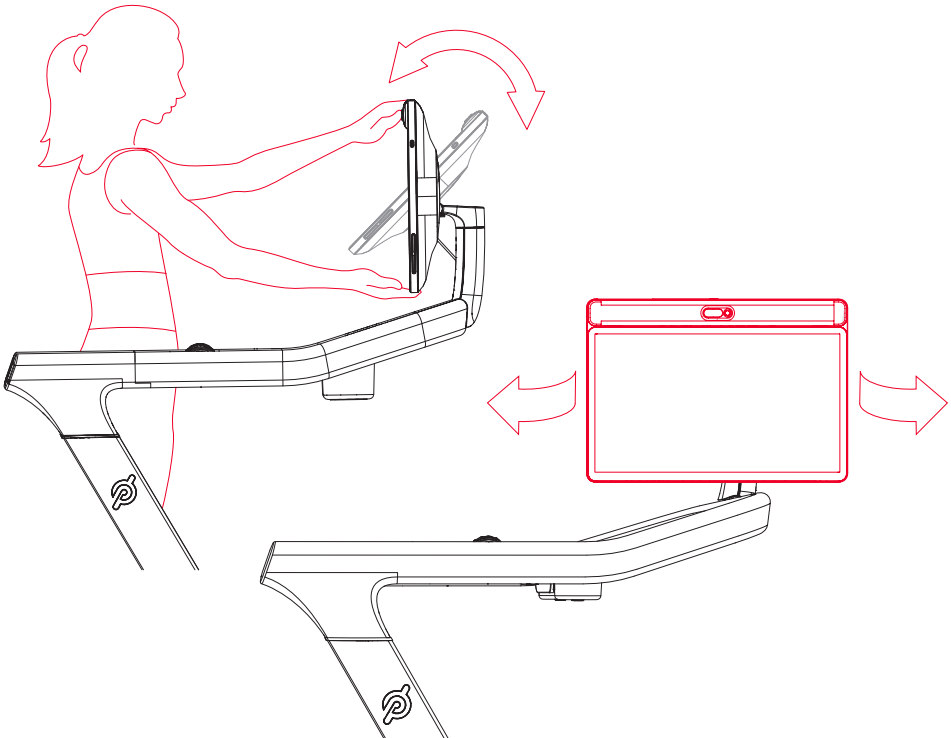

SAFETY KEY

⚠ CAUTION: The Tread will function only when the Safety Key is present and fully engaged. Do not lose the Safety Key. Always store the Safety Key away from the Tread and out of reach of children. Detach the magnetized clip from the center rail and clip it to a tight-fitting piece of clothing.

- If the Safety Key is detached, the belt will immediately stop moving and the Tread will lock.
- The Tread will be disabled until the Key is reattached.
- To start running again, reattach the Safety Key.
- Always remove the Safety Key and store it in a separate location out of the reach of children when the Tread is not in use.
- To reattach the Safety Key, insert the magnet end into the gap under the center button, wrap the cord around the groove on the center button, and place the clip next to the magnet.

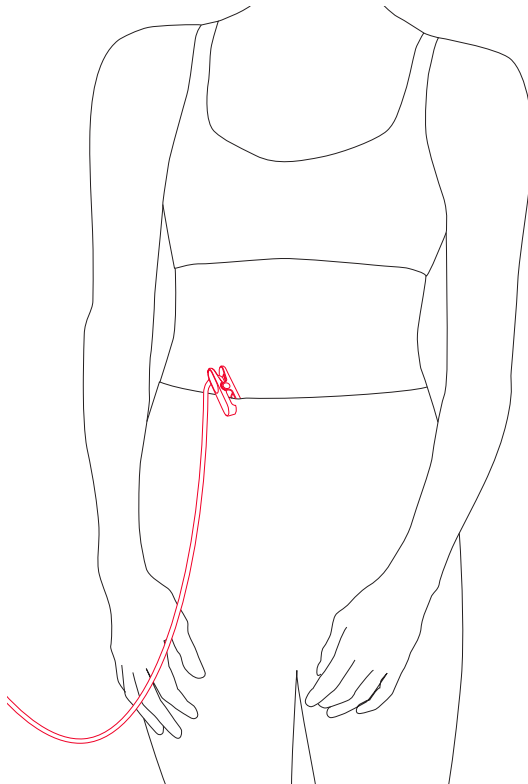


USING THE TREAD

⚠ WARNING: Do not start the Tread before stepping onto the running surface. Step onto the Tread from the rear, using handrails for balance. Avoid putting your full weight on the handrails.

CENTER BUTTON

- When the running surface is in motion, press to stop.
- When the Tread is powered on, but inactive, press to wake.
- When the Tread is active, press and hold for three seconds to sleep.

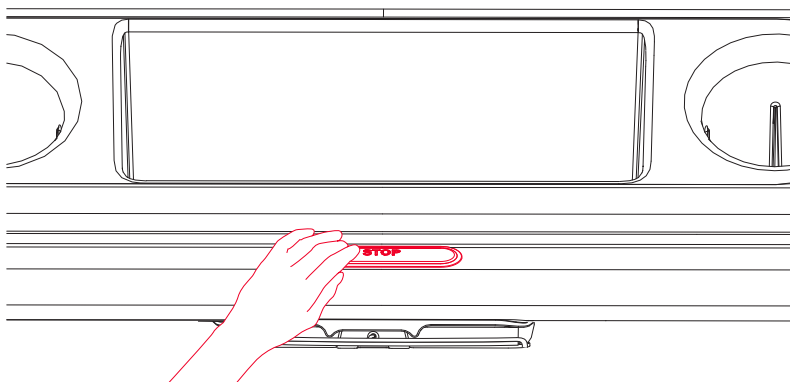


INCLINE (Left Knob)

- Turn knob forward to increase incline in increments of 0.5 percent grade.
- Turn knob backward to decrease incline in increments of 0.5 percent grade.
- Press the up button to increase incline to the next whole percent grade, press down button to decrease the incline to the next whole percent grade.
- Tap **Incline** to change incline using onscreen shortcuts.
- Tap the screen and select **Customize Shortcuts** to put in your own shortcut incline settings.

SPEED (Right Knob)

- Turn knob forward to increase speed in increments of 0.1 mph.
- Turn knob backward to decrease speed in increments of 0.1 mph.
- Press the up button to increase speed to the next whole mph. Press the down button to decrease speed to the next whole mph.

- Tap **Speed** to change your speed using onscreen shortcuts.
- You can enable kilometer metrics in **Settings**; however, the knobs will continue to adjust your speed only by 0.1 mph.
- Tap the screen and select **Customize Shortcuts** to put in your own shortcut speeds.

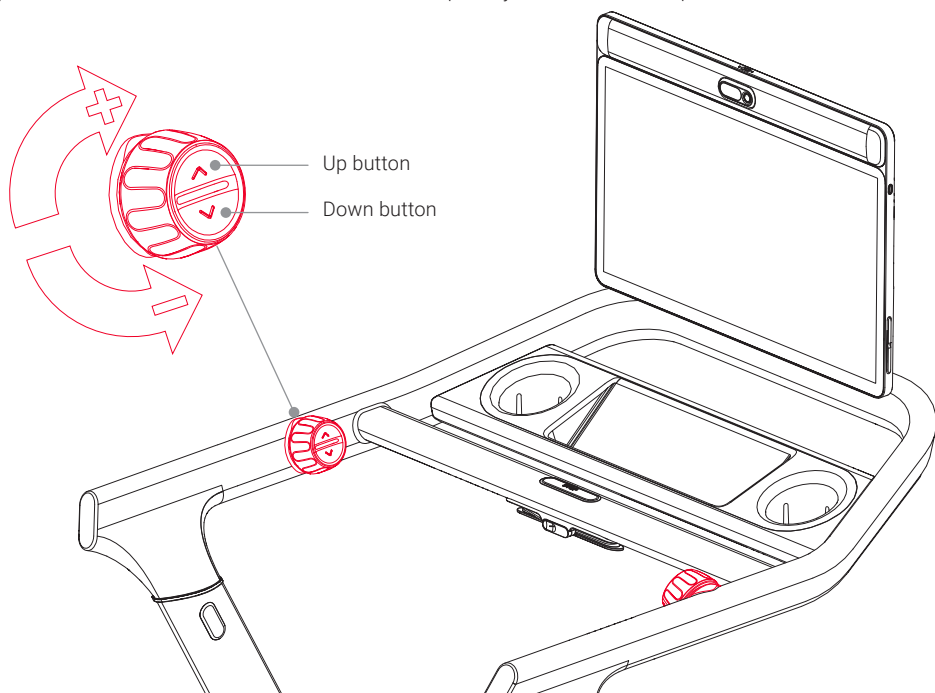

CONNECTING TO THE INTERNET

- Select your Wi-Fi® network and enter the password. Tap Connect.
- If a Wi-Fi network is not available, you can connect to a wired network. Use an adapter to connect an Ethernet cable to the network port on the back of the touchscreen. The Tread will connect to the network automatically.
- To turn off Wi-Fi, tap the upper right corner of the touchscreen and select Wi-Fi. On the Wi-Fi screen, toggle the radio button at the upper right.

⚠ CAUTION: Ethernet cable must not pass underneath the Tread or touch the running surface.

GETTING STARTED

LOGGING IN

- When logging in for the first time, please have available your Subscription Activation Key or the login information you set up when you purchased the Peloton Tread.
- Once a subscription is activated and associated with this Tread, any user can log in and access subscription content.


TREAD LOCK

⚠ WARNING: Hide the Tread Lock passcode from people under the age of 16 or persons with reduced physical, sensory or mental capabilities that impair the safe use of the equipment.

- Tread Lock is an additional safety feature that requires a passcode to unlock the Tread.
- Setting up a 4-digit passcode will be required when using your Tread for the first time. All users will be required to enter this passcode after 45 seconds of inactivity except during a workout.

NOTE: all user profiles associated with the Tread will be required to enter the same 4-digit passcode. To change an existing passcode:

- Tap the ... icon at the bottom right of the home screen and select Tread Lock.
- Follow the prompts to reset the 4-digit passcode.
- If you forget the Tread Lock passcode, you can reset it by going to support.onepeloton.com and following the instructions for passcode reset.

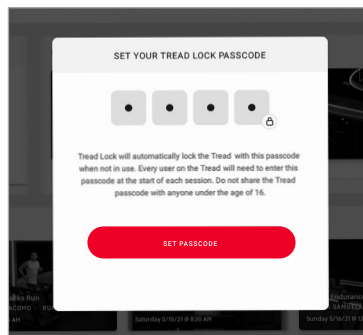

SELECTING A CLASS

- Select live classes from the schedule or choose from on-demand classes.
- Filter by instructor, class length, class type, and more.
- Your instructor will guide you through your workout. If the workout does not include a warmup and cooldown, warmup and cooldown classes are available separately.
- Select More for a Scenic Run or Just Run experience.

CLASS TYPES

Peloton's schedule includes a variety of different kinds of classes. Class types may include the following:

- Running/Walking: cardio-focused classes taking place entirely on the Tread.
- Bootcamp: a combination of cardio segments taking place on the Tread and strength segments taking place off the Tread.
- Strength/Yoga/Cardio: classes taking place off the Tread.
- For more information on classes, go to onepeloton.com/tread/classes.

ADDING A PROFILE

To let another person use your Tread, tap the icon next to your username at the lower left of the screen and select **Add/Remove Profiles**. The new user can log in with an existing Peloton account or tap **Create an Account** to set up a new one.

CLASS SCREEN

- A** TIME REMAINING

Time remaining in the class
- B** HEART RATE

Heart rate is measured when you connect a heart rate monitor
- C** TIMELINE

Your Timeline shows class segments and your progress within the class
- D** LEADERBOARD

The Leaderboard shows all participants in a class


Filter by Friends, Tags, or users who are Here Now
- E** TOTAL OUTPUT
- F** INCLINE

Your current Incline, in percent grade
- G** OUTPUT

Your Output, in watts, is a combination of Speed and Incline
- H** PACE

Your current Pace, in minutes per mile
- I** SPEED

Your current Speed

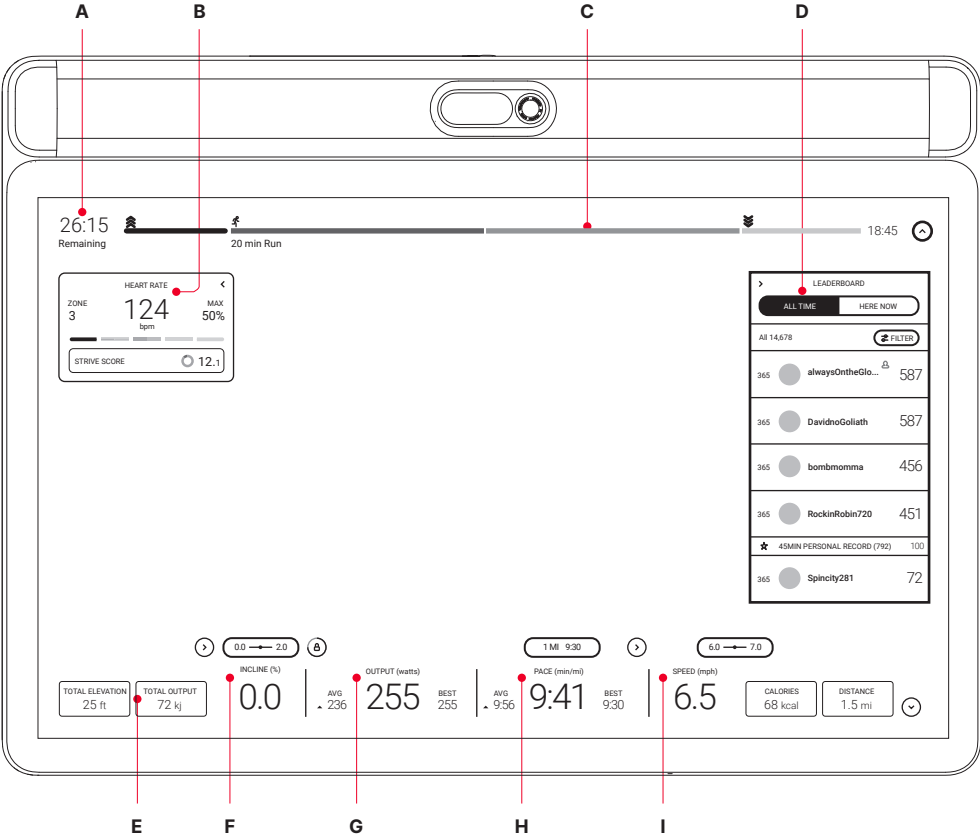

> < ^ v = TAP ELEMENTS TO HIDE OR REVEAL

⚠ WARNING: Heart rate monitoring systems may be inaccurate. Over-exercising may result in serious injury or death. If you feel faint stop exercising immediately. Use metrics on the screen for reference only.

MAINTENANCE AND CARE

⚠ WARNINGS AND SAFETY INSTRUCTIONS

Always power down and unplug the Tread before cleaning or performing maintenance.

The safety and integrity of the Tread can only be maintained when it is regularly examined for damage and repaired.

It is the owner's sole responsibility to ensure that regular maintenance is performed.

Replace worn or damaged parts immediately. Do not use the Tread until repairs are made.

Use only original parts from Peloton. Changes or modifications to this unit not expressly approved by Peloton could result in damage to the Tread, or cause injury to the user.

Service other than the procedures described here must be performed by an authorized technician.

MAINTENANCE SCHEDULE

Before every class:


- Check the area around and underneath the Tread for potential obstructions.

Weekly:

- Clean Tread surfaces.
- Check power cord for damage.
- Clean the area underneath the Tread.

Monthly:

- Check the entire Tread for wear and damage.
- Test the safety key by pulling it out while walking at a maximum speed of 3 mph on the Tread.
- Make sure the belt is centered.

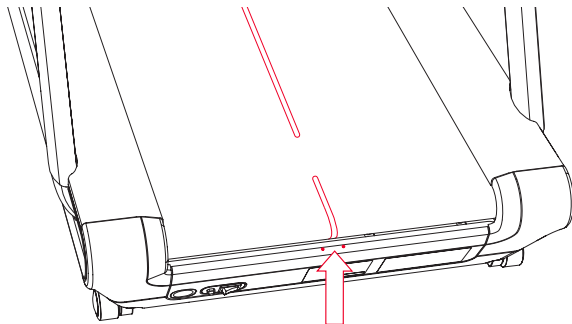

Every 3 years:

- Lubricate the belt.


CLEANING THE TREAD

- Clean the Tread regularly for optimal performance and longevity.
- Clean surfaces with a damp cloth and mild, soapy water.
- Never use abrasive cleaners.
- Never spray or pour liquid directly on Tread surfaces. Never allow liquid to drip into any opening on the Tread.
- Always power off and unplug the Tread from the wall and from the base before cleaning. You will need to press the red button on the top of the cord to remove it. CAUTION: Failure to unplug the power cord from the Tread base when moving can damage the Tread base and power cord.

ADJUSTING THE BELT TENSION

- 1 Using a 6 mm Allen wrench, adjust the two belt tension bolts located on the back corners of the deck by turning the bolts 360° clockwise. A good practice is to start at the 12 o'clock position and make one full turn.

NOTE: Ensure that both bolts are adjusted exactly 360 degrees to prevent belt misalignment.


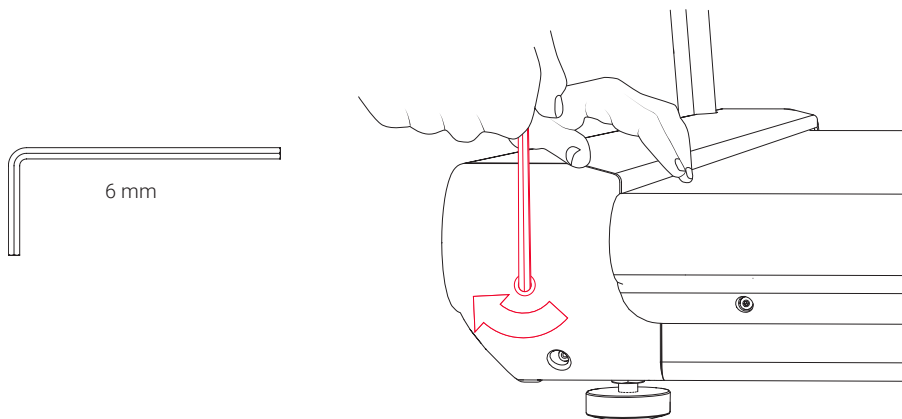


RUNNING HOME INSTALLER

- 1 Attach the power cord to the front right corner of the deck and plug the cord into a dedicated, grounded outlet that supports 15 amps (US and CAN)/13 amps (UK)/16 amps (DE)/ 10 amps (AU). If the Peloton Tread needs to be moved after the power cable is connected, the power cable must be removed before moving to prevent damage. It is a locking power cable, pull back red tab to unplug. **If the Peloton Tread needs to be moved, disconnect the power cable from the deck. To disconnect, press and pull back the red tab on the plug.**

⚠ WARNING: Failure to disconnect the plug before moving the deck OR pulling on the plug to disconnect can damage the Tread.

- 2 Plug in the power cord. Switch the power on at the base of the tread by toggling the power switch to the "I" position.

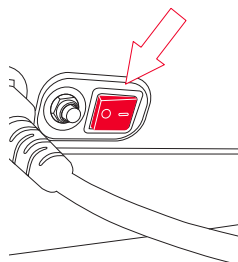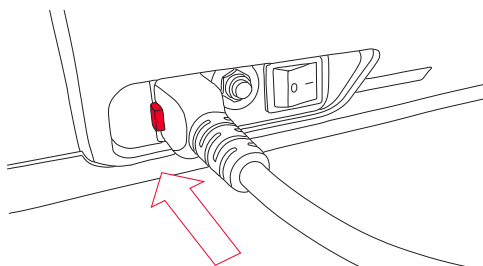

3 Follow the following process flow for the activation:

Turn on -> App Update -> Firmware Update -> Calibration (Home Installer) -> Member Activation -> User Login -> Peloton 101

NOTE: This update could take several minutes. During calibration, the unit will run both the speed and incline at the same time.

4 Remove the Safety Key and store in a location out of reach of children and others who should not operate the Peloton Tread.

5 Cable damage from improper installation of the handrail can cause the following:

a. Firmware Update Stalled at 4%

b. "Safety Key Pulled" error code


c. No power to Tread

If any of these issues arise, please contact Member Support at support.onepeloton.com.


ASSESSING BELT ALIGNMENT




- 1 As the belt begins to run during Home Installer, move to the front of the Peloton Tread and ensure the center line stays between the two alignment dots (as seen below).

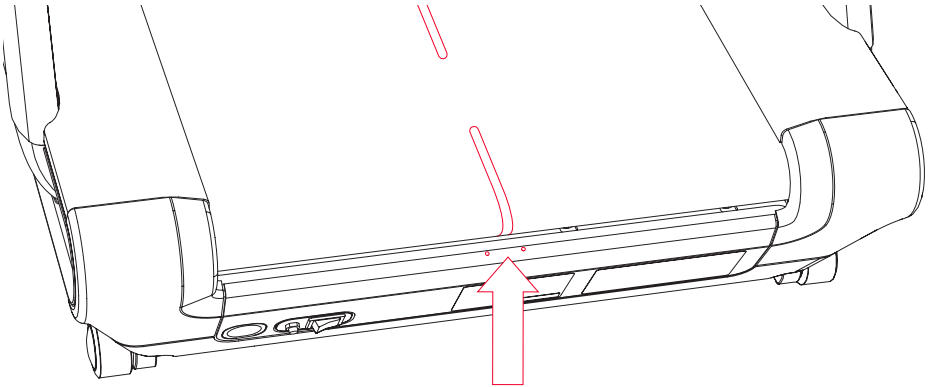

- 2 Inspect the rear of the Tread and confirm that the center lines on the belt are aligned with the bottom alignment dot at the rear of the deck.

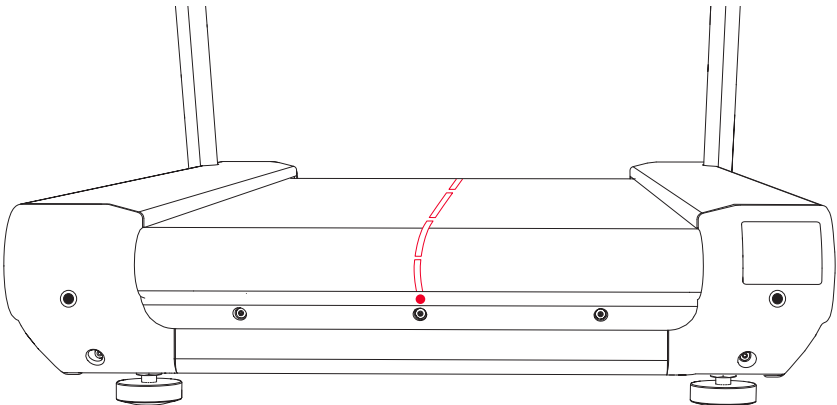

- 3 If the center line moves outside the area, adjust the belt by using the (2) adjustment bolts at the rear of the Tread with a 6mm Allen wrench as shown below:
- 4 To move the belt to the right, turn the left adjustment bolt clockwise 1/4 turn.
- 5 To move the belt to the left, turn the right side adjustment screw clockwise 1/4 turn.

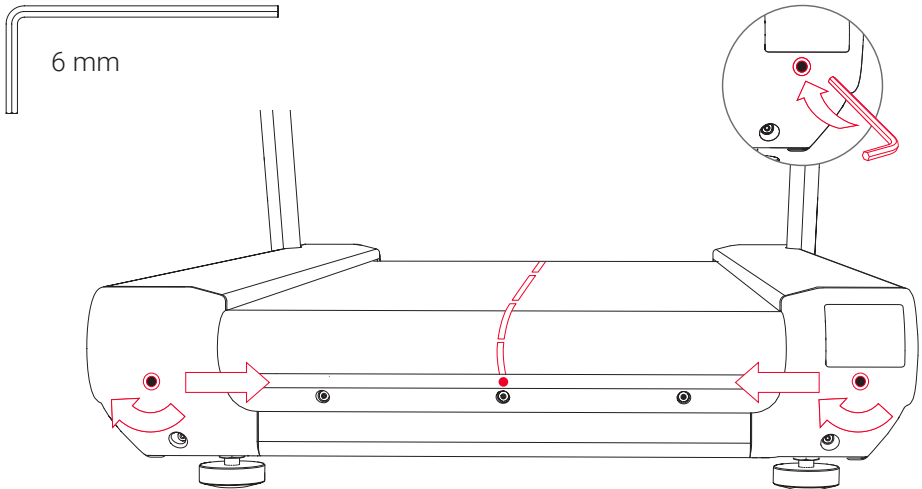

- 6 Run the tread at 6 mph for 15 seconds, two times. Verify that the center line is between the alignment dots. If the belt is still not aligned, try the following:
 - Repeat steps 3 or 4 of this section until the red line on the belt is centered between the adjustment dots.
 - **NOTE:** If an adjustment screw requires more than 1 full turn and the belt is still not centered, begin turning the opposite side screw counterclockwise 1/4 turn.
 - **NOTE:** There is a normal thumping sound when the belt passes over the roller.

POWER OFF THE PELOTON TREAD

- 1 To power down, press and hold the power button at the back of the touchscreen until a prompt is displayed. Then switch the Peloton Tread off.
- 2 Remove the Safety Key and store in a location out of reach of children and others who should not operate the Peloton Tread.

PELOTON TREAD LIMITED HOME USE WARRANTY

USA/CA

Peloton Tread Limited Warranty ("Limited Warranty")

The full terms of Peloton's Limited Warranty, including information on how to obtain service, can be found at www.onepeloton.com/warranty for the United States and <https://www.onepeloton.ca/warranty> for Canada. If you'd like to request a hard-copy of the full terms of Peloton's Limited Warranty, please contact Member Support:

 <https://www.onepeloton.com/contact>

Peloton Interactive, Inc.
441 9th Ave, 6th Floor
New York, NY 10001

UK

Peloton Tread Limited Warranty ("Limited Warranty")

The full terms of Peloton's Limited Warranty, including information on how to obtain service, can be found at www.onepeloton.co.uk/warranty.

PELOTON HARDWARE LIMITED WARRANTY SUMMARY

AU

This is a summary of the full terms of the Limited Warranty available at <https://www.onepeloton.au/warranty> provided by Peloton Interactive Australia Pty Ltd, The Commons 32 York Street, Sydney NSW 2000, Sydney NSW 2000, Tel: 1800 952 535. To understand your rights and obligations under the warranty, please read the full terms.

Peloton warrants that the included Peloton Fitness Product will operate in accordance with its published specifications and shall be free from defects in the materials and workmanship under non-commercial, in-home, indoor use for the warranty period set out in the table below. Peloton does not warrant against normal wear and tear, or damage caused by accident or abuse.

PELOTON FITNESS PRODUCT	PRODUCT COMPONENT	WARRANTY PERIOD
GENERAL COVERAGE	All original components of the Peloton Bike, Bike+, Tread, Guide and Row	Twelve (12) months
	HD Touchscreen (if equipped)	Twelve (12) months
PELOTON BIKE/BIKE+	Frame (excluding any moving parts attached to the structural frame which fall under "General Coverage")	Five (5) years
PELOTON TREAD	Platform frame (defined as the steel structural portion of the Peloton Tread deck only and excluding any moving parts attached, which other than the belt fall under "General Coverage")	Five (5) years
	Drive motor (excluding any parts attached, which fall under "General Coverage") and walking belt	Three (3) years
PELOTON ROW	Frame (excluding any moving parts attached to the structural frame, which fall under "General Coverage")	Five (5) years
LABOUR	Services in connection with a repair or replacement under this Limited Warranty	Twelve (12) months

To make a claim under the Limited Warranty, cease using the Peloton Fitness Product and contact Peloton Member Support at <https://support.onepeloton.com.au>.

Subject to the full terms, if you submit a valid claim under the warranty, Peloton will either repair, replace, or refund your Peloton Fitness Product at its discretion. You may be required to furnish details such as proof of purchase and product serial number when making a claim under the warranty. If a successful claim is made under the warranty, Peloton will be responsible for any collection or shipping costs associated with returning the Peloton Fitness Product or components to Peloton.

Warranty benefits are in addition to rights provided under local consumer laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



TS01 | 40093238-1.0

©Peloton 2026, Peloton Interactive, Inc.

onepeloton.com

business.onepeloton.com