


TAURUS®

Assembly and Operating Instructions



max. 150 kg

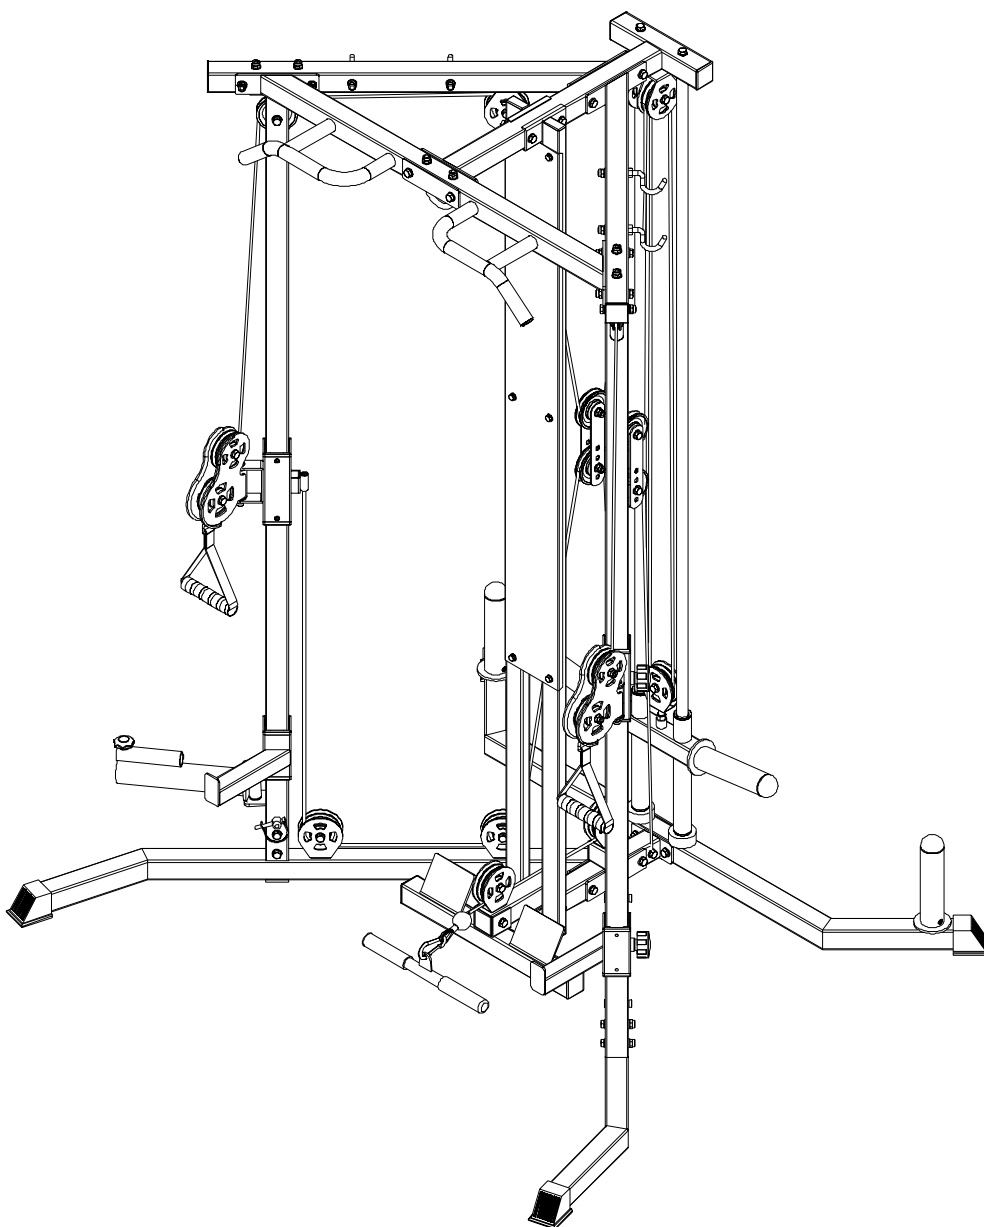

~ 130 Min.



77 kg

L 153 | W 164 | H 212

TFFCM.01.04

Art. No. TF-FCM

Taurus Free Cable Motion

Content

1	GENERAL INFORMATION	7
1.1	Technical Data	7
1.2	Personal Safety	8
1.3	Set-Up Place	9
2	ASSEMBLY	10
2.1	General Instructions	10
2.2	Scope of Delivery	11
2.3	Assembly	13
3	STORAGE AND TRANSPORT	28
3.1	General Instructions	28
4	TROUBLESHOOTING, CARE AND MAINTENANCE	29
4.1	General Instructions	29
4.2	Faults and Fault Diagnosis	29
4.3	Maintenance and Inspection Calendar	30
5	DISPOSAL	30
6	RECOMMENDED ACCESSORIES	31
7	ORDERING SPARE PARTS	32
7.1	Serial Number and Model Name	32
7.2	Parts List	33
7.3	Exploded Drawing	36
8	WARRANTY	37
9	CONTACT	39

Dear customer,

Thank you for choosing a high-quality equipment of the brand Taurus®. Taurus® offers sports and fitness equipment for the sophisticated home sport and the equipment of fitness studios and business customers. With Taurus® fitness equipment, the focus is on what sport is all about: maximum performance! Therefore, the equipment is developed in close consultation with athletes and sports scientists. Because athletes know best what makes perfect fitness equipment.

Further information can be found at www.sport-tiedje.com.

Intended Use

The equipment may only be used for its intended purpose.

The equipment is only suitable for home use. The equipment is not suitable for semi-professional (e.g. hospitals, associations, hotels, schools, etc.) and commercial or professional use (e.g. fitness studios).

Disclaimer

©2008 Taurus® is a registered brand of the company SportTiedje GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Sport-Tiedje is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.

ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.

Due to ongoing changes and software optimisations, the manual may have to be updated. If you notice any discrepancies during assembly or use, please refer to the manual uploaded to the webshop. The latest manual is always available there.

This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.



Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

► **ATTENTION**

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

⚠ **CAUTION**

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

⚠ **WARNING**

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

⚠ **DANGER**

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

ⓘ **NOTICE**

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.

1.1 Technical Data

Weight and dimensions:

Article weight (gross, including packaging):	Box1/Box2: 46/37 kg
Packaging dimensions (L x W x H):	Box 1/2 - 150 cm x 53 cm x 20 cm Box 2/2 - 216 cm x 38 cm x 19 cm
Set-up dimensions (L x W x H):	approx. 152.7 cm x 164 cm x 212 cm
Maximum user weight:	150 kg (330 lbs)

1.2 Personal Safety

DANGER

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.

WARNING

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + The equipment is strictly for use by one person at a time.
- + If your equipment provides a safety key, the clip of the safety key must be attached to your clothing before starting your training. In the event of a fall, the EMERGENCY STOP of the equipment can be initiated.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other non-slip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.

CAUTION

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.

ATTENTION

- + Do not insert any objects of any kind into the openings of the device.

1.3 Set-Up Place

WARNING

- + Do not place the equipment in main corridors or escape routes.

CAUTION

- + Choose a location in which to place the equipment such that there is enough free space/clearance to the front, the rear and to the sides of the equipment.
- + The training room should be well ventilated during training and not be exposed to any draughts.
- + Choose the place in which to set up the equipment such that there is enough free space/clearance to the front, the rear and to the sides of the equipment.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.
- + If your device is to be mounted on the wall/ceiling, make sure that you use the appropriate assembly material to avoid possible damages or personal injuries. The contractual partner accepts no liability for this.

ATTENTION

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.

2.1 General Instructions



DANGER

- + Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.



WARNING

- + Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.



CAUTION

- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.



ATTENTION

- + To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.



NOTICE











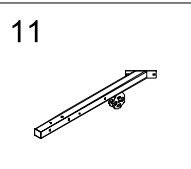
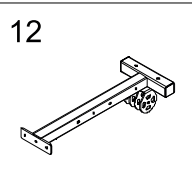
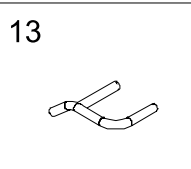
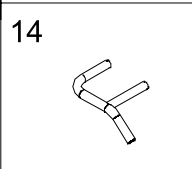
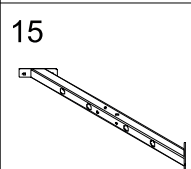
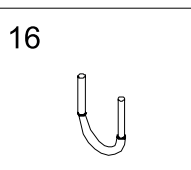
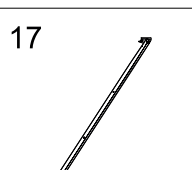
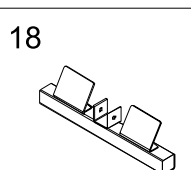

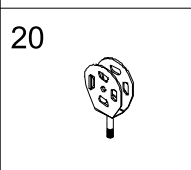
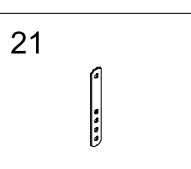
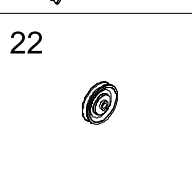
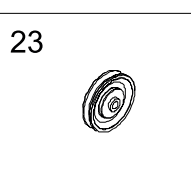
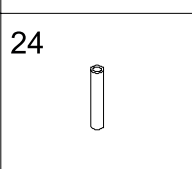
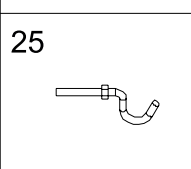
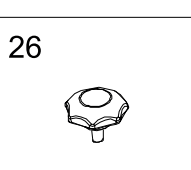
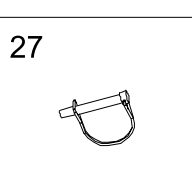
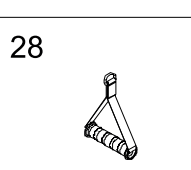
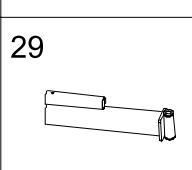
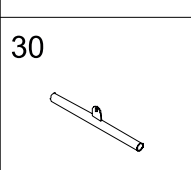
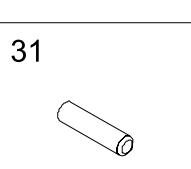
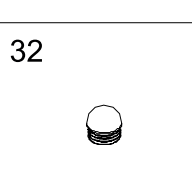
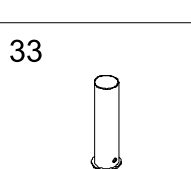

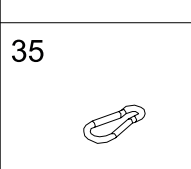
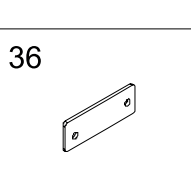
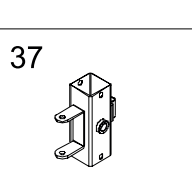
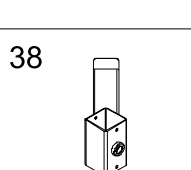
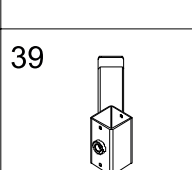
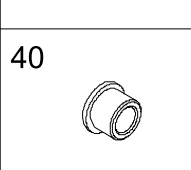
- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- + Ideally, assemble the equipment at its later set-up place.


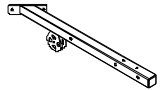

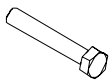
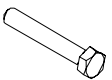
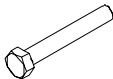
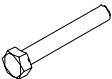
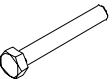
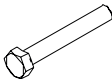
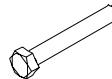
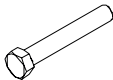
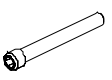


















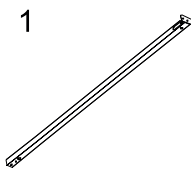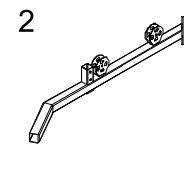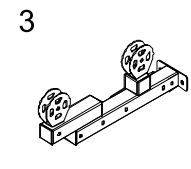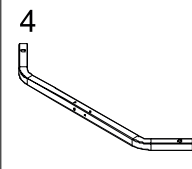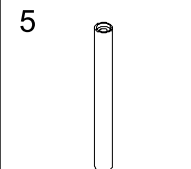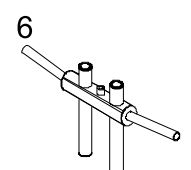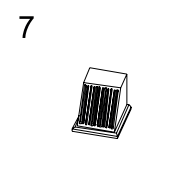
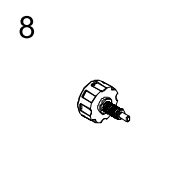
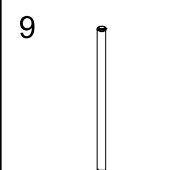



2.2 Scope of Delivery

The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.

⚠ CAUTION

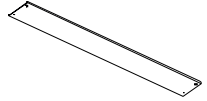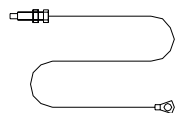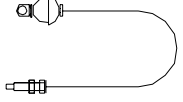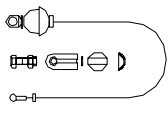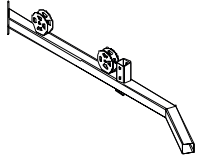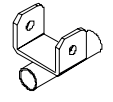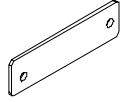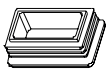If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

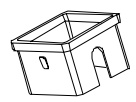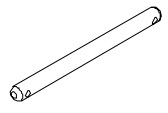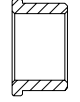1		2		3		4		5	
6		7		8		9		10	
11		12		13		14		15	
16		17		18		19		20	
21		22		23		24		25	
26		27		28		29		30	
31		32		33		34		35	
36		37		38		39		40	

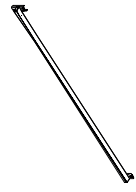41 	42 	43 	44 	45 
46 	47 	48 	49 	50 
51 	52 	53 	54 	55 
56 	57 	58 	59 	60 
61 	62 	63 	64 	65 
66 	67 	68 	69 	70 
71 	72 	73 	74 	75 
76 				

2.3 Assembly


Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

ⓘ NOTICE

- + First loosely screw all parts together and check that they fit properly. Tighten the screws using the tool only when you are instructed to do so.
- + If you have difficulty recognising the graphics, we recommend that you open and/or download the PDF instructions stored in the webshop on your end device (e.g. smartphone, tablet or PC). There you have the option of zooming in closer. Please note that the Adobe Acrobat Reader programme must be installed on your end device in order to open the file.

Step 1:

1. Attach two end caps (7) to left base (2) and right base (65).
2. Attach left base (2) and right base (65) to mid base (3) with two M10*20 bolts (44), one M10*75 bolt (48), four M10 washers (57) and one M10 lock nut (59).

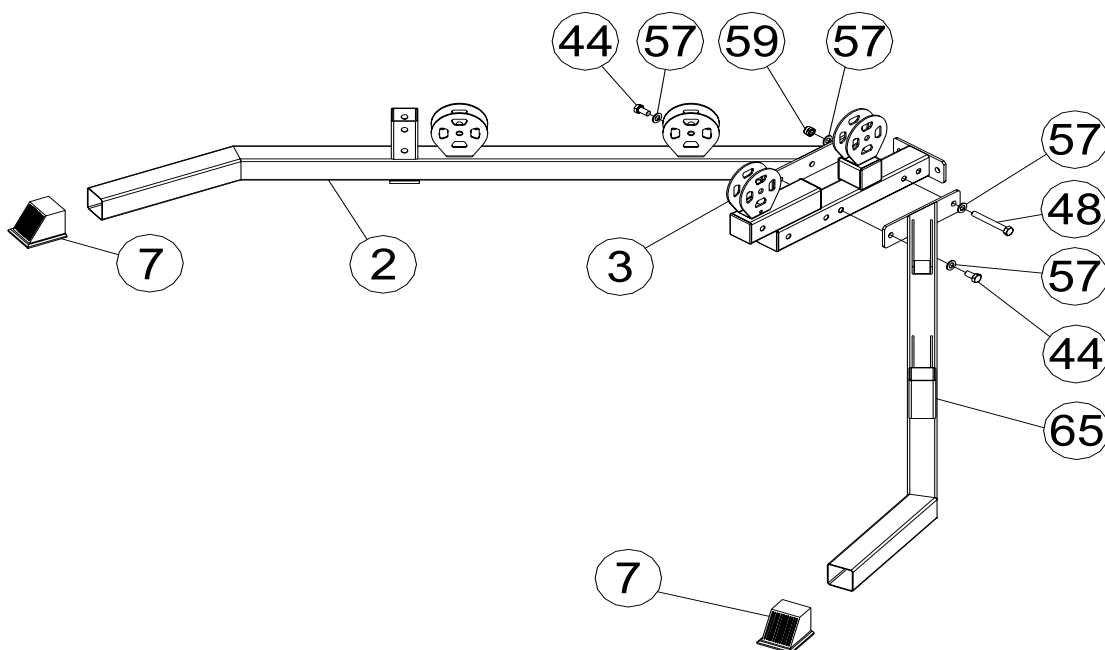

2#		1	44#		M10*20	2
3#		1	48#		M10*75	1
7#		2	57#		M10	4
65#		1	59#		M10	1


Step 2:

1. Attach two end caps (7) to rear base (4).
2. Insert weight storage (5) into hole on rear base (4) and secure with two bolts M10*20 (44) and two M10 washers (57).
3. Slide weight support (6) and two rubber dounts (10) through two guide rods (9).
4. Attach two guide rods (9) to rear base (4) and secure with two bolts M10*70 (47) and two M10 washers (57).
5. Securely tighten Bolts (44 & 47) with tools.







NOTICE

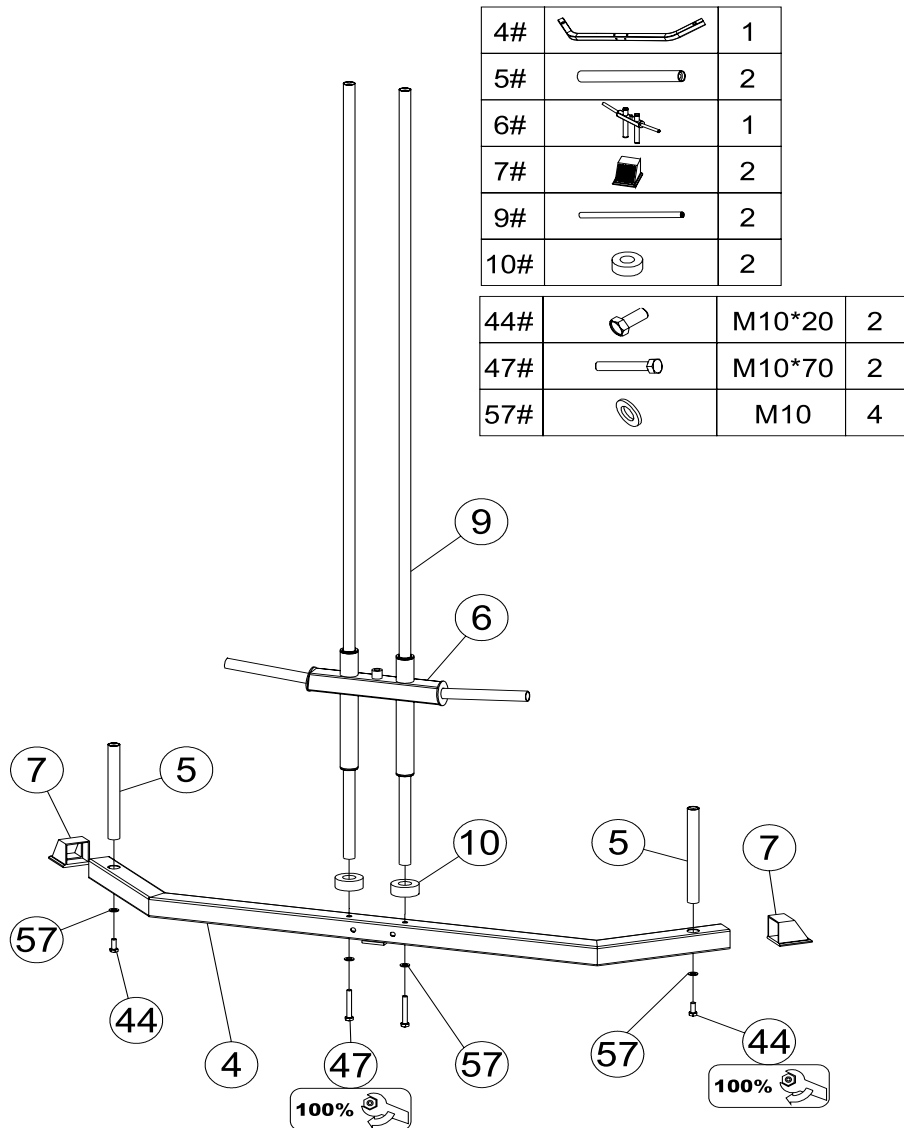
Wipe the guide rods (9) regularly with vaseline.



Step 3:

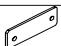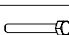
1. Befestigen Sie den unteren Rahmen (4) und die Metallplatte (36) mit zwei Schrauben M10*75 (48), vier M10 Unterlegscheiben (57) und zwei Kontermuttern M10 (59) am mittleren Rahmen (3).

36#		1	48#		M10*75	2
			57#		M10	4
			59#		M10	2

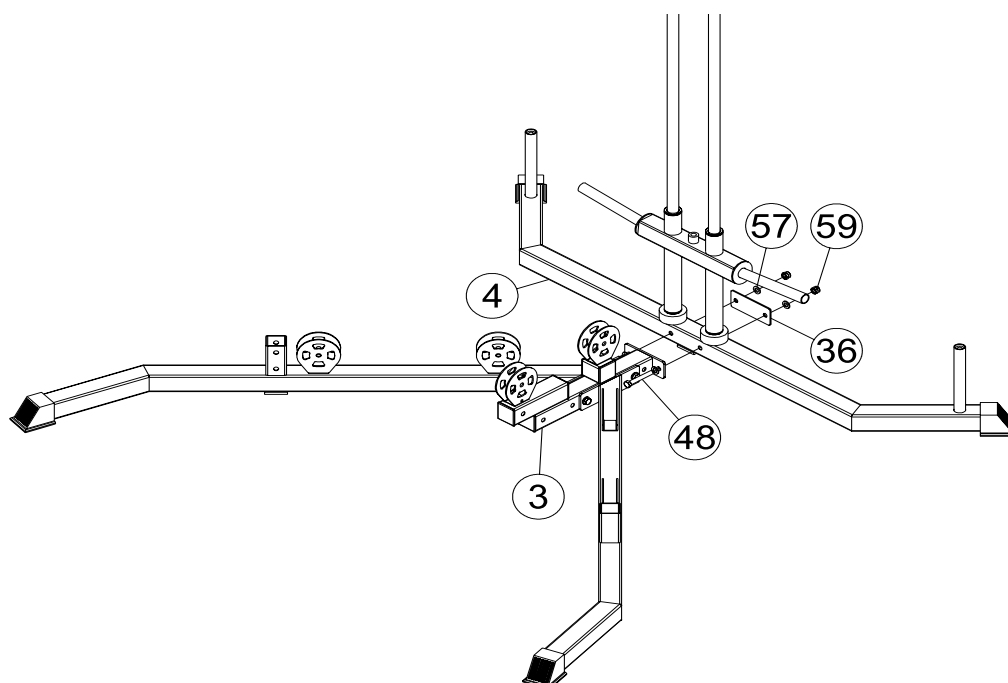

Step 4:


1. Unscrew the fast pins (8) on safety supports (38, 39) and sliding shelf (37).
2. Attach sliding shelf (37) and left safety support (38) to one upright frame (1) and secure with two fast pins (8).
3. Attach upright frame (1) to left base (2) with two M10*65 bolts (46), four M10 washers (57) and two lock nuts M10 (59).
4. Attach sliding shelf (37) and right safety support (39) to the other upright frame (1) and secure with two fast pins (8).
5. Attach upright frame (1) to right base (65) with two M10*65 bolts (46), four M10 washers (57) and two lock nuts M10 (59).

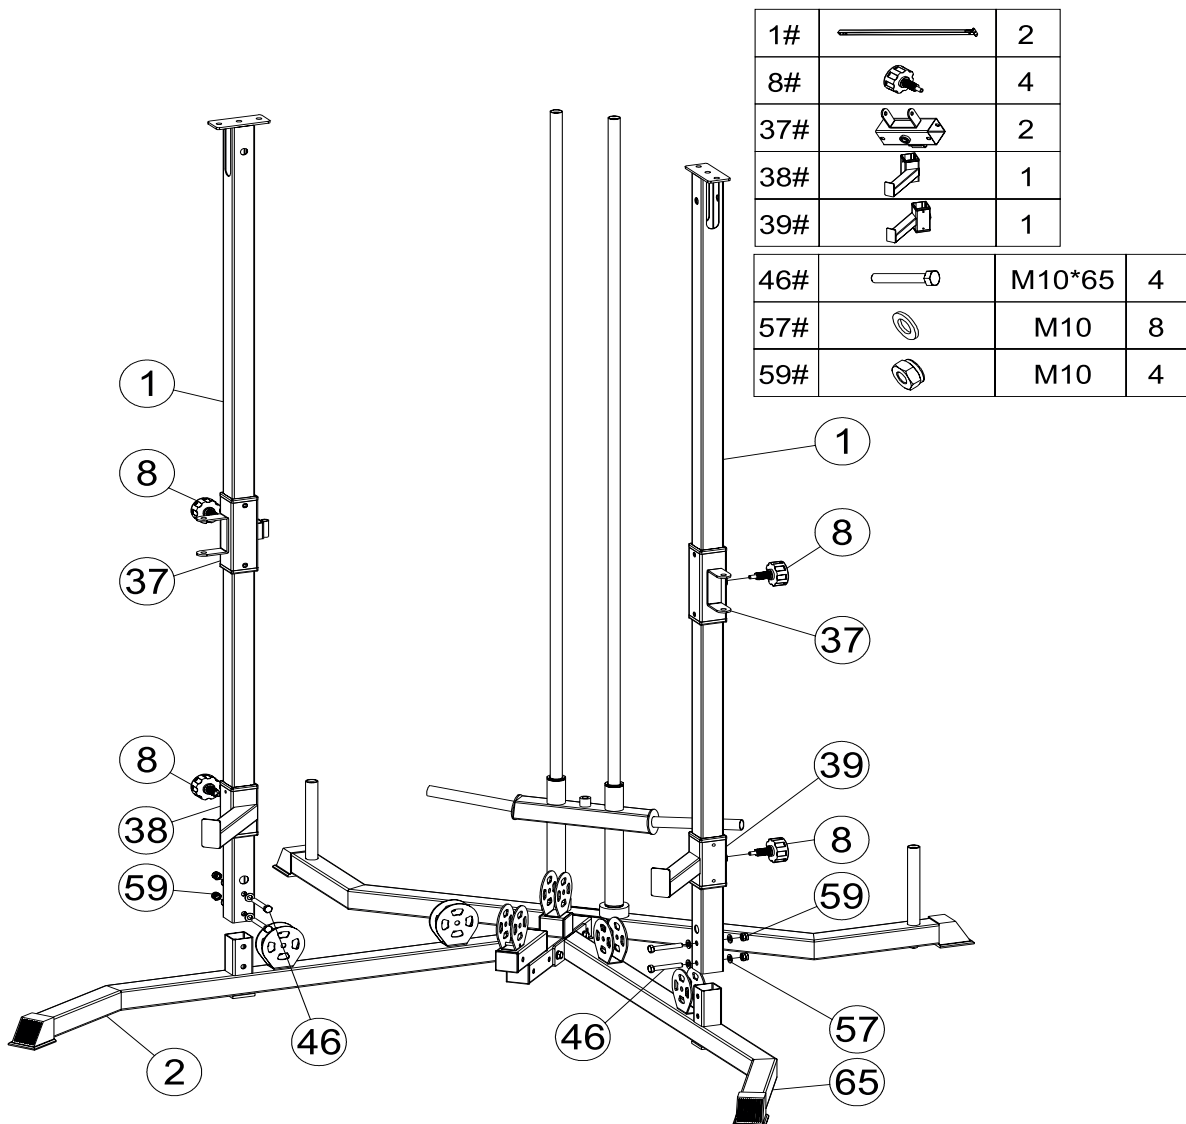

Step 5:


1. Attach right beam (11) to upright frame (1) and secure use two bolts M10*70 (47), four M10 washers (57) and two lock nuts M10 (59). Note that the bolt from the bottom to the top.
2. Attach left beam (42) to upright frame (1) and secure use two bolts M10*70 (47), four M10 washers (57) and two lock nuts M10 (59). Note that the bolt from the bottom to the top.
3. Attach cross beam (12) to left and right beam (42, 11) and secure with two bolts M10*20 (44), one bolt M10*75 (48), four M10 washers (57) and one lock nut M10 (59).
4. Attach cross beam (12) to guide rods (9) and secure with two bolts M10*70 (47) and two M10 washers (57).

11#		1	
12#		1	
42#		1	
44#		M10*20	2
47#		M10*70	6
48#		M10*75	1
57#		M10	14
59#		M10	5

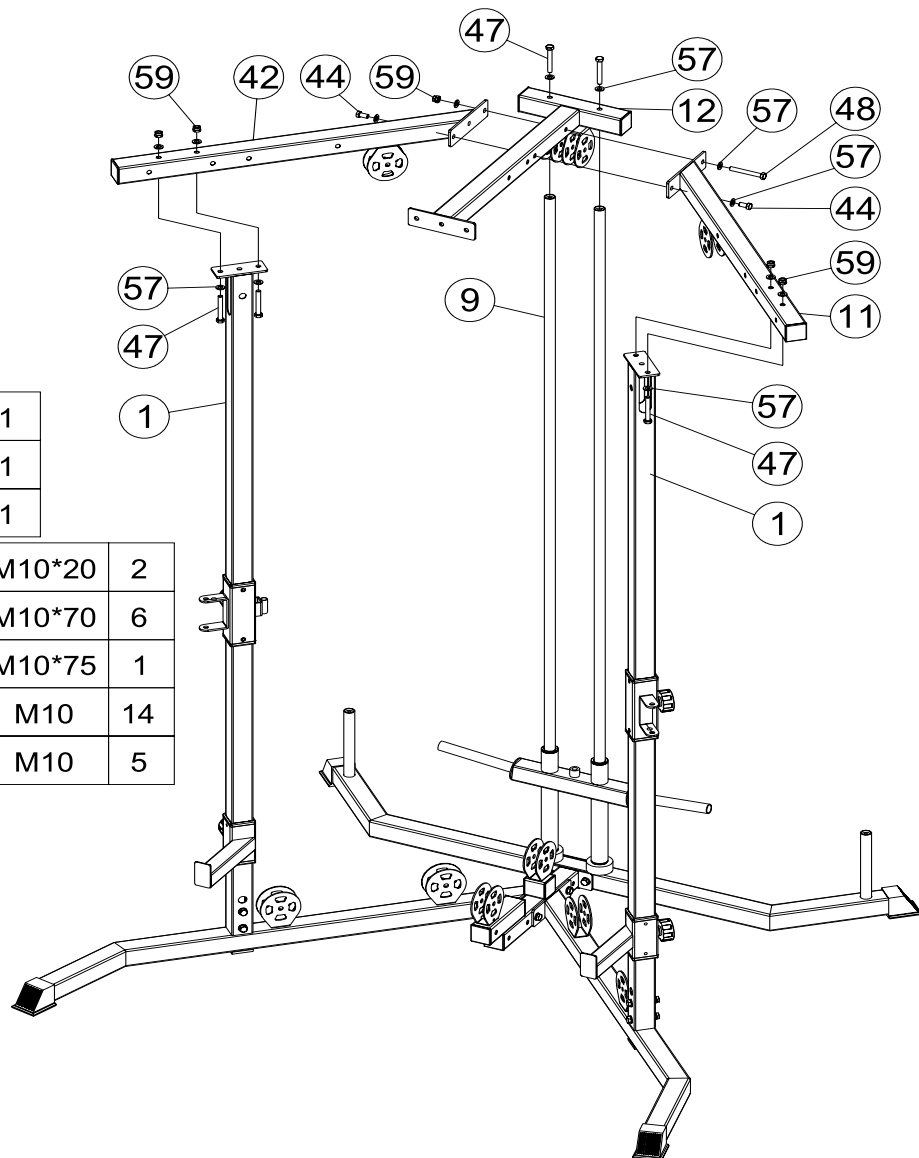







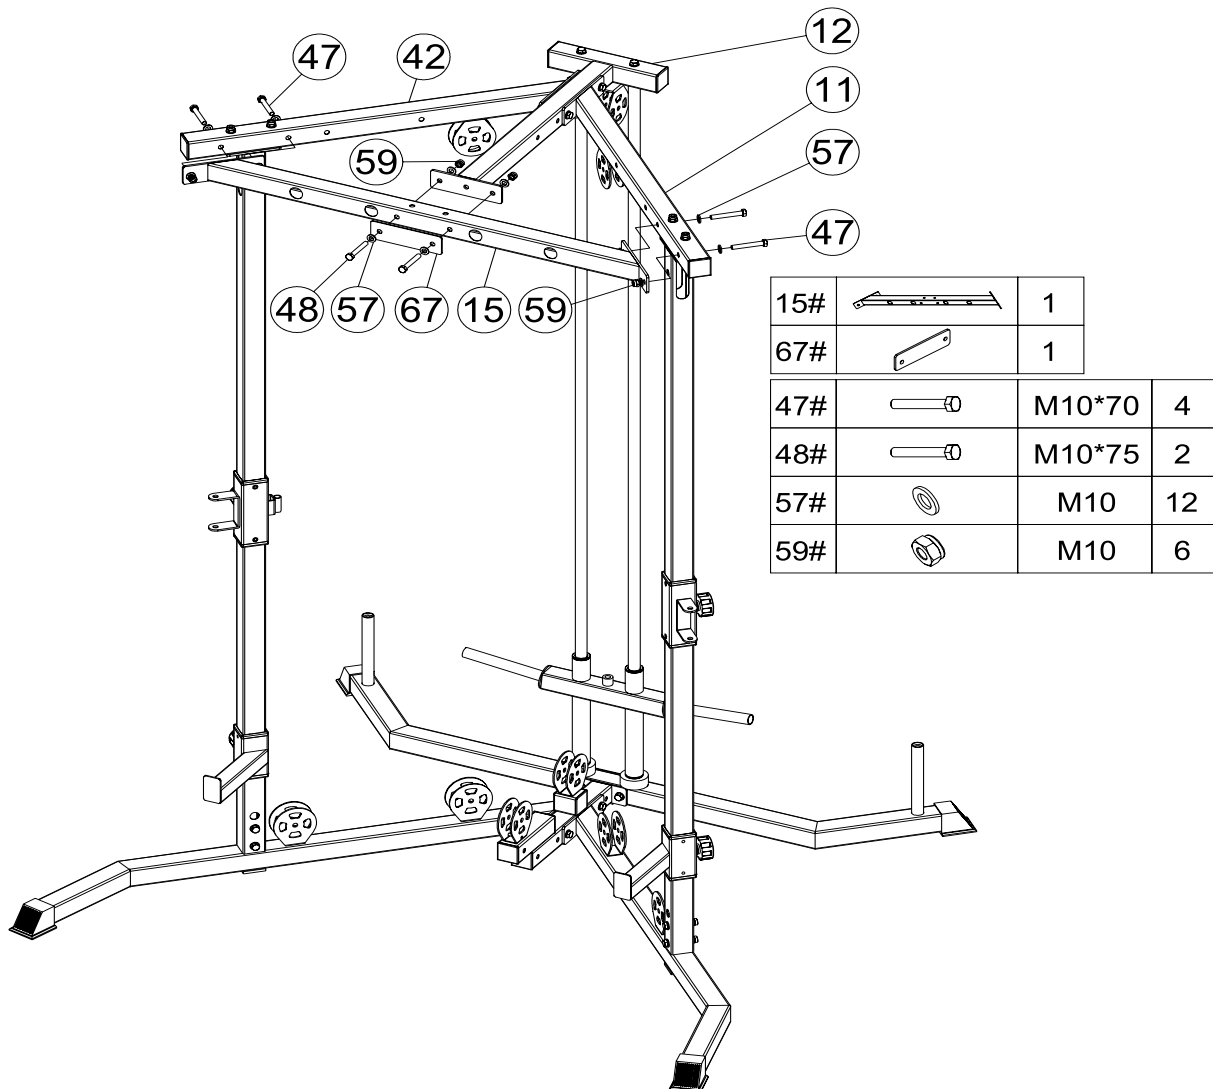

Step 6:


1. Attach reinforcement plate (67) and joint tube (15) to cross beam (12) and secure with two bolts M10*75 (48), four M10 washers (57) and two lock nuts M10 (59).
2. Attach joint tube (15) to left and right beam (42, 11) and secure with four bolts M10*70 (47), eight M10 washers (57) and four lock nuts M10 (59).



Step 7:


1. Attach left and right hand (13, 14) to joint tube (15) with four bolts M12*20 (51) and four M12 washers (58).
2. Attach four hooks (25) to left and right beam (42, 11) with four M10 washers (57) and four lock nuts M10 (59).
3. Attach bend hook (16) to joint tube (15) with two M10 washers (57) and two lock nuts M10 (59).

13#		1	
14#		1	
16#		1	
25#		4	
51#		M12*20	4
57#		M10	6
58#		M12	4
59#		M10	6

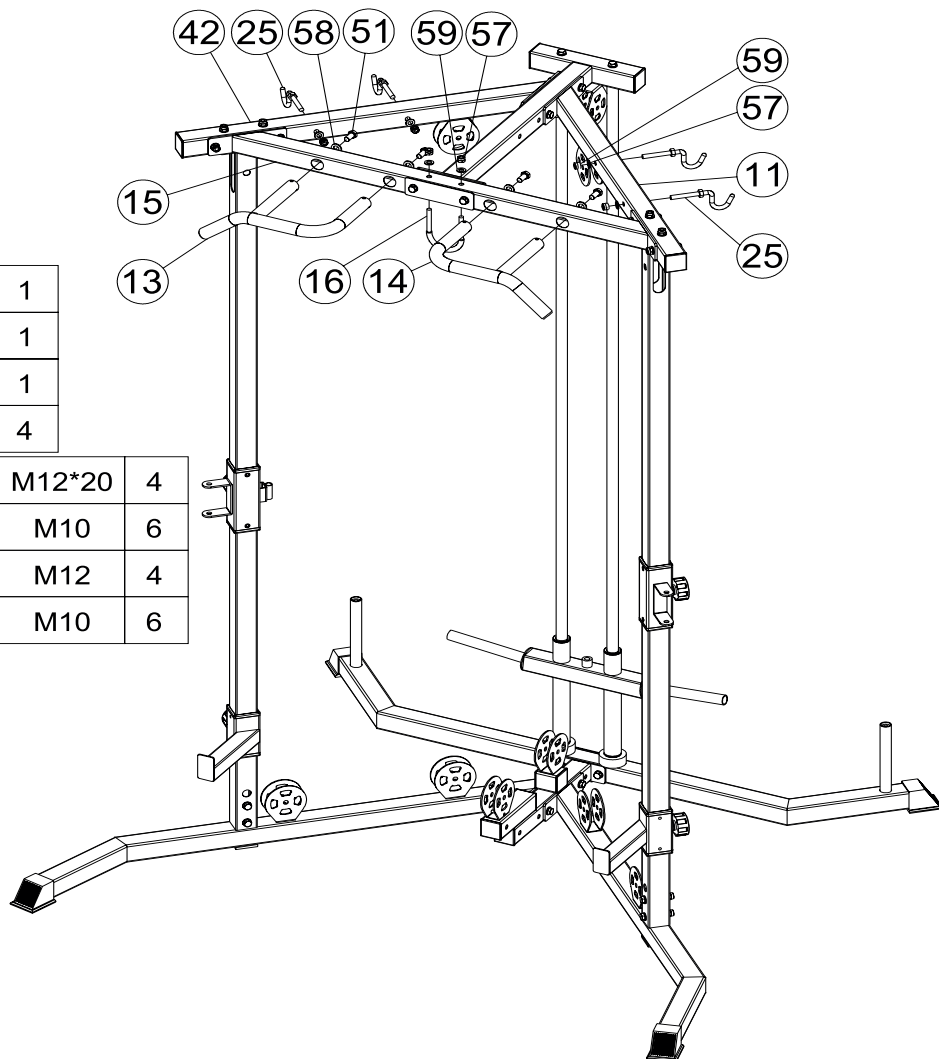

Step 8:


1. Attach four round plugs (32) to four adapters (33).
2. Attach two adapters (33) to weight storages (5) and secure with hexagon socket set screw M10*10 (53).
3. Attach two adapters (33) to weight support (6) and secure with hexagon socket set screw M10*10 (53).
4. Attach four rubber rings (55) to four adapters (33).

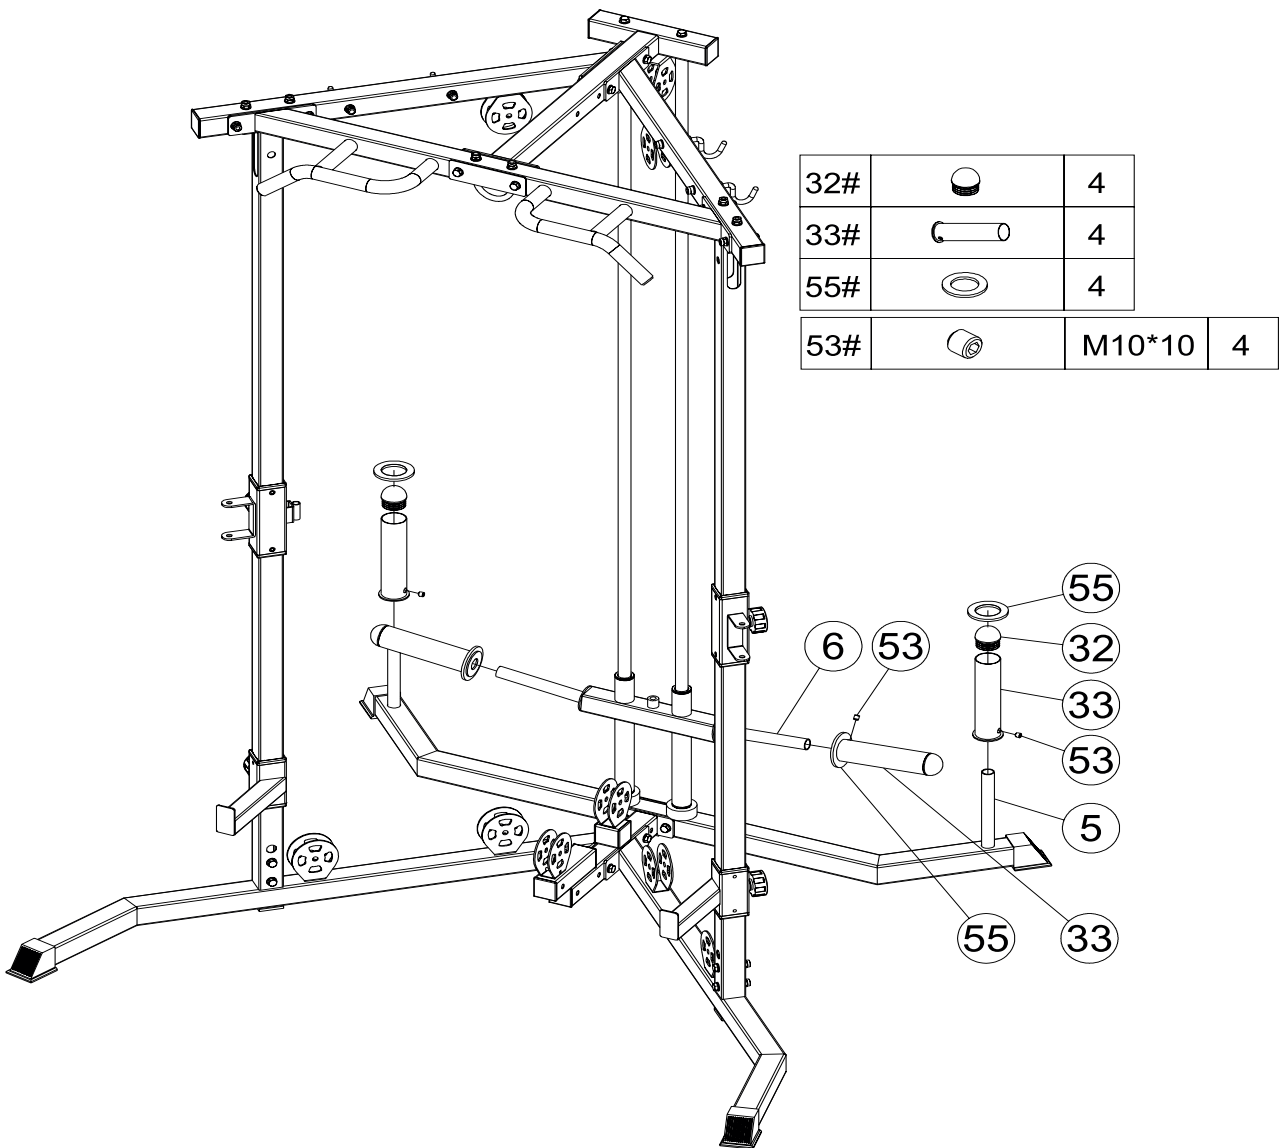

Step 9:

1. A,K: Attach one $\Phi 90$ pulley (22) and one $\Phi 115$ pulley (23) to double pulley block (19) and secure with two bolts M10*50 (45), four M10 washers (57) and two lock nuts M10 (59). Attach pulley block to sliding shelf and secure with one bushing (24), one bolt M10*105 (49), two M10 washers (57) and one lock nut M10 (59).
2. B,J: Attach one $\Phi 115$ pulley (23) to upright frame and secure with two nylon bushings (40), one bolt M10*70 (47), two M10 washers (57) and one lock nut M10 (59).
3. C,I,F: Attach one $\Phi 90$ pulley (22) to pulley bracket and secure with one bolt M10*50 (45), two M10 washers (57) and one lock nut M10 (59). F: Attach one nut M12 (54) to swivel pulley block (20), screw the pulley block to weight support.
4. D,H: Attach two $\Phi 90$ pulleys (22) to two adjustable pulley blocks (21) and secure with two bolts M10*50 (45), four M10 washers (57) and two lock nuts M10 (59).
5. E,G: Attach two $\Phi 90$ pulleys (22) to the bracket on cross beam and secure with one bolt M10*110 (50), two M10 washers (57) and one lock nut M10 (59).
6. Remove the rubber ball, washers and screw of cable #64. Take the end with no ball of cable #64 through pulleys. The order is as follows:


64




Kabel#64 A→B→C→D→E→F→G→H→I→J→K

7. K: Through the bowl-shaped washer, rubber ball, flat washer, and the U-shaped channel to the cable and secure with bolt and nut.


B,J

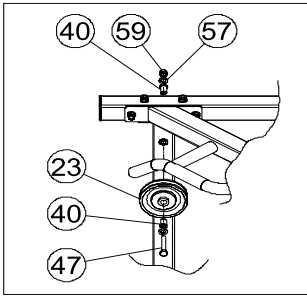


E,G

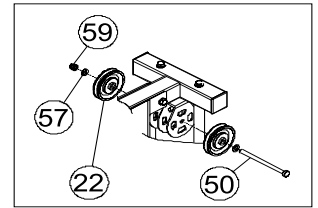


A,K

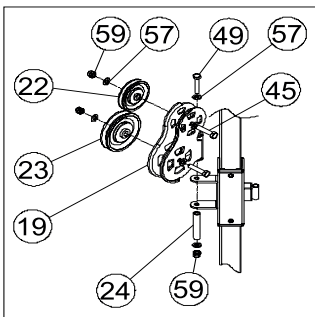


K





D,H

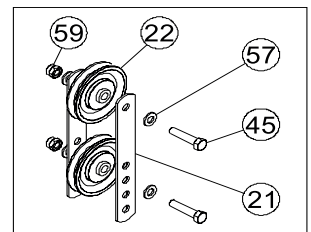

C,I

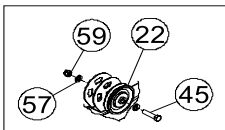

F

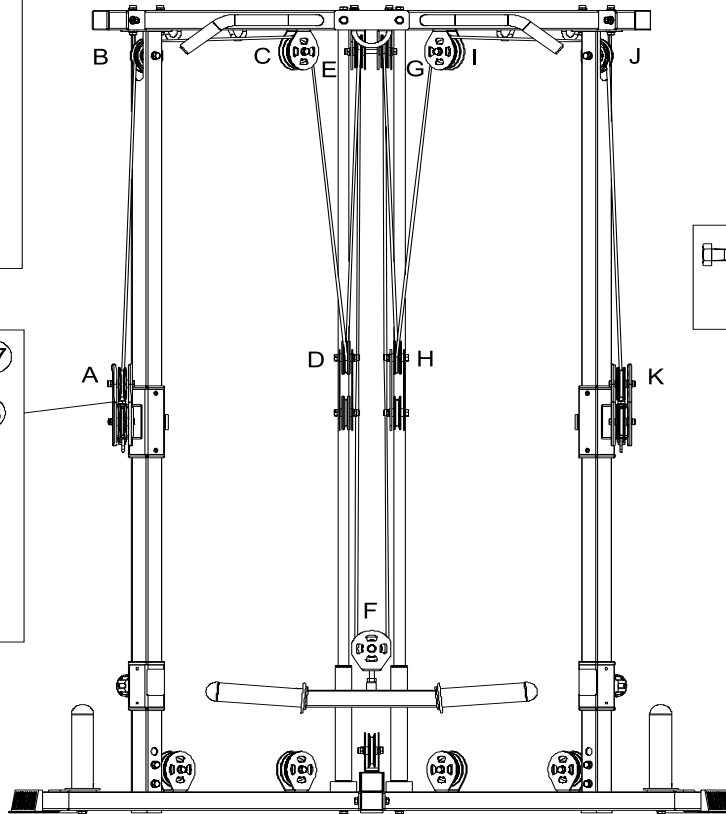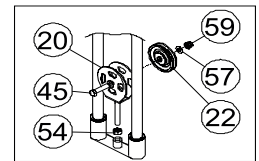


19#		2
20#		1
21#		4
22#		11
23#		4
24#		2
40#		4
64#		1

45#		M10*50	11
47#		M10*70	2
49#		M10*105	2
50#		M10*110	1
54#		M12	1
57#		M10	32
59#		M10	16


Step 10:

- To assemble cable #63, cable and pulleys have to be assembled together as order follows:

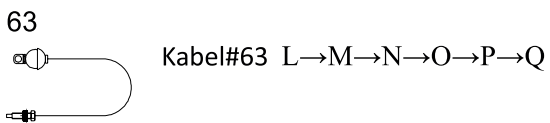


- L,M,O,P: Attach one $\Phi 90$ pulley (22) to pulley bracket and secure with one bolt M10*50 (45), two M10 washers (57) and one lock nut M10 (59).
- Q: Screw the screw on cable to the sliding shelf.

22#		4	
63#		1	
45#		M10*50	4
57#		M10	8
59#		M10	4

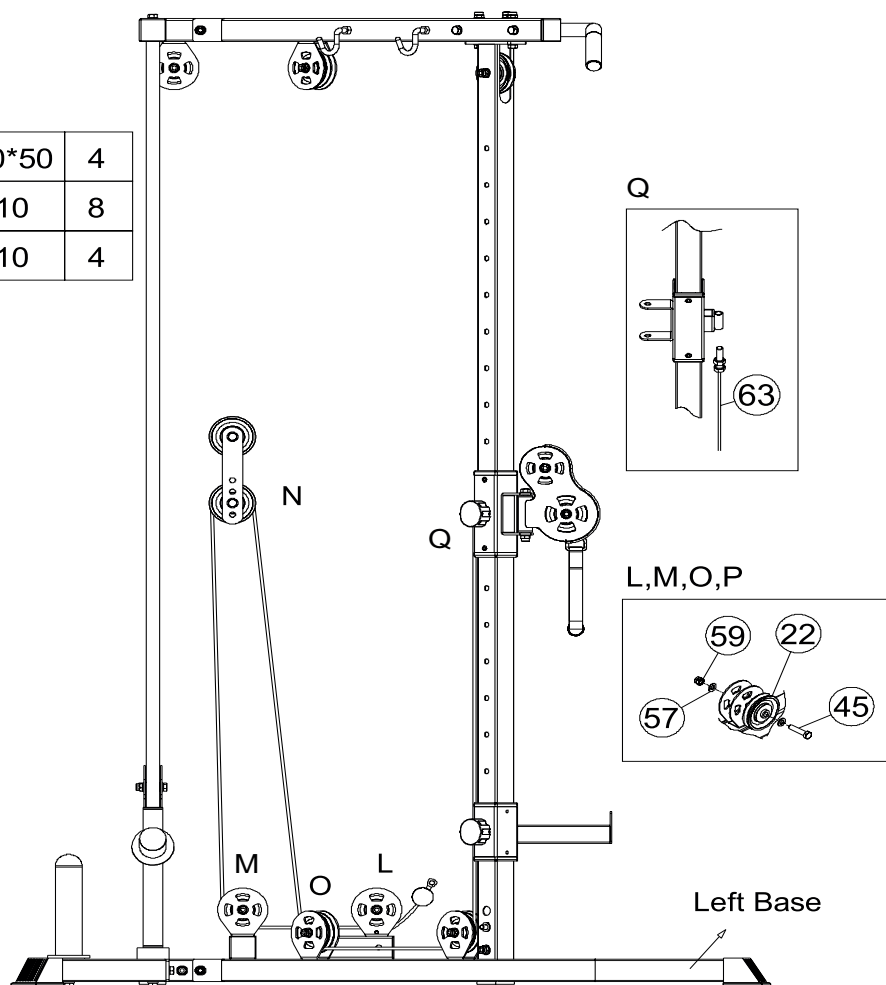


Step 11:

1. S,T: Attach one $\Phi 90$ pulley (22) to pulley bracket and secure with one bolt M10*50 (45), two M10 washers (57) and one lock nut M10 (59).
2. R: Screw the screw on cable to the other sliding shelf.
3. Take the other end of cable #62 through pulleys. The order is as follows:

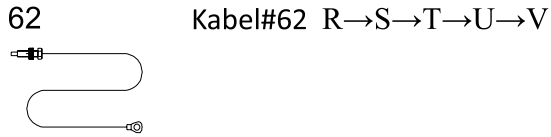




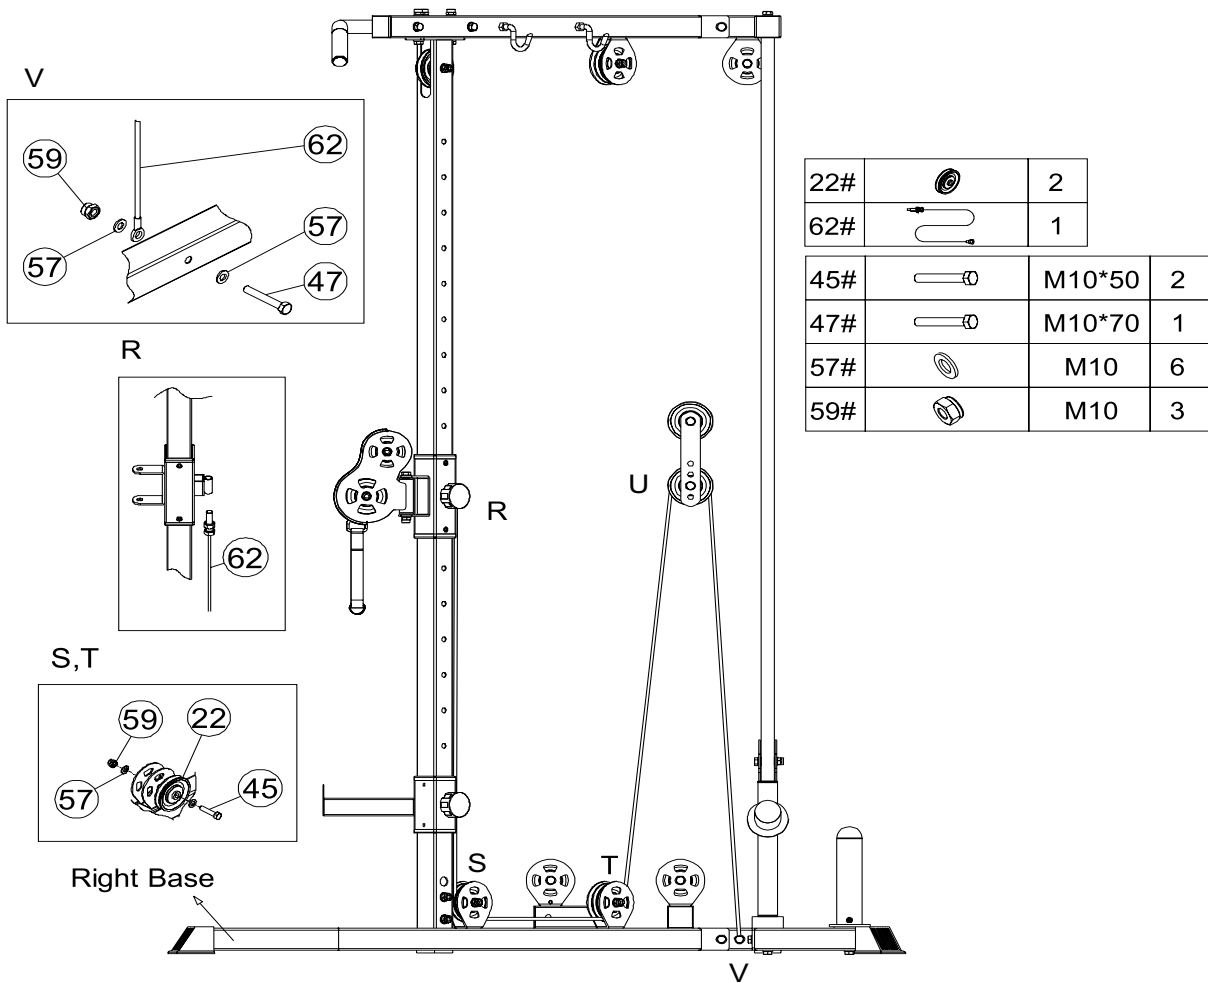


4. V: Attach the end of cable to the mid base and secure with one bolt M10*70 (47), two M10 washers (57) and one lock nut M10 (59).



Step 12:


1. Attach left and right column (76, 17) to mid base (3) and cross beam (12) and secure with four bolts M10*70 (47), eight M10 washers (57) and four lock nuts M10 (59).

17#			1
76#			1
47#		M10*70	4
57#		M10	8
59#		M10	4

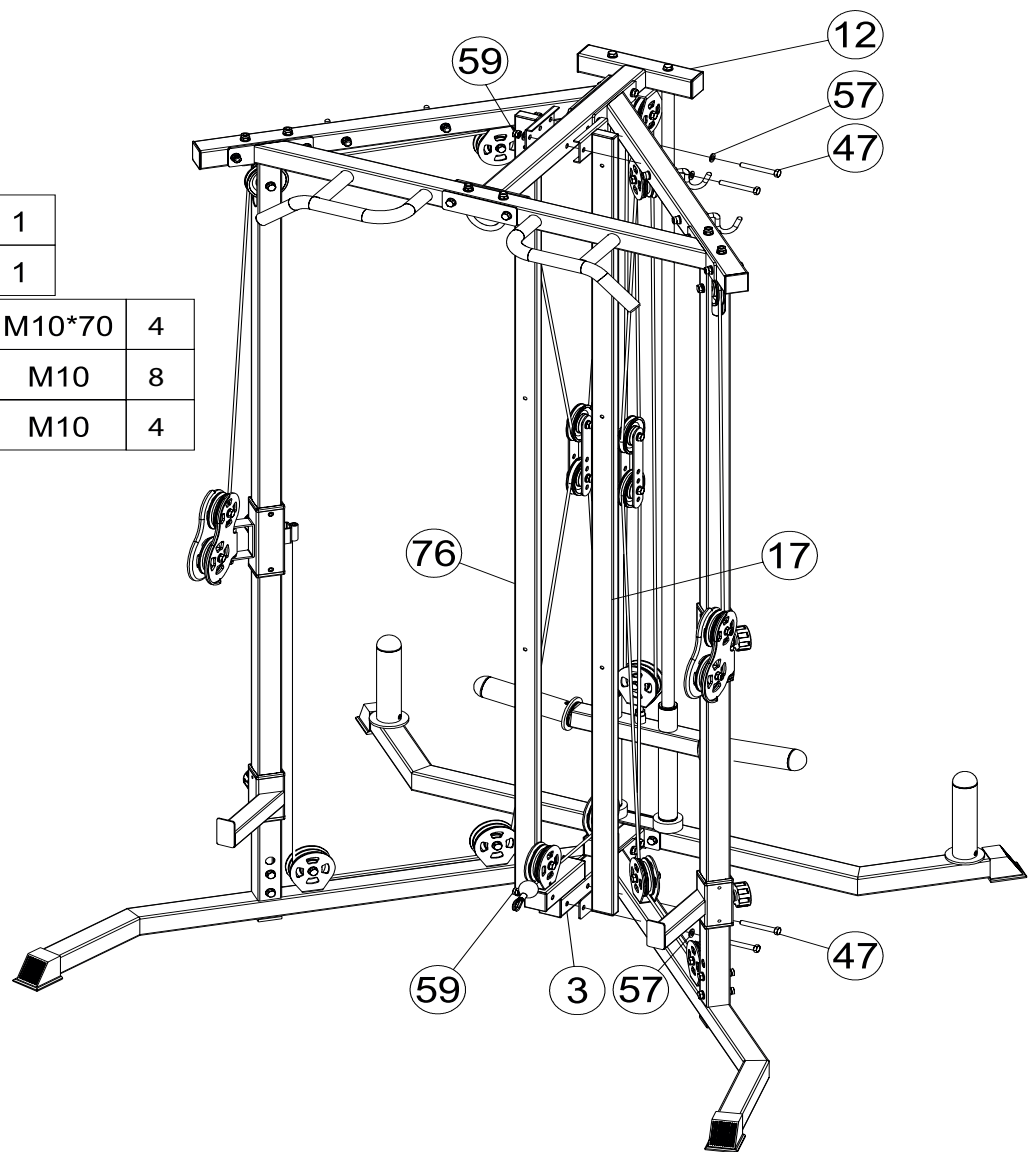


Step 13:

1. Attach baffle plate (61) to left and right column (76, 17) with six bolts M8*16 (43) and six M8 washers (56).
2. Attach foot against (18) to mid base (3) with one bolt M10*70 (47), two M10 washers (57) and one lock nut M10 (59).
3. Attach pull bar (30) and ribbon handle (28) to cables with gourd hooks (35).

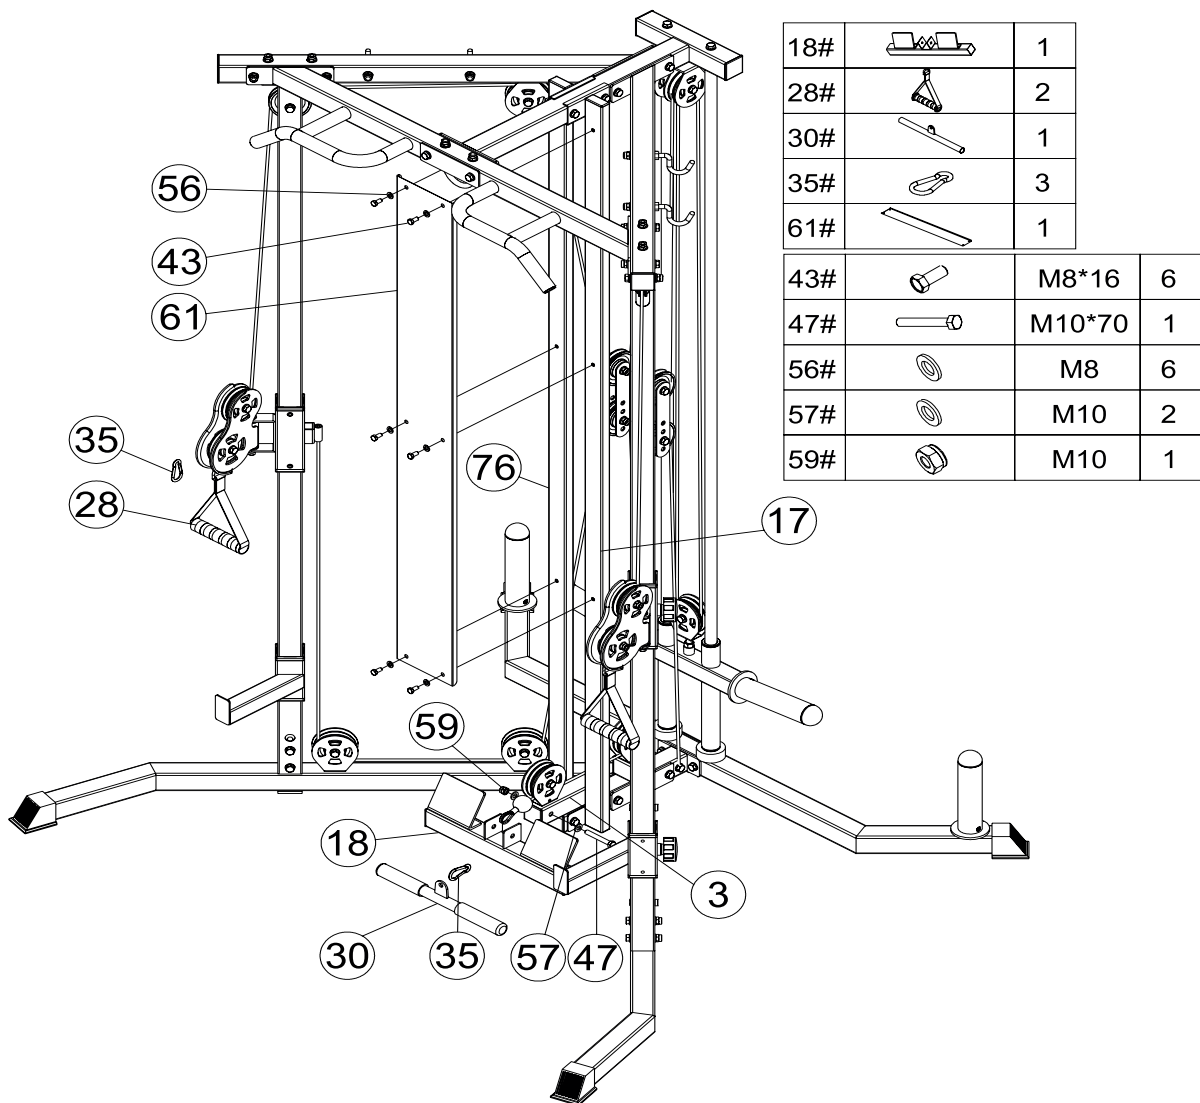

Step 14:

1. Attach two bushings $\phi 32*\phi 19*20$ (70) to joint support (66). Attach two bushings $\phi 25*\phi 12*20$ (41) to bar support (29).
2. Attach bar support (29) to joint support (66) with one bolt M12*105 (52), two M12 washers (58) and one lock nut M12 (54).
3. Attach joint support (66) to upright frame with axis (72), nylon washer (74) and two lock pins (27).
4. This step A or B can be installed.

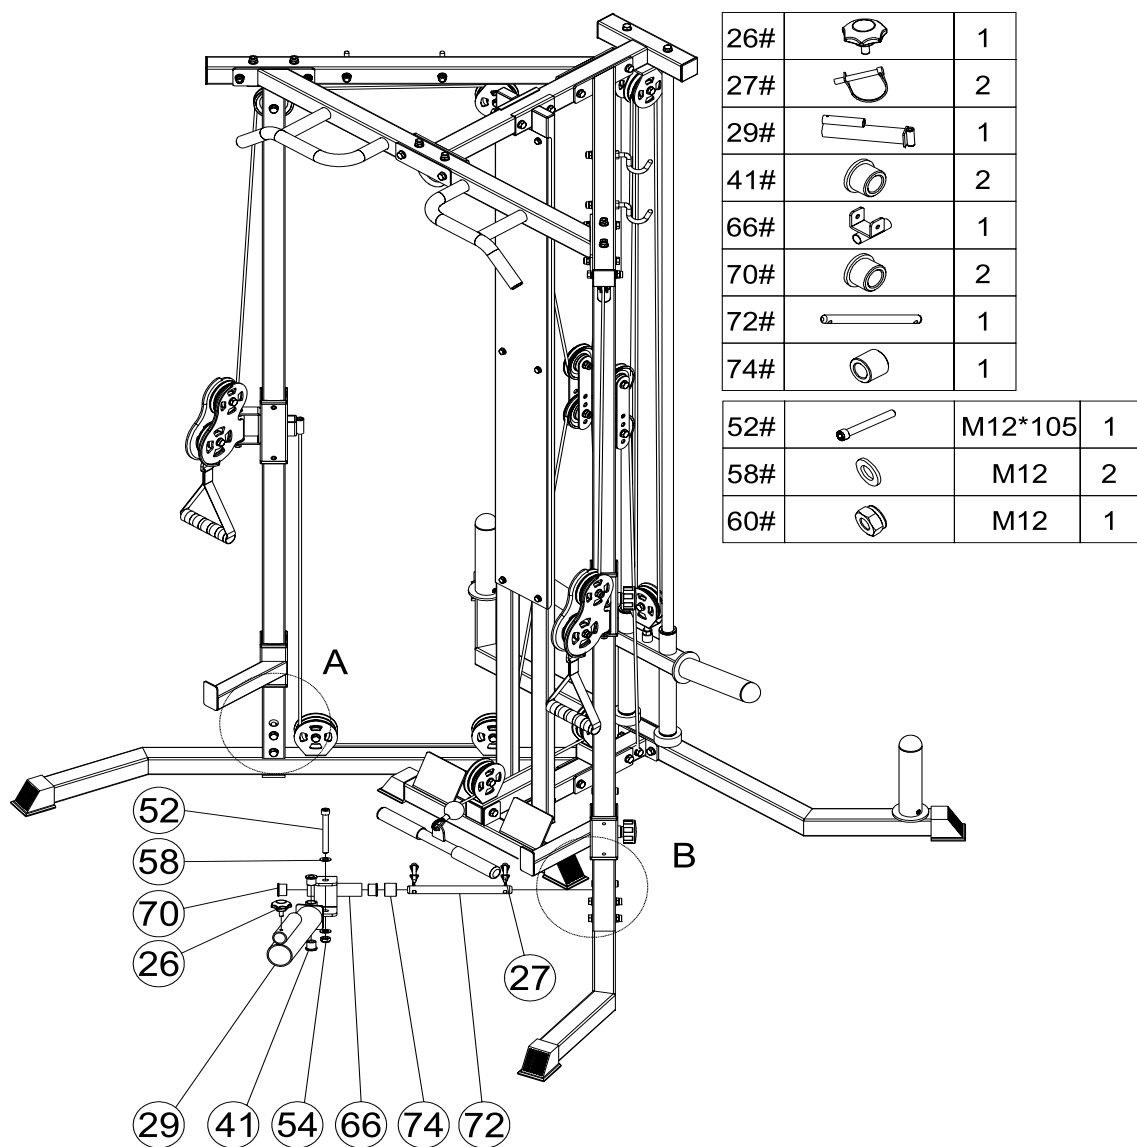

3.1 General Instructions



WARNING

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.



ATTENTION

- + Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.

4.1 General Instructions



WARNING

- + Do not make any improper changes to the equipment.



CAUTION

- + Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

► ATTENTION

- + In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

4.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

Fault	Cause	Solution
Grinding noises	Cables or pulleys do not run smoothly or are damaged	+ Visual inspection of the cable routing or the pulley guide + If damaged, replace the defective part
Weight hanging in the air	Cable tensioned too tight	Readjust cable tension
Cable without tension	Cable too loose	Readjust cable tension
Squeaking & cracking noises	Screw connections loosened or too tight	Check screw connections
Unit wobbles	+ Uneven ground + Loose screw connections	+ Align unit + Tighten screw connections
Heavy draught	+ Weight holders/guide rods too dry + Faulty cable routing	+ Lubricate guide rods* + Check cable routing

* With a grease-free silicone oil or silicone spray.

4.3 Maintenance and Inspection Calendar

To avoid damage from body sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly	Quarterly
Cables	C	I	
Screw connections		I	
Pulleys and cable routing		I	
Slide rails/Guide rods		I	
Weights			I
Legend: C = clean; I = inspect			

5 DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an recycling centre. Further information can be obtained from your local authority's recycling service.



The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

6 RECOMMENDED ACCESSORIES

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. For training equipment like smith machines, weight benches or racks this could for example be a **floor mat**, which makes your fitness equipment stand more securely and also protects the floor from sweat but it could be also **additional weights, handles, foot straps** for leg exercises or **triceps ropes**. For some smith machines, there are also optional add-ons such as **leg presses** that make your workout even more intense and comprehensive.

Our range of accessories offers the highest quality and makes training even better. If you would like to find out more about compatible accessories, please go to the detail page of the product in our webshop (the easiest way is to enter the article number in the search field above) and go to the recommended accessories on this page. Alternatively, you can use the QR code provided. Of course, you can also contact our customer service: by telephone, e-mail, in one of our branches or via our social media channels. We will be happy to advise you!



floor mat



chest strap



weight block extension



triceps rope

7.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 9 of this operating manual.

NOTICE

The serial number of your equipment is unique. It's located on a white sticker.

Enter the serial number in the appropriate field.

Serial number:

Brand / Category:

Model Name:

Article Number:


7.2 Parts List

No.	Name	Qty.
1	Upright Frame	2
2	Left Base	1
3	Mid Base	1
4	Rear Base	1
5	Weight Storage $\Phi 30$	2
6	Weight Support $\Phi 30$	1
7	Square End Cap	4
8	Fast Pin	4
9	Guide Rod	2
10	Rubber Dount	2
11	Right Beam	1
12	Cross Beam	1
13	Left Hand	1
14	Right Hand	1
15	Joint Tube	1
16	Bent Hook	1
17	Right Column	1
18	Foot Against	1
19	Double Pulley Block	2
20	Swivel Pulley Block	1
21	Adjustable Pulley Block	4
22	Single Pulley $\Phi 90$	17
23	Big Pulley $\Phi 115$	4
24	Bushing	2
25	Hook	4
26	Plum Screw	1
27	Lock Hook	2
28	Ribbon Handle	2
29	Bar Support	1
30	Pull Bar	1

31	Handle Cap	2
32	Round Plug $\Phi 50$	4
33	Olympic Adapter	4
34	Square Plug	11
35	Gourd Hook	3
36	Reinforcement Plate 120	1
37	Sliding Shelf	2
38	Left Safely Support	1
39	Right Safely Support	1
40	Nylon Bushing $\Phi 15.5 \times 11.5$	4
41	Bushing $\Phi 25 \times \Phi 12 \times 20$	2
42	Left Beam	1
43	Bolt M8*16	6
44	Bolt M10*20	6
45	Bolt M10*50	17
46	Bolt M10*65	4
47	Bolt M10*70	20
48	Bolt M10*75	6
49	Bolt M10*105	2
50	Bolt M10*110	1
51	Bolt M12*20	4
52	Socket Cap Bolt M12*105	1
53	Hexagon Socket Set Screw M10*10	4
54	Nut 12	1
55	Rubber Ring	4
56	Washer 8	6
57	Washer 10	108
58	Washer 12	6
59	Lock Nut M10	52
60	Lock Nut M12	1
61	Baffle Plate	1
62	Cable	1

63	Cable With One Ball-Short	1
64	Cable With One Ball Set-Long	1
65	Right Base	1
66	Joint Support	1
67	Reinforcement Plate 170	1
68	Rectangular Plug 50*25	4
69	Bushing $\Phi 28 \times \Phi 16 \times 20$	4
70	Bushing $\Phi 32 \times \Phi 19 \times 20$	2
71	Square Sleeve 60*50	8
72	Axis	1
73	Nylon Bushing	4
74	Nylon Washer	1
75	Round Plug $\Phi 30$	4
76	Left Column	1

7.3 Exploded Drawing

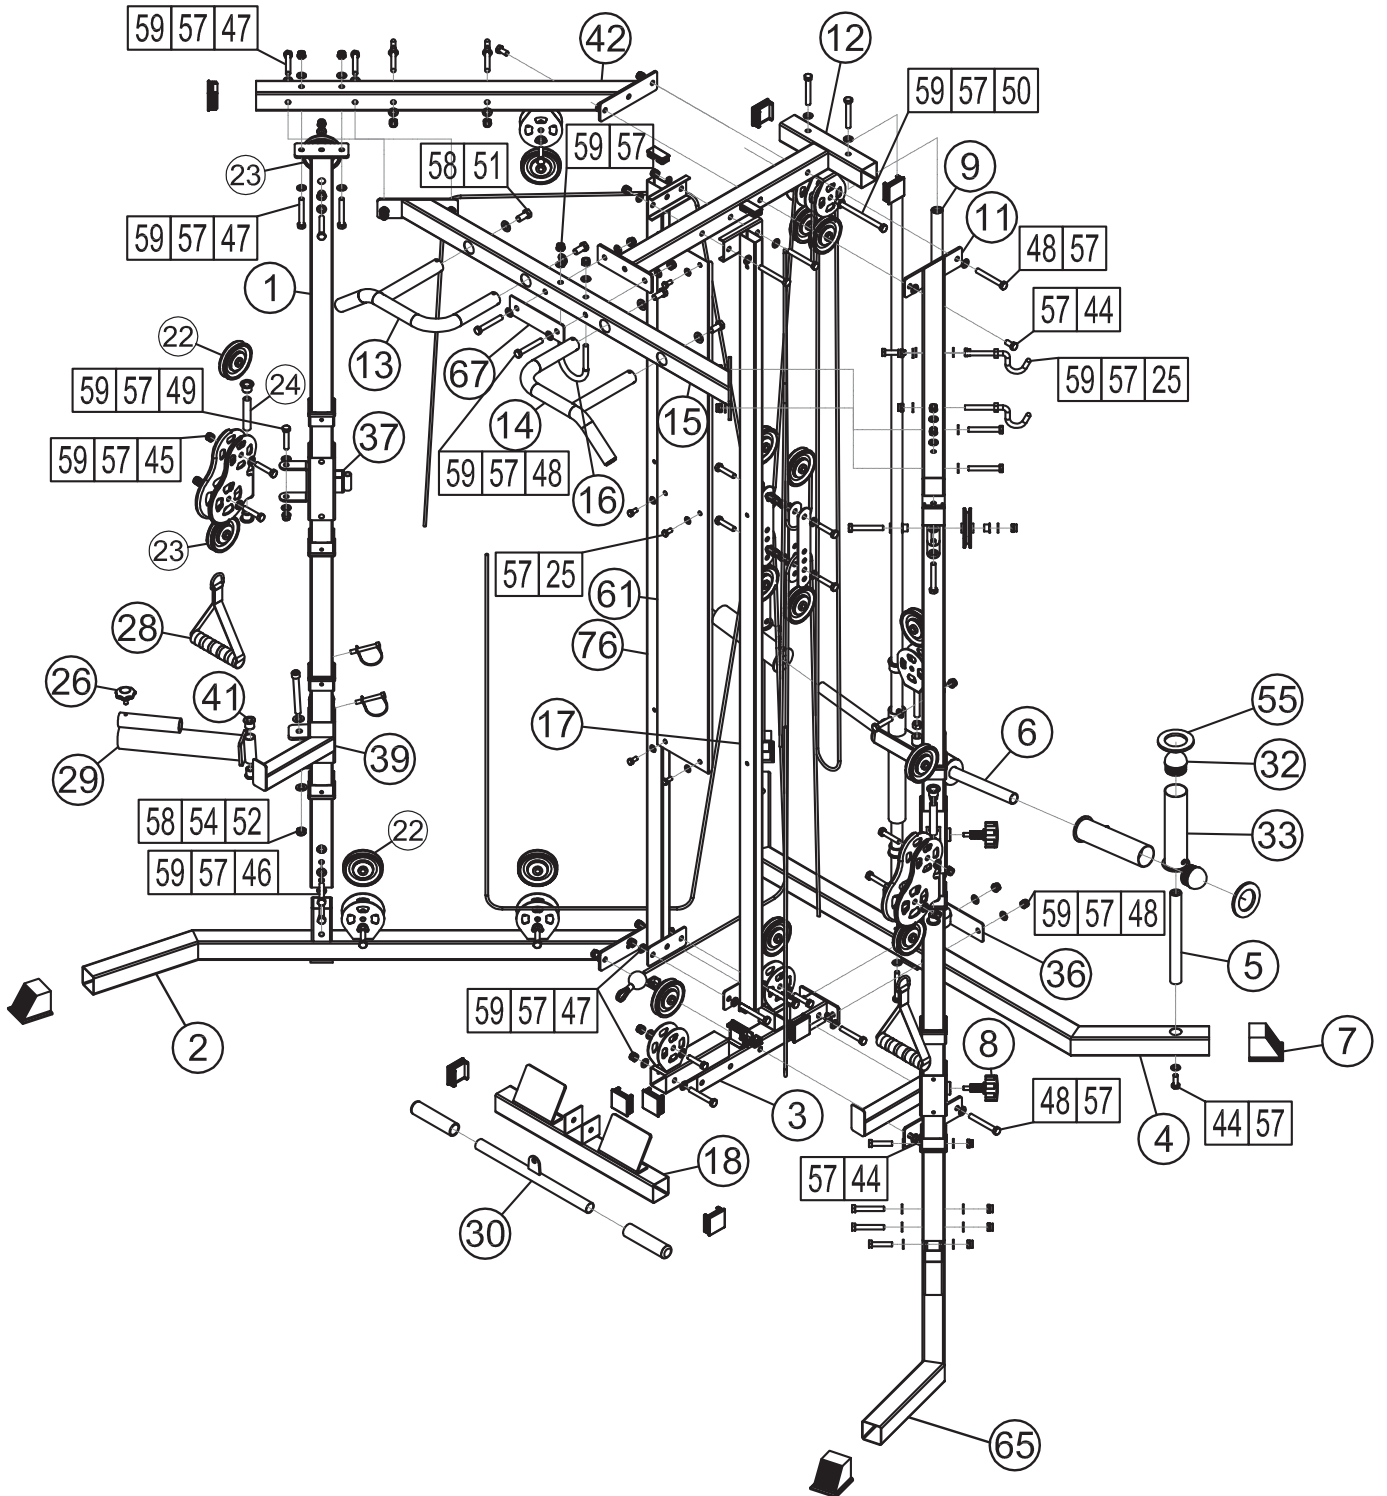

Training equipment from Taurus® is subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

Error Descriptions

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

Your statutory rights are not affected.

Warranty

The warranty is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

Warranty period

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

Repair Costs

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warranty personally and are not a part of repair. After the expiration of the warranty period for repair costs, a pure parts warranty applies, which does not include the repair, installation and delivery costs.

The terms of use are defined as follows:

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

Warranty Service

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.

Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.







































If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

DE	DK	FR
<p>TECHNIK</p> <p> +49 4621 4210-900</p> <p> +49 4621 4210-698</p> <p> technik@sport-tiedje.de</p> <p> Öffnungszeiten entnehmen Sie unserer Homepage.</p> <p>SERVICE</p> <p> 0800 20 20277 (kostenlos)</p> <p> 04621 4210 - 0</p> <p> info@sport-tiedje.de</p> <p> Öffnungszeiten entnehmen Sie unserer Homepage.</p>	<p>TEKNIK OG SERVICE</p> <p> 80 90 16 50</p> <p>+49 4621 4210-945</p> <p> info@fitshop.dk</p> <p> Åbningstider kan findes på hjemmesiden.</p>	<p>TECHNIQUE & SERVICE</p> <p> +33 (0) 189 530984</p> <p>+49 4621 42 10 933</p> <p> info@fitshop.fr</p> <p> Vous trouverez les heures d'ouverture sur notre site Internet.</p>
	PL	BE
	<p>DZIAŁ TECHNICZNY I SERWIS</p> <p> 22 307 43 21</p> <p>+49 4621 42 10-948</p> <p> info@fitshop.pl</p> <p> Godziny otwarcia można znaleźć na stronie głównej.</p>	<p>TECHNIQUE & SERVICE</p> <p> 02 732 46 77</p> <p>+49 4621 4210 933</p> <p> info@fitshop.be</p> <p> Vous trouverez les heures d'ouverture sur notre site Internet.</p>
UK	NL	INT
<p>CUSTOMER SUPPORT</p> <p> 00800 2020 2772</p> <p>+494621 4210 944</p> <p> info@sport-tiedje.co.uk</p> <p> You can find the opening hours on our homepage.</p>	<p>TECHNISCHE DIENST & SERVICE</p> <p> +31 172 619961</p> <p> info@fitshop.nl</p> <p> De openingstijden vindt u op onze homepage.</p>	<p>TECHNICAL SUPPORT & SERVICE</p> <p> +49 4621 4210-944</p> <p> service-int@sport-tiedje.de</p> <p> You can find the opening hours on our homepage.</p>
ES	AT	CH
<p>TECNOLOGÍA Y SERVICIOS</p> <p> 911 238 029</p> <p> info@fitshop.es</p> <p> Consulta nuestro horario de apertura en la página web.</p>	<p>TECHNIK & SERVICE</p> <p> 0800 20 20277 (Freecall)</p> <p>+49 4621 42 10-0</p> <p> info@sport-tiedje.at</p> <p> Öffnungszeiten entnehmen Sie unserer Homepage.</p>	<p>TECHNIK & SERVICE</p> <p> 0800 202 027</p> <p>+49 4621 42 10-0</p> <p> info@sport-tiedje.ch</p> <p> Öffnungszeiten entnehmen Sie unserer Homepage.</p>

Please find a detailed overview including address and opening hours for all stores of the Sport-Tiedje Group in Germany and abroad on the following website:

www.sport-tiedje.com/en/stores

WE LIVE FITNESS

WEBSHOP AND SOCIAL MEDIA

Sport-Tiedje is Europe's largest specialist store for home fitness equipment with currently over 70 stores and one of the world's most renowned online mail order companies for fitness equipment. Private customers order via the 25 web shops in the respective national language or have their desired equipment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

Sport-Tiedje offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.

Visit us also on our social media platforms or our blog!



www.sport-tiedje.co.uk
www.sport-tiedje.de/blog



www.facebook.com/SportTiedje



www.instagram.com/sporttiedje



www.youtube.com/user/sporttiedje

TAURUS

 cardiostrong

BODYCRAFT

 cardiojump

 **DUKEFITNESS**

DARWIN

Notes

Notes

TAURUS[®]

Taurus Free Cable Motion