

Assembly and Operating Instructions









FSTFSL7004.01.01

Art. No. TF-SL7004

Content

1	GENERAL INFORMATION	8
1.1	Technical Data	8
1.2	Personal Safety	9
1.3	Set-Up Place	10
2	ASSEMBLY	11
2.1	General Instructions	11
2.2	Scope of Delivery	11
2.3	Assembly	14
3	STORAGE AND TRANSPORT	24
3.1	General Instructions	24
4	TROUBLESHOOTING, CARE AND MAINTENANCE	25
4.1	General Instructions	25
4.2	Faults and Fault Diagnosis	25
4.3	Maintenance and Inspection Calendar	26
5	DISPOSAL	26
6	RECOMMENDED ACCESSORIES	27
0	RECOMMENDED ACCESSORIES	
7	ORDERING SPARE PARTS	28
7.1	Serial Number and Model Name	28
7.2	Parts List	29
7.3	Exploded Drawing	32
8	WARRANTY	33
9	CONTACT	35
9	CONTACT	22

Dear customer,

Thank you for choosing quality training equipment from the TAURUS® brand. Taurus offers sports and fitness equipment for home users with high demands on quality, functionality and longevity. Also, Taurus is a well-known and experienced brand for equipping professional rooms for fitness studios and business customers. The focus of Taurus fitness equipment is on what matters most in sports: maximum performance! Therefore, the devices are developed in close consultation with athletes and sports scientists. Because athletes know best what makes perfect fitness equipment.

Further information can be found at www.fitshop.com.

Intended Use

The equipment may only be used for its intended purpose

This fitness equipment is suitable for home use, semi-professional use and commercial or professional use. The semi-professional sector includes, for example, institutional facilities such as hospitals, schools, hotels and associations. Professional use refers to commercial use, e.g. in a fitness studio.

Legal Notice

Fitshop GmbH Europe's No. 1 for home fitness

International Headquarters Flensburger Straße 55 24837 Schleswig Germany Management:

Christian Grau

Sebastian Campmann

Dr. Bernhard Schenkel

No. HRB 1000 SL

Local Court Flensburg

European VAT Number: DE813211547

Disclaimer

© TAURUS is a registered brand of the company Fitshop GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Fitshop is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.



Europe's No.1 for Home Fitness

ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.

Due to ongoing changes and software optimisations, the manual may have to be updated. If you notice any discrepancies during assembly or use, please refer to the manual uploaded to the webshop. The latest manual is always available there.



This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Training devices must be classified according to accuracy and use. Accuracy classes are only applicable to devices that display training data.

Accuracy classes

Class A: high accuracy.
Class B: medium accuracy.
Class C: low accuracy.

The use classes explain the intended use of the training device.

Use classes

Class S (studio): professional and/or commercial use.

These training devices are intended for the use in training rooms of facilities such as sports clubs, school facilities, hotels, clubs and studios whose access and supervision is specifically regulated by the owner (person with legal responsibility).

Class H (home use): use at home.

These stationary training devices are intended for the use in private homes where access to the training device is regulated by the owner (person with legal responsibility).

Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

► ATTENTION

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

CAUTION

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

↑ WARNING

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

↑ DANGER

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

(i) NOTICE

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.

1.1 Technical Data

Weight and Dimensions

Packaging dimensions (L x W x H) and article weight (gross, incl. packaging) approx.:

Box 1: 201.5 cm x 72.5 cm x 32.5 cm 122 kg Box 2: 108.5 cm x 76.5 cm x 43.5 cm 73.6 kg

Set-up dimensions (L x W x H) approx.: 176 cm x 145 cm x 165 cm

Article weight (net, excl. packaging) approx.: 167.5 kg

Maximum user weight: 150 kg
Maximum load weight (training): 2 x 150 kg
Maximum load weight (storage): 2 x 100 kg

Use class:

(i) NOTICE

This equipment is compatible with weight plates with a 50 mm hole and a maximum external diameter of 500 mm (not included in the scope of delivery).

1.2 Personal Safety

↑ DANGER

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.
- + The owner must communicate all warnings and instructions to the user.

↑ WARNING

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + The equipment is strictly for use by one person at a time.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other non-slip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.
- + Always start each workout with a light warm-up and end with a cool-down phase.
- + Using the machine as a support during stretching exercises or attaching resistance bands, ropes or other accessories to it, may cause injuries.

CAUTION

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.
- + Be aware that if adjustment devices are left protruding, they may impede the user's movement.
- + The weights should remain in the user's field of vision during the entire exercise to prevent danger to third parties.

ATTENTION

+ Do not insert any objects of any kind into the openings of the device.

1.3 Set-Up Place

MARNING


+ Do not place the equipment in main corridors or escape routes.

CAUTION

- + Choose a location in which to place the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The training room should be well ventilated during training and not be exposed to any draughts.
- + Choose the place in which to set up the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The free area in the direction from which the exercise equipment is accessed must be at least 0.6 m larger than the exercise area.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.
- + If your device is to be mounted on the wall/ceiling, make sure that you use the appropriate assembly material to avoid possible damages or personal injuries. The contractual partner accepts no liability for this.

ATTENTION

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.
- + For Class S equipment, the exercise equipment may only be used in areas where access, supervision and control are specifically regulated by the owner.

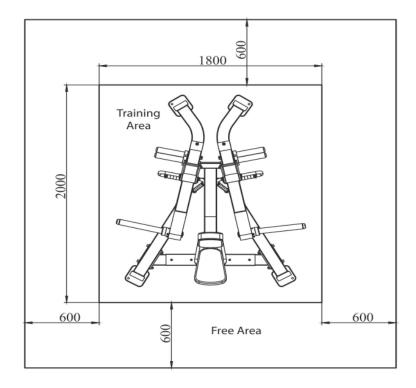

Low Row

2.1 General Instructions

↑ DANGER

+ Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.

WARNING

+ Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.

CAUTION

- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.

ATTENTION

+ To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.

(i) NOTICE

- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- + Ideally, assemble the equipment at its later set-up place.


2.2 Scope of Delivery

The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.

CAUTION

If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.


Content of Box 1

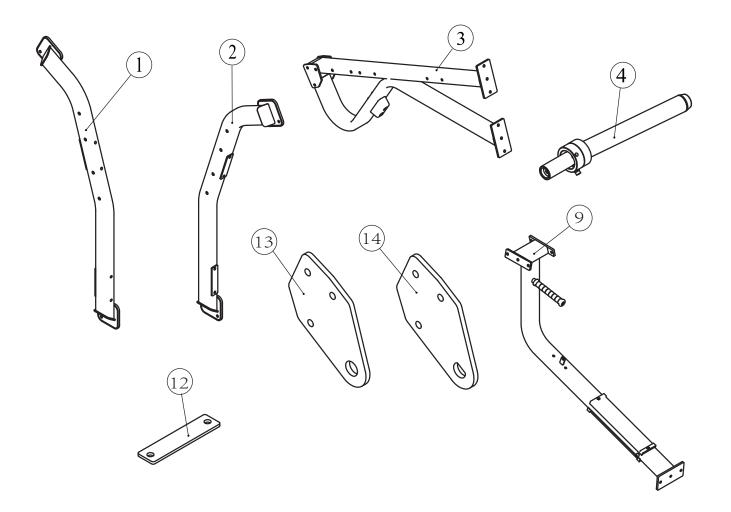

Part no.	Description	Qty.
1	Left Bottom Frame	1
2	Right Bottom Frame	1
3	Upright Frame	2
4	Weight Horn Assembly	2
9	Middle Standing Frame	1
13	Pivot Plate 1	2
14	Pivot Plate 2	2

12 Low Row

Content of Box 2

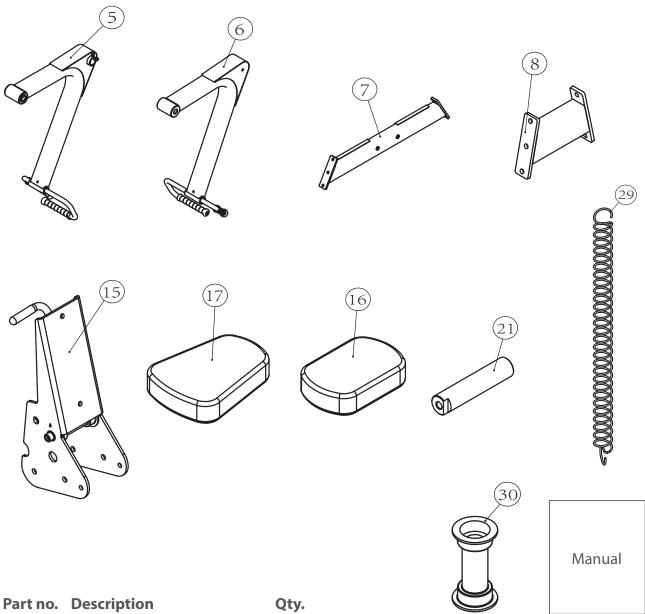

Part no.	Description	Qty.
5	Left Arm Frame	1
6	Right Arm Frame	1
7	Long Cross Frame	1
8	Short Cross Frame	1
15	Seat Frame	1
16	Chest Pad	1
17	Seat Pad	1
21	Pivot Shaft	2
29	Pull Spring	1
30	Idler Wheel	2
	Manual	1
	Hardware Pack	3

Hardware pack


2.3 Assembly

Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

(i) NOTICE

- + First loosely screw all parts together and check that they fit properly. Tighten the screws using the tool only when you are instructed to do so.
- + If you have difficulty recognising the graphics, we recommend that you open and/or download the PDF instructions stored in the webshop on your end device (e.g. smartphone, tablet or PC). There you have the option of zooming in closer. Please note that the Adobe Acrobat Reader programme must be installed on your end device in order to open the file.

Required Tools

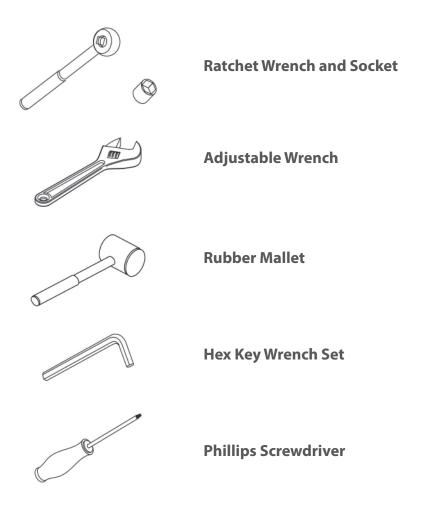


Step 1: Assembly of the Bottom Frames and Cross Frames

(i) NOTICE

Do not tighten the screws and nuts completely yet.

Attach the long cross frame (7) and the short cross frame (8) to the left and right bottom frames (1 & 2) with a total of eight screws (49), 16 flat washers (62) and eight lock nuts (65).

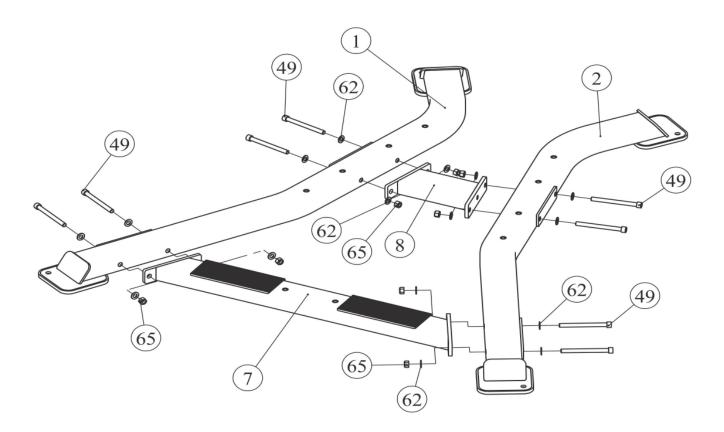


Step 2: Assembly of the Upright Frames and Middle Standing Frame

(i) NOTICE


Do not tighten the screws and nuts completely yet.

- 1. Attach one upright frame (3) to the left bottom frame (1) with four screws (52) and four flat washers (62).
- 2. Attach another upright frame (3) to the right bottom frame (2) with four screws (52) and four flat washers (62).
- 3. Attach the middle standing frame (9) to the long cross frame (7) with two screws (52) and two flat washers (62).
- 4. Attach the middle standing frame (9) to the upright frames (3) with a total of two narrow outside plates (12), four screws (49), eight flat washers (62) and four lock nuts (62).
- 5. Tighten the screws and nuts from this and the previous assembly step with the appropriate tools.

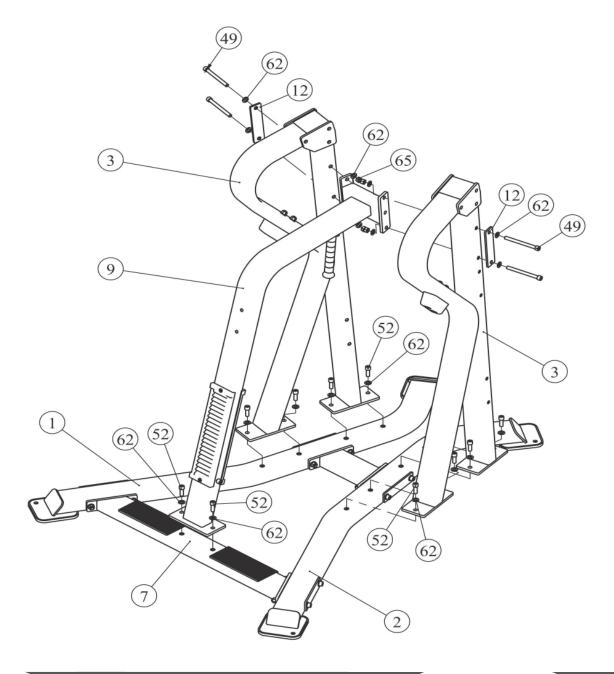

Step 3: Assembly of the Arm Frames

- 1. Slide one pivot shaft (21) through the right arm frame (6).
- 2. Attach two baffle rings (83), one pivot plate 1 (13) and one pivot plate 2 (14) to the right arm frame (6) with two domed aluminium caps (23) and two screws (54).
- 3. Attach the right arm frame (6) to the right sided upright frame (3) with three screws (47), six flat washers (62) and three lock nuts (65).
- 4. Repeat the steps 1 to 3 with the left arm frame (5).
- 5. Tighten the screws and nuts with the appropriate tools.

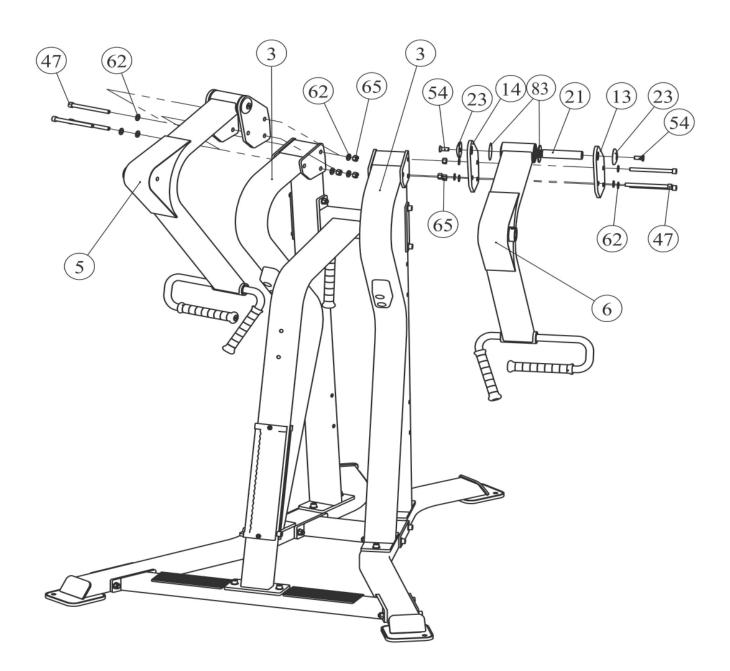


Step 4: Assembly of the Weight Horns and Weight Plate Storages

1. Attach two weight plate storages (11) to the right upright frame (3) with a total of four screws (50), eight flat washers (62) and four lock nuts (65).

(i) NOTICE

The weight horns should be installed at a 5-degree-angle like shown.

- 2. Attach one weight horn (4) to the right arm frame (6) with one screw (53) and one domed aluminium cap (23).
- 3. Secure the weight horn (4) with two screws (82), two spring washers (81) and two flat washers (80).
- 4. Slide one rubber bumper (22) onto the weight horn (4).
- 5. Repeat the steps 1 to 4 on the left side.
- 6. Tighten the screws and nuts with the appropriate tools.

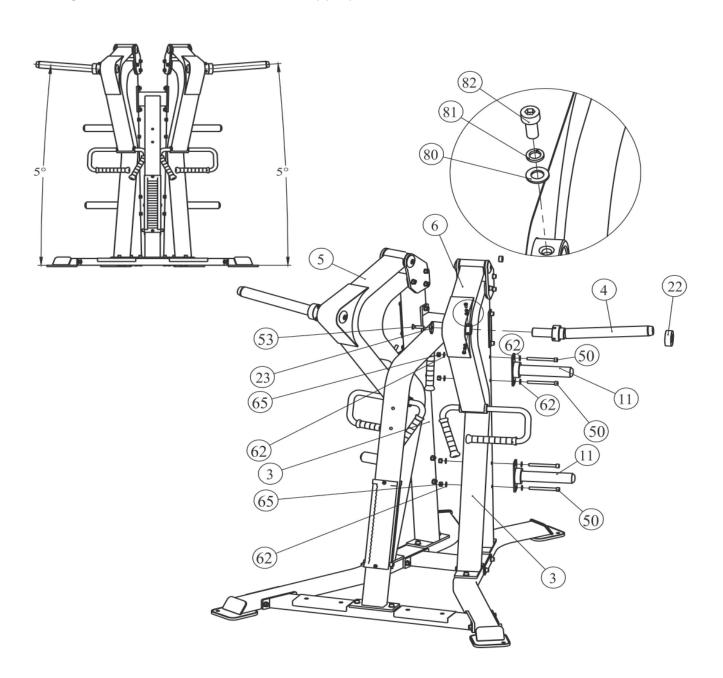

Step 5: Assembly of the Seat Frame


(i) NOTICE


- + Do not tighten the screws and nuts completely yet.
- + Make sure that the seat frame (15) can be moved up and down smoothly. If needed, slightly loosen the screws and nuts.
- 1. Attach the seat frame (15) to the middle standing frame (9) with two idler wheels (30), two screws (48), four flat washers (62) and two lock nuts (65).
- 2. Slide the supporting sleeve (71) between the two frame parts of the seat frame (15).
- 3. Attach the supporting sleeve (71) to the seat frame (15) with one screw (55), two flat washers (63) and one lock nut (64).

CAUTION

Carefully hold the pull spring (29) at the hooks.


4. Hook the pull spring (29) onto the supporting sleeve (71) and the middle standing frame (9).

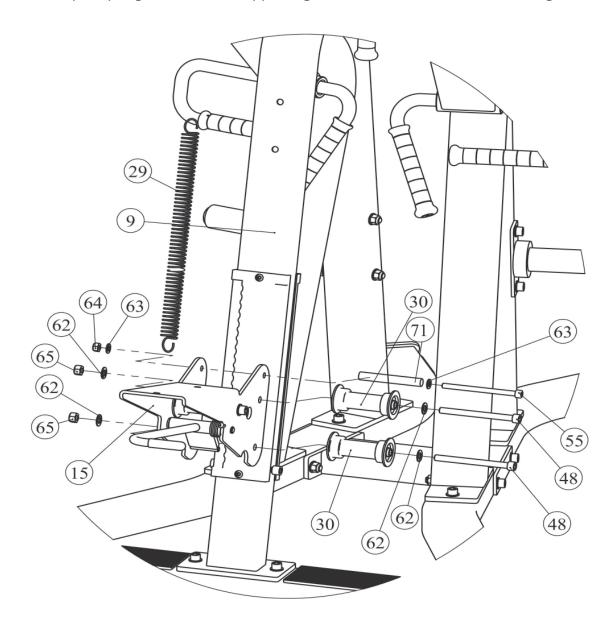

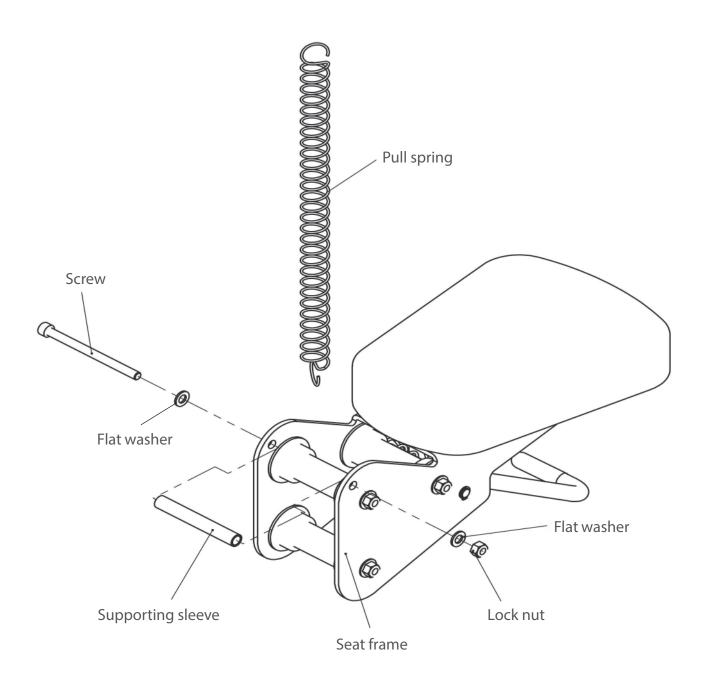

Step 6: Assembly of the Pads

- 1. Attach the seat pad (17) to the seat frame (16) with two screws (57) and two flat washers (63).
- 2. Attach the chest pad (16) to the middle standing frame (9) with two screws (56) and two flat washers (63).
- 3. Tighten the screws with the appropriate tool.
- 4. Check that all screws and nuts are properly tightened and retighten if needed.
 - → The assembly is completed.

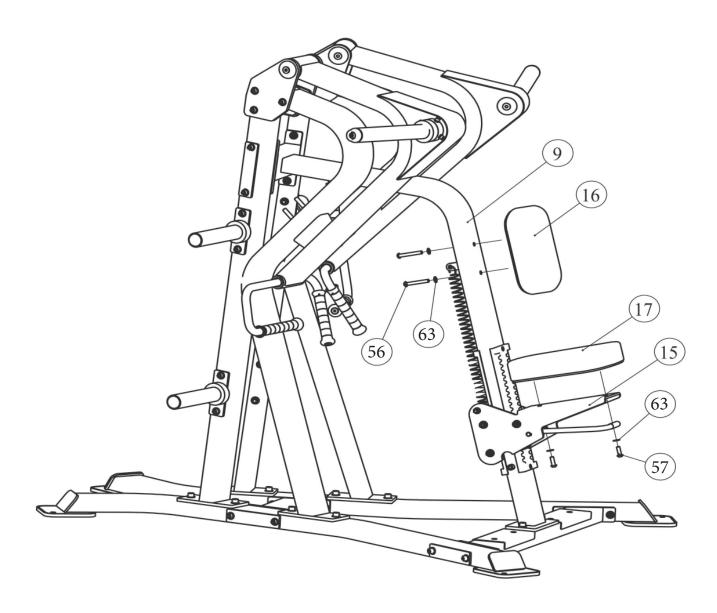


Load and Unload Weight Plates

CAUTION

- + Make sure to always use some sort of weight collar when exercising with external weights.
- + Never store unused weight plates on the floor.
- + Store unused weight plates on a weight rack or on the integrated storage options.


ATTENTION

- + The weight horn is compatible with 50 mm weight plates with a maximum external diameter of 450 mm.
- + Weight plates and weight collars are not included in the scope of delivery.
- + Do not load more than 150 kg on each weight horn (training).
- + Do not load more than 100 kg on each weight horn (storage).
- To load the weight horn, carefully grab one weight plate at a time with both hands. 1.
- 2. Slide each weight plate onto the weight horn one by one until you have reached your desired training weight.
- 3. Attach a weight collar to secure the weight plates from sliding off.
- To unload the weight horn, take off the weight collar. 4.
- 5. Slide each weight plate off of the weight horn with both hands one by one.

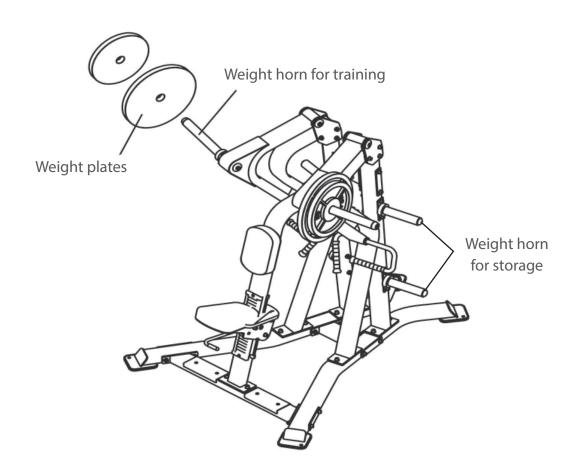


Seat Adjustment


- 1. Push the adjustable handle.
- 2. Move the seat to the desired position.
- 3. Release the handle.

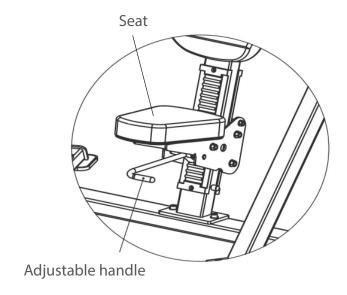


Exercise Instructions

- 1. Select an appropriate weight.
- 2. Adjust the seat to the desired position.
- 3. Sit on the seat with your chest resting against the chest pad.
- 4. Grasp the handles.
- 5. Slowly pull the handles towards your chest.
- 6. Pause slightly at the end position.
- 7. Slowly return to the starting position.

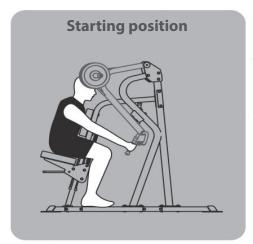

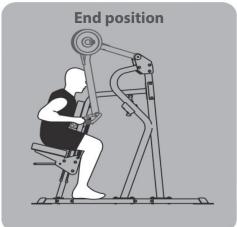

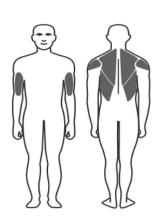

3.1 General Instructions

↑ WARNING

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.

ATTENTION

+ Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.

4.1 General Instructions

WARNING

+ Do not make any improper changes to the equipment.

CAUTION

+ Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

ATTENTION

+ In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

4.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

Fault	Cause	Solution
Squeaking & cracking Screw connections loosened or too tight		+ Check or lubricate screw connections*
Unit wobbles	+ Uneven ground + Loose screw connections	+ Align unit+ Tighten screw connections

^{*} With a grease-free silicone oil or silicone spray.

4.3 Maintenance and Inspection Calendar

To avoid damage from body sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly	Quarterly
Screw connections		I	
Cushions	С		
Legend: C = clean; I = inspect			

5 DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an recycling centre. Further information can be obtained from your local authority's recycling service.



The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

RECOMMENDED ACCESSORIES

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. For training equipment like smith machines, weight benches or racks this could for example be a **floor mat**, which makes your fitness equipment stand more securely and also protects the floor from sweat but it could be also **additional weights**, **handles**, **foot straps** for leg exercises or **triceps ropes**. For some smith machines, there are also optional addons such as **leg presses** that make your workout even more intense and comprehensive.

Our range of accessories offers the highest quality and makes training even better. If you to find out more about compatible accessories, please go to the detail page of the webshop (the easiest way is to enter the article number in the search field above a recommended accessories on this page. Of course, you can also contact our custometelephone, e-mail, in one of our branches or via our social media channels. We will be the you!



7.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 9 of this operating manual.

(i) NOTICE

The serial number of your equipment is unique. It's located on a white sticker. The exact position of this sticker is shown in the following illustration.

Enter the serial number in the appropriate field.



Serial number:		
Brand / Category:		
Taurus / multi gym		
Model Name:		
Iso Low Row Sterling		
Article Number:		
TF-SL7004		


7.2 Parts List

No.	Supplier parts no.	Name	Specification	Qty.
1	SL70040100	Left Bottom Frame		1
2	SL70040200	Right Bottom Frame		1
3	SL70040300	(left/right) Upright Frame		2
4	SL70041000V1	Weight Horn Assembly		2
5	SL70040500	Left Arm Frame		1
6	SL70040600	Right Arm Frame		1
7	SL70040700V1	Long Cross Frame		1
8	SL70040800	Short Cross Frame		1
9	SL70040900	Middle Standing Frame		1
10	SL70012800	Adjustable Handle		1
11	SL70100300	Weight Plate Storage		4
12	SL70010103	Narrow Outside Plate	45*200*6	2
13	SL70041300	Pivot Plate 1	151.4*244.6*10	2
14	SL70041400	Pivot Plate 2	151.4*244.6*10	2
15	SL70012300	Seat Frame	441.9*117*6	1
16	SL70041600V1	Chest Pad	200*300*70	1
17	SL70013000V1	Seat Pad	340*270*70	1
18	SL7007B2100	Pedal	250*105*25*2	2
19	SL70011100	Front Plastic Plate	435*107*19	1
20	SL70011200	Rear Plastic Plate	435*107*19	1
21	SL70011500	Pivot Shaft Φ30	φ30*134	2
22	SL70013100	Rubber bumper	DΤφ76*φ42*25	2
23	SL70011700	Domed Aluminium Cap	φ54*φ12.5*10.6	6
24	SL70011800	Long Weight Horn Sleeve	φ41.4*φ49*361	2
25	SL70100400	Weight Horn Sleeve	φ41.4*φ49*223	4
26	SL70012000	Weight Horn Plastic Cap	φ49*φ12.5*25	2
27	SL70042700	Short Aluminium Grip	φ31*φ25*150	2
28	SL70012100	Aluminium Grip	φ31*φ25.4*175	2
29	SL70012200	Pull Spring	φ31.5*φ2.5*165	1
30	SL70012400	Idler Wheel	φ60*φ40*113.5	3
31	SL70012500	Wheel Shaft	φ17*φ12.5*116.5	3

32	SL70012600	Wring Spring	φ30*φ3*30	1
33	SL70012700	Shaft For Adjustable	φ12*135.1	1
	3270012700	Handle	Ψ12 133.11	ļ [*]
34	PL380800	Large Rubber Bumper	120*140*52	2
35	SL70013200	Plastic Sleeve	φ18*φ10*19	2
36	HF985A1500	Weight Horn Rubber Donut	φ76*φ42*25	4
37	IT90102100	Aluminium Cap Φ25	φ43*φ10.5*26	1
38	IT90102200	Aluminium Ring Φ25	φ40*φ26.8*18	1
39	RF-6012500	End Plug	φ41.3*φ34	4
40	CG50001700	Rubber Grip	DTφ19*φ14*70	1
41	CWRVL0051200	Rubber Foot	159.5*159.5*11	4
42	M01402000	Oilite Bushing	φ25*φ12.2*13	2
43	GB2766203-2Z	Ball Bearing	6203-2Z	6
44	GB894.117FH12	External Retaining Ring Φ12	φ17	6
45	GB894.112FH12	External Retaining Ring Φ17	φ12	2
46	GB2766206-2ZC3	Ball Bearing 6206-2Z	6206-2Z	4
47	GB70M12*155DHS20	Socket Head Cap Screw M12*155	M12*155(8.8 degree)	6
48	GB70M12*145DHS20	Socket Head Cap Screw M12*145	M12*145(8.8 degree)	2
49	GB70M12*135DHS20	Socket Head Cap Screw M12*135	M12*135(8.8 degree)	12
50	GB70M12*125DHS20	Socket Head Cap Screw M12*125	M12*125(8.8 degree)	8
51	GB70M12*90DHS20	Socket Head Cap Screw M12*90	M12*90	4
52	GB70M12*35*35DHS20NL	Socket Head Cap Screw M12*35	M12*35(full thread,8.8 degree)	2
53	CNLM12*50*50DS20NL	Flat Head Cap Screw M12*50	M12*50(full thread, ,8.8 degree)	2
54	CNLM12*30DS20NL	Flat Head Cap Screw M12*30	M12*30(,8.8 degree)	4
55	GB70M10*145DHS20	Socket Head Cap Screw M10*145	M10*145(8.8 degree)	1

56	PNLM10*75DHS2	Button Head Cap Screw M10*75	M10*75	2
57	PNLM10*30DHS2	Button Head Cap Screw M10*30	M10*30	2
58	CNLM10*25DS20NL	Flat Head Cap Screw M10*25	M10*25(8.8 degree)	1
59	PNLM8*65DHS2	Button Head Cap Screw M8*65	M8*65	2
61	YZGB7710-32*3.2N19	Socket Set Screw 10- 32*3.2	10-32UNF*3.2	2
62	DQ12DHS2A	Flat Washer Φ13*Φ24*1.5	φ13*φ24*1.5	8
63	GB9510DHS2	Flat Washer Φ11*Φ20*2	φ11*φ20*2	6
64	NM10DHS2	Nylon lock Nut M10	M10	1
65	NM12DHS2	Nylon lock Nut M12	M12	4
66	NM8DHS2	Nylon lock Nut M8	M8	2
67	NBS10DHS	Hex key S=10	S=10	1
68	NBS8DHS	Hex key S=8	S=8	1
69	NBS6DHS	Hex key S=6	S=6	1
70	NBS4DHS	Hex key S=4	S=4(Long side=120mm)	1
71	SL70026700	Supporting Sleeve	φ16*2.0*117	1
72	GB17880.3M8*16.5DS17	Rivet Nut M8	M8	4
73	CNLM8*20DS2	Flat Head Cap Screw M8*20	M8*20	4
80	GB958DHS2	Flat Washer Φ9*Φ16*1.6	φ9*φ16*1.6	4
81	GB938DHS12	Spring Washer Φ8	φ8	4
82	GB70M8*30DHS20	Socket Head Cap Screw M8*30	M8*30(8.8 degree)	4
83	SL70022500	Baffle Ring	φ46*φ30.5*3	4

7.3 Exploded Drawing

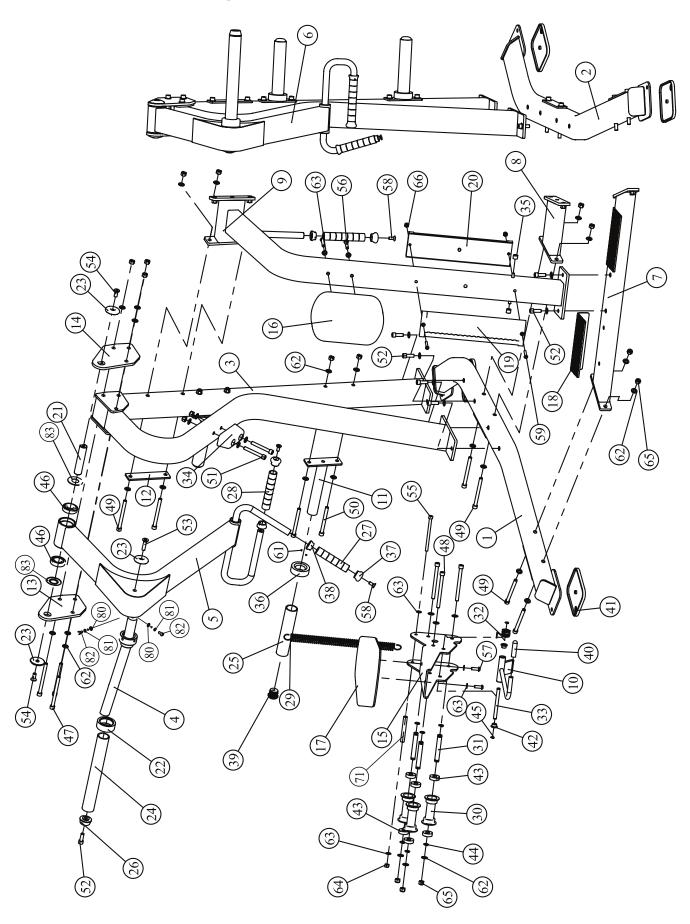

8 WARRANTY

Products from TAURUS® are subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

Error Descriptions

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

Your statutory rights are not affected.

Warrantee

The warrantee is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

Warranty period

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

Repair Costs

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warrantee personally and are not a part of repair. After the expiration of the warranty period, the responsibility for parts costs, repair costs, installation costs and delivery costs lies with the warranty holder.

The terms of use are defined as follows:

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

Warranty Service

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.

Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

DE	DK	UK
TECHNIK	TEKNIK OG SERVICE	CUSTOMER SUPPORT
+49 4621 4210-900	80 90 16 50 +49 4621 4210-945 info@fitshop.dk Åbningstider kan findes på hjemmesiden: https://stg.fit/statit7 FR TECHNIQUE & SERVICE +33 (0) 189 530984	00800 2020 2772 +494621 4210 944 info@fitshop.co.uk Vou can find the opening hours on our homepage: https://stg.fit/statitc BE TECHNIQUE & SERVICE 02 732 46 77
info@fitshop.de Öffnungszeiten entnehmen Sie unserer Homepage: https://stg.fit/statita	+49 4621 42 10 933 info@fitshop.fr Vous trouverez les heures d'ouverture sur notre site Internet: https://stg.fit/statit4	+49 4621 4210 933 info@fitshop.be Vous trouverez les heures d'ouverture sur notre site Internet: https://stg.fit/statit8
ES	NL	INT
TECNOLOGÍA Y SERVICIOS 911 238 029 info@fitshop.es Consulta nuestro horario de apertura en la página web: https://stg.fit/statit5	TECHNISCHE DIENST & SERVICE	TECHNICAL SUPPORT & SERVICE +49 4621 4210-944 service-int@fitshop.de You can find the opening hours on our homepage: https://stg.fit/statita
PL	AT	СН
DZIAŁ TECHNICZNY I SERWIS 22 307 43 21 +49 4621 42 10-948 info@fitshop.pl Godziny otwarcia można znaleźć na stronie głównej: https://stg.fit/statit6	TECHNIK & SERVICE 0800 20 20277 (Freecall) +49 4621 42 10-0 info@fitshop.at Öffnungszeiten entnehmen Sie unserer Homepage: https://stg.fit/statitb	TECHNIK & SERVICE © 0800 202 027 +49 4621 42 10-0 info@fitshop.ch Offnungszeiten entnehmen Sie unserer Homepage: https://stg.fit/statit9

Please find a detailed overview including address and opening hours for all stores of the Fitshop Group in Germany and abroad on the following website:

www.fitshop.com/en/stores

WE LIVE FITNESS

WEBSHOP AND SOCIAL MEDIA

Fitshop is Europe's largest specialist store for home fitness equipment with currently over 70 stores and one of the world's most renowned online mail order companies for fitness equipment. Private customers order via the 25 web shops in the respective national language or have their desired equpiment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

Fitshop offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.

Visit us also on our social media platforms or our blog!

