


Assembly and Operating Instructions

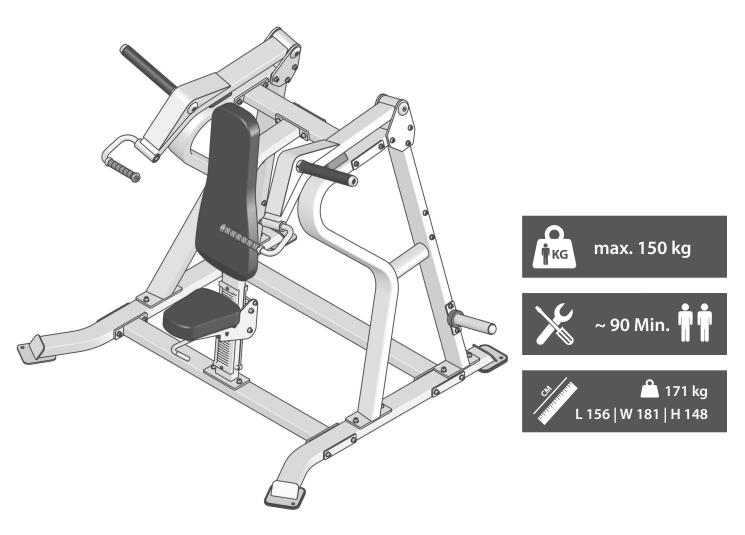

FSTFSL7003.01.01

Art. No. TF-SL7003

Taurus Iso Shoulder Press Sterling

2 Shoulder Press

Content

| 1 | GENERAL INFORMATION | 8 |
|-------------------|---|----------------|
| 1.1 1.2 1.3 | Technical Data Personal Safety Set-Up Place | 8 9 10 |
| 2 | ASSEMBLY | 11 |
| 2.1 2.2 2.3 | General Instructions Scope of Delivery Assembly | 11 11 15 |
| 3 | STORAGE AND TRANSPORT | 25 |
| 3.1 | General Instructions | 25 |
| 4 | TROUBLESHOOTING, CARE AND MAINTENANCE | 26 |
| 4.1 4.2 4.3 | General Instructions Faults and Fault Diagnosis Maintenance and Inspection Calendar | 26 26 27 |
| 5 | DISPOSAL | 27 |
| 6 | RECOMMENDED ACCESSORIES | 28 |
| 7 | ORDERING SPARE PARTS | 29 |
| 7.1 7.2 7.3 | Serial Number and Model Name Parts List Exploded Drawing | 29 30 33 |
| 8 | WARRANTY | 34 |
| 9 | CONTACT | 36 |

4 Shoulder Press

Dear customer,

Thank you for choosing quality training equipment from the TAURUS[®] brand. Taurus offers sports and fitness equipment for home users with high demands on quality, functionality and longevity. Also, Taurus is a well-known and experienced brand for equipping professional rooms for fitness studios and business customers. The focus of Taurus fitness equipment is on what matters most in sports: maximum performance! Therefore, the devices are developed in close consultation with athletes and sports scientists. Because athletes know best what makes perfect fitness equipment.

Further information can be found at www.fitshop.com.

Intended Use

The equipment may only be used for its intended purpose.

This fitness equipment is suitable for home use, semi-professional use and commercial or professional use. The semi-professional sector includes, for example, institutional facilities such as hospitals, schools, hotels and associations. Professional use refers to commercial use, e.g. in a fitness studio.

Legal Notice

Fitshop GmbH Europe's No. 1 for home fitness

International Headquarters Flensburger Straße 55 24837 Schleswig Germany Management: Christian Grau Sebastian Campmann Dr. Bernhard Schenkel No. HRB 1000 SL Local Court Flensburg European VAT Number: DE813211547

Disclaimer

© TAURUS is a registered brand of the company Fitshop GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Fitshop is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.



ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.

Due to ongoing changes and software optimisations, the manual may have to be updated. If you notice any discrepancies during assembly or use, please refer to the manual uploaded to the webshop. The latest manual is always available there.



This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Training devices must be classified according to accuracy and use. Accuracy classes are only applicable to devices that display training data.

Accuracy classes

Class A: high accuracy. Class B: medium accuracy. Class C: low accuracy.

The use classes explain the intended use of the training device.

Use classes

Class S (studio): professional and/or commercial use.

These training devices are intended for the use in training rooms of facilities such as sports clubs, school facilities, hotels, clubs and studios whose access and supervision is specifically regulated by the owner (person with legal responsibility).

Class H (home use): use at home.

These stationary training devices are intended for the use in private homes where access to the training device is regulated by the owner (person with legal responsibility).

Shoulder Press

Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

ATTENTION

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

WARNING

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

DANGER

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

(i) NOTICE

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.

1 GENERAL INFORMATION

1.1 Technical Data

Weight and Dimensions

Packaging dimensions (L x W x H) and article weight (gross, incl. packaging) approx.:

| Box 1: Box 2: Box 3: | 137.5 cm x 85 cm x 27.5 cm 161.5 cm x 55.5 cm x 28 cm 113 cm x 66 cm x 32 cm | 68.5 kg 71 kg 56.3 kg |
|--|--|------------------------------------|
| Set-up dimensions | (L x W x H) approx.: | 156 cm x 181 cm x 148 cm |
| Article weight (net, excl. packaging) approx.: | | 171 kg |
| Maxmimum user weight: Maximum load weight (training): Maximum load weight (storage): | | 150 kg 2 x 150 kg 4 x 100 kg |
| Class: | | S |

(i) NOTICE

This equipment is compatible with weight plates with a 50 mm hole and a maximum external diameter of 450 mm (not included in the scope of delivery).

1.2 Personal Safety

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.
- + The owner must communicate all warnings and instructions to the user.

WARNING

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + The equipment is strictly for use by one person at a time.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other non-slip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.
- + Always start each workout with a light warm-up and end with a cool-down phase.
- + Using the machine as a support during stretching exercises or attaching resistance bands, ropes or other accessories to it, may cause injuries.

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.
- + Be aware that if adjustment devices are left protruding, they may impede the user's movement.
- + The weights should remain in the user's field of vision during the entire exercise to prevent danger to third parties.

ATTENTION

+ Do not insert any objects of any kind into the openings of the device.

1.3 Set-Up Place


WARNING

+ Do not place the equipment in main corridors or escape routes.

- + Choose a location in which to place the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The training room should be well ventilated during training and not be exposed to any draughts.
- + Choose the place in which to set up the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The free area in the direction from which the exercise equipment is accessed must be at least 0.6 m larger than the exercise area.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.
- + If your device is to be mounted on the wall/ceiling, make sure that you use the appropriate assembly material to avoid possible damages or personal injuries. The contractual partner accepts no liability for this.

ATTENTION

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.
- + For Class S equipment, the exercise equipment may only be used in areas where access, supervision and control are specifically regulated by the owner.

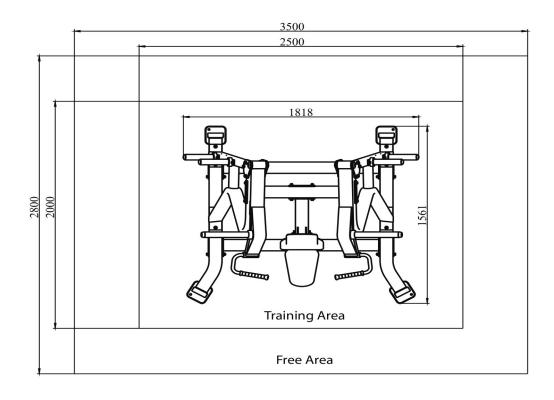

Shoulder Press

2.1 General Instructions

+ Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.

M WARNING

+ Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.

- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.

ATTENTION

+ To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.

i NOTICE

- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- + Ideally, assemble the equipment at its later set-up place.


2.2 Scope of Delivery

The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.

▲ CAUTION


If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

Content of Box 1

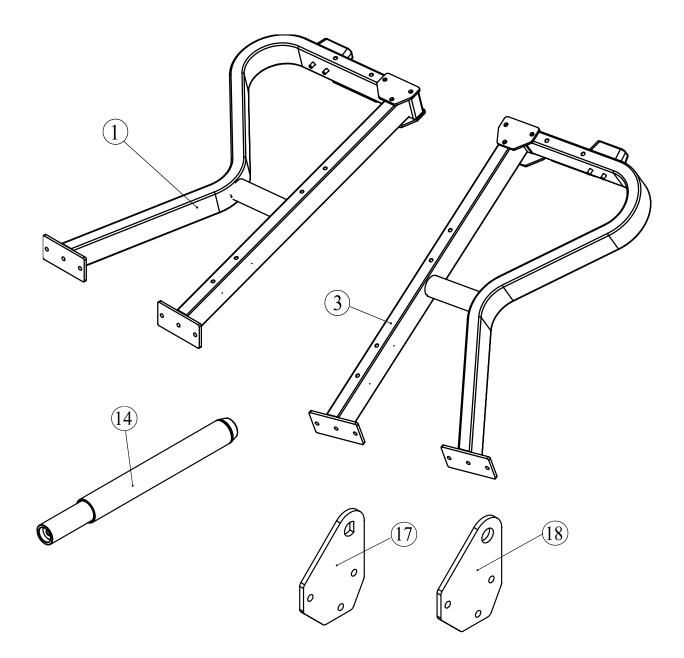


| No. | Description | Quantity |
|-----|----------------------|----------|
| 1 | Left Upright Frame | 1 |
| 3 | Right Upright Frame | 1 |
| 14 | Weight Horn Assembly | 2 |
| 17 | Pivot Plate 1 | 2 |
| 18 | Pivot Plate 2 | 2 |
| | | |


Content of Box 2

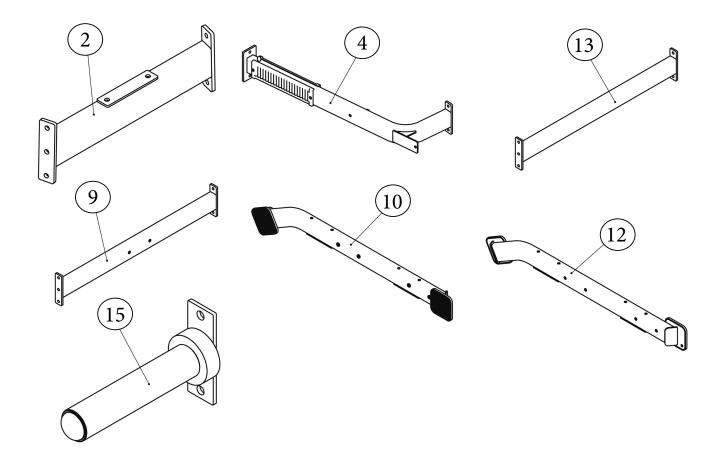

| No. | Description | Quantity |
|-----|----------------------|----------|
| 2 | Upper Cross Frame | 1 |
| 4 | Back Standing Frame | 1 |
| 9 | Front Cross Frame | 1 |
| 10 | Left Bottom Frame | 1 |
| 12 | Right Bottom Frame | 1 |
| 13 | Rear Cross Frame | 1 |
| 15 | Weight Plate Storage | 4 |
| | | |

Content of Box 3

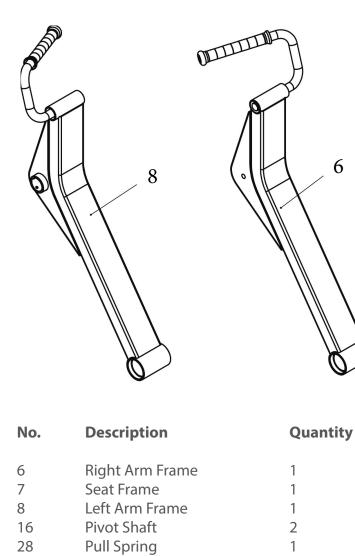

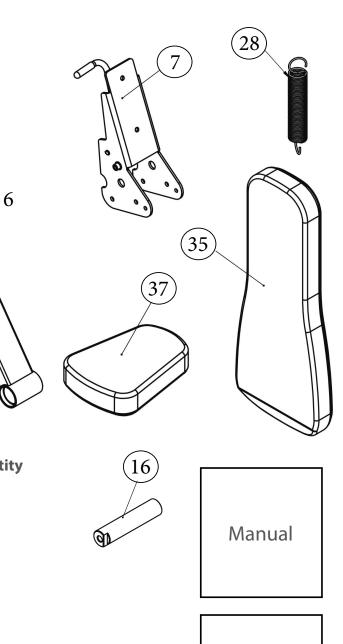

Hardware pack

Shoulder Press

14

35

37

Back Pad

Seat Pad

Manual

Hardware Pack

1

1

1


2.3 Assembly

Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

i NOTICE

- + First loosely screw all parts together and check that they fit properly. Tighten the screws using the tool only when you are instructed to do so.
- + If you have difficulty recognising the graphics, we recommend that you open and/or download the PDF instructions stored in the webshop on your end device (e.g. smartphone, tablet or PC). There you have the option of zooming in closer. Please note that the Adobe Acrobat Reader programme must be installed on your end device in order to open the file.
- + For better readability, the addition "ASSY" to the name of some assembly components has been omitted in the assembly instructions. The addition refers to components that consist of more than one component but have been pre-assembled by factory. Please note that the addition is used in the parts lists and exploded drawings as it may be relevant for ordering spare parts.

Required Tools

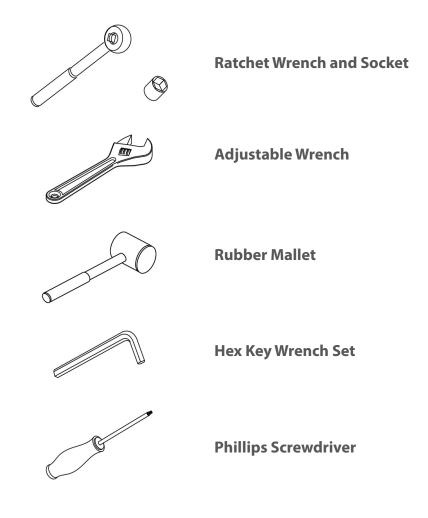


Step 1: Assembly of the Bottom Frames and Cross Frames

(i) NOTICE

Do not tighten the bolts and nuts completely yet.

- 1. Attach the left bottom frame (10) to the front cross frame (9) and rear cross frame (13) with a total of four screws (49), eight flat washers (65) and four lock nuts (61).
- 2. Attach the right bottom frame (12) to the front cross frame (9) and rear cross frame (13) with a total of four screws (49), eight flat washers (65) and four lock nuts (61).

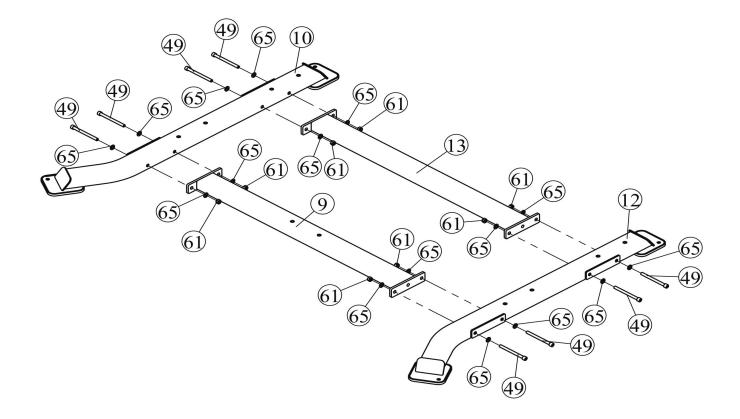


Step 2: Assembly of the Upright Frames, Upper Cross Frame and Back Standing Frame

(i) NOTICE

Do not tighten the bolts and nuts completely yet.

- 1. Attach the left upright frame (1) to the left bottom frame (10) with four screws (52) and four flat washers (65).
- 2. Attach the right upright frame (3) to the right bottom frame (12) with four screws (52) and four flat washers (65).
- 3. Attach the upper cross frame (2) to the left and right upright frames (1 & 3) with four screws (49), eight flat washers (65) and four lock nuts (61).
- 4. Attach the back standing frame (4) to the front cross frame (9) with two screws (52) and two flat washers (65).
- 5. Attach the back standing frame (4) to the upper cross frame (2) with two screws (49), four flat washers (65) and two lock nuts (61).
- 6. Tighten the screws and nuts from this and the previous assembly step with the appropriate tools.

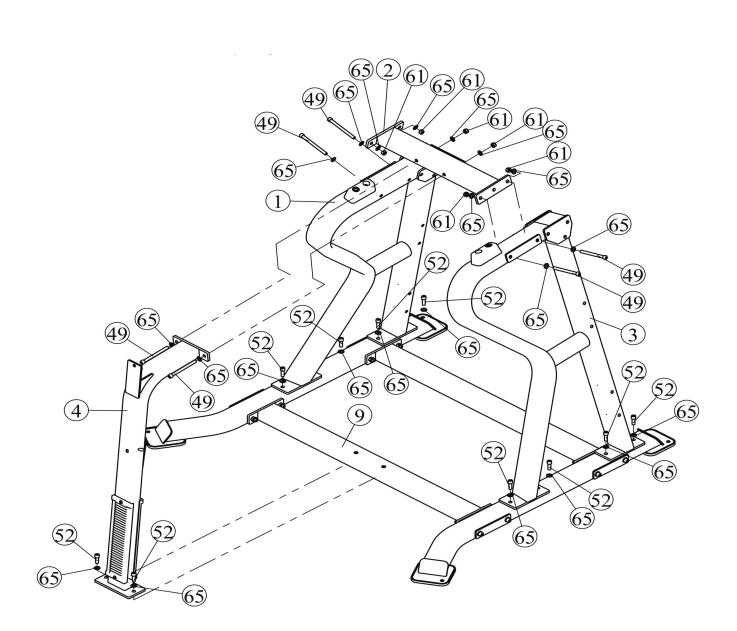


Step 3: Assembly of the Arm Frames

(i) NOTICE

Do not tighten the bolts and nuts completely yet.

- 1. Attach one pivot plate 1 (17) and one pivot plate 2 (18) to the right upright frame (3) with three screws (47), six flat washers (65) and three lock nuts (61).
- 2. Attach the right arm frame (6) to the pivot plate 1 (17) and pivot plate 2 (18) with one pivot shaft (16), two baffle rings (73), two domed aluminium caps (23) and two screws (53).
- 3. Repeat the steps 1 and 2 on the left side.
- 4. Tighten the screws and nuts with the appropriate tools.

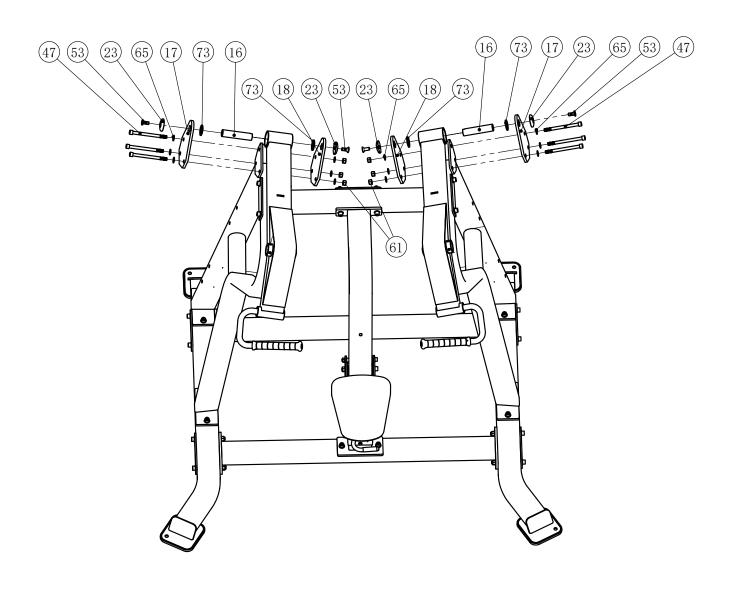


Step 4: Assembly of the Weight Horns and Weight Plate Storage

- 1. Attach two weight plate storages (15) to the left upright frame (1) with two screws (50), four flat washers (65) and two lock nuts (61) each.
- 2. Attach two weight plate storages (15) to the right upright frame (3) with two screws (50), four flat washers (65) and two lock nuts (61) each.

i NOTICE

You might need to loosen the pre-installed set screws (44) first.

- 3. Attach one weight horn (14) to the left arm frame (8) with one rubber bumper (21) and two set screws (44).
- 4. Attach one weight horn (14) to the right arm frame (6) with one rubber bumper (21) and two set screws (44).
- 5. Tighten the screws and nuts with the appropriate tools.

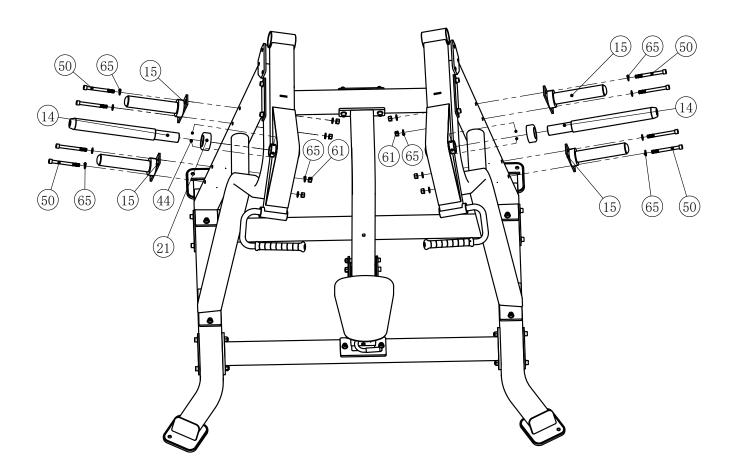

Step 5: Assembly of the Seat Frame and Pads


(i) NOTICE


- + Do not tighten the screws and nuts completely yet.
- + Make sure that the seat frame (7) can be moved up and down smoothly. If needed, slightly loosen the screws and nuts.
- 1. Attach the seat pad (37) to the seat frame (7) with two screws (58) and two flat washers (64).
- 2. Attach the seat frame (7) to the back standing frame (4) with:
 - + two idler wheels (29), two screws (48), four flat washers (65) and two lock nuts (61).
 - + one supporting sleeve (72), one screw (56), two flat washers (64) and one lock nut (62).
- 3. Attach the back pad (35) to the back standing frame (4) with one screw (58), one screw (57) and two flat washers (64).

Carefully hold the pull spring (28) at the hooks.

- 4. Hook the pull spring (28) onto the supporting sleeve (72) and the back standing frame (4).
- 5. Tighten the screws and nuts with the appropriate tools.
- 6. Check that all screws and nuts are properly tightened and retighten if needed.

\rightarrow The assembly is completed.

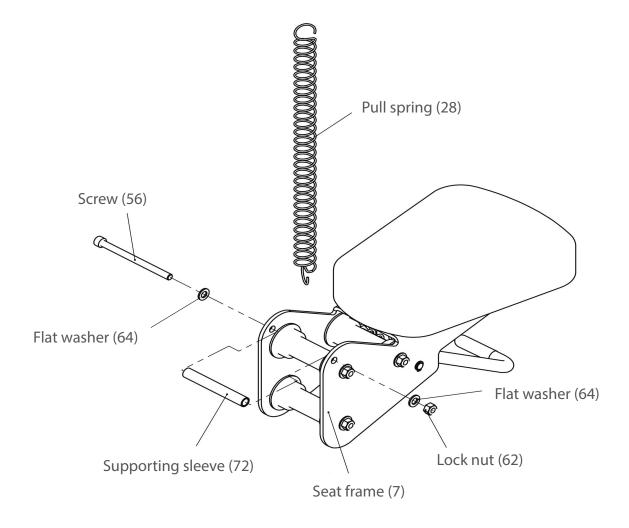

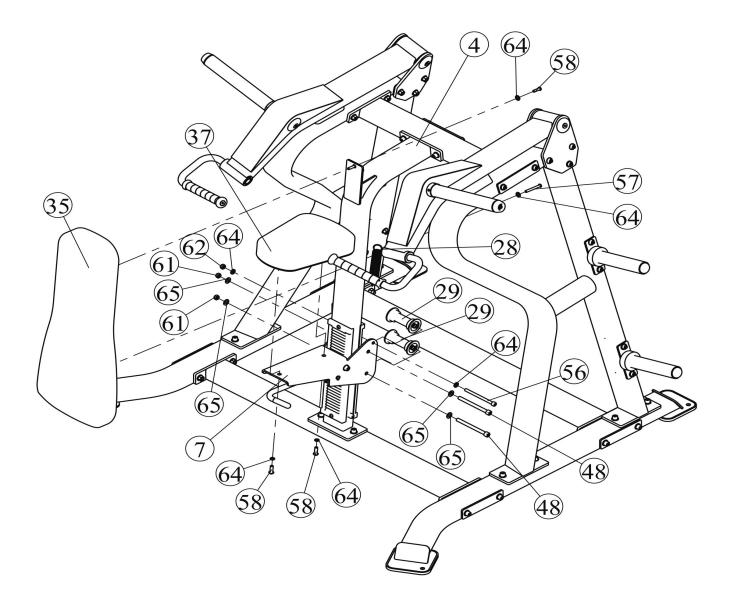

Shoulder Press


Load and Unload Weight Plates

- + Make sure to always use some sort of weight collar when exercising with external weights.
- + Never store unused weight plates on the floor.
- + Store unused weight plates on a weight rack or on the integrated storage options.

ATTENTION


- + The weight horn is compatible with 50 mm weight plates with a maximum external diameter of 450 mm.
- + Weight plates and weight collars are not included in the scope of delivery.
- + Do not load more than 150 kg on each weight horn (training).
- + Do not load more than 100 kg on each weight horn (storage).
- 1. To load the weight horn, carefully grab one weight plate at a time with both hands.
- 2. Slide each weight plate onto the weight horn one by one until you have reached your desired training weight.
- 3. Attach a weight collar to secure the weight plates from sliding off.
- 4. To unload the weight horn, take off the weight collar.
- 5. Slide each weight plate off of the weight horn with both hands one by one.

Weight plates

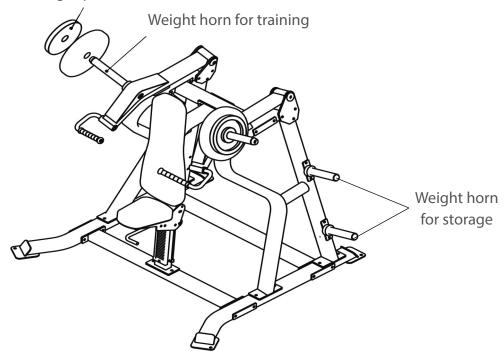


Seat Adjustment

- 1. Push the adjustable handle.
- 2. Move the seat to the desired position.
- 3. Release the handle.

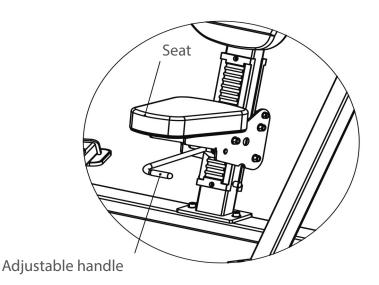



Exercise Instructions

- 1. Select an appropriate weight.
- 2. Adjust the seat to the desired position.
- 3. Sit on the seat with your back resting against the back pad.
- 4. Grasp the handles.
- 5. Slowly pull the handles upwards.
- 6. Pause slightly at the end position.
- 7. Slowly return to the starting position.

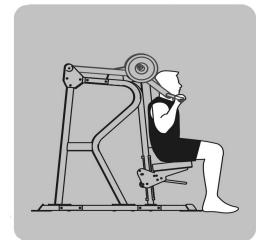

Starting position

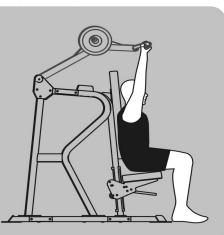

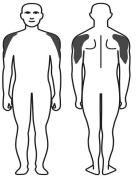

End position

3.1 General Instructions

WARNING

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.

ATTENTION

+ Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.

4.1 General Instructions

M WARNING

4

+ Do not make any improper changes to the equipment.

+ Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

ATTENTION

+ In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

4.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

| Fault | Cause | Solution | |
|-----------------------------|---|---|--|
| Squeaking & cracking noises | Screw connections loosened or too tight | + Check or lubricate screw connections* | |
| Unit wobbles | + Uneven ground+ Loose screw connections | + Align unit + Tighten screw connections | |

* With a grease-free silicone oil or silicone spray.

4.3 Maintenance and Inspection Calendar

To avoid damage from body sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

| Part | Weekly | Monthly | Quarterly |
|--------------------------------|--------|---------|-----------|
| Screw connections | | I | |
| Cushions | С | | |
| Legend: C = clean; I = inspect | | | |

5 DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an recycling centre. Further information can be obtained from your local authority's recycling service.



The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

6 RECOMMENDED ACCESSORIES

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. For training equipment like smith machines, weight benches or racks this could for example be a **floor mat**, which makes your fitness equipment stand more securely and also protects the floor from sweat but it could be also additional weights, handles, foot straps for leg exercises or triceps ropes. For some smith machines, there are also optional add-ons such as leg presses that make your workout even more intense and comprehensive.

Our range of accessories offers the highest quality and makes training even better. If you would like to find out more about compatible accessories, please go to the detail page of the product in our webshop (the easiest way is to enter the article number in the search field above) and go to the recommended accessories on this page. Alternatively, you can use the QR-code provided. Of course, you can also contact our customer service: by telephone, e-mail, in one of our branches or via our social media channels. We will be happy to advise you!







ORDERING SPARE PARTS

7.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 9 of this operating manual.

(i) NOTICE

The serial number of your equipment is unique. It's located on a white sticker. The exact position of this sticker is shown in the following illustration.

Enter the serial number in the appropriate field.



Serial number:

Brand / Category:

Taurus / multi gym

Model Name:

Iso Shoulder Press Sterling

Article Number:

TF-SL7003


7.2 Parts List

| No. | Supplier Parts No. | Name | Specification | Qty. |
|-----|--------------------|-----------------------------|-----------------|------|
| 1 | SL70030100 | Left Upright Frame | | 1 |
| 2 | SL70030200 | Up Cross Frame | | 1 |
| 3 | SL70030300 | Right Upright Frame | | 1 |
| 4 | SL70030400 | Back Standing Frame | | 1 |
| 5 | SL70012800 | Adjustable Handle | | 1 |
| 6 | SL70030600 | Right Arm Frame | | 1 |
| 7 | SL70073800 | Seat Frame | 410*446*6 | 1 |
| 8 | SL70030800 | Left Arm Frame | | 1 |
| 9 | SL70030900 | Front Cross Frame | | 1 |
| 10 | SL70031000 | Left Bottom Frame | | 1 |
| 11 | SL70012500 | Wheel Shaft | φ17*φ12.5*116.5 | 3 |
| 12 | SL70031200 | Right Bottom Frame | | 1 |
| 13 | SL70031300 | Rear Cross Frame | | 1 |
| 14 | SL70010900 | Weight Horn Assembly | | 2 |
| 15 | SL70100300 | Weight Plate Storage | | 4 |
| 16 | SL70011500 | Pivot Shaft Φ30 | φ30*134 | 2 |
| 17 | SL70011300 | Pivot Plate 1 | 160*223*10 | 2 |
| 18 | SL70011400 | Pivot Plate 2 | 160*223*10 | 2 |
| 19 | SL70011100 | Front Plastic Plate | 435*107*19 | 1 |
| 20 | SL70011200 | Rear Plastic Plate | 435*107*19 | 1 |
| 21 | SL70011600 | Rubber Bumper | φ76*φ50*30 | 2 |
| 22 | HF985A1500 | Weight Horn Rubber Donut | φ76*φ42*25 | 4 |
| 23 | SL70011700 | Domed Aluminium Cap | φ54*φ12.5*10.6 | 6 |
| 24 | SL70011800 | Long Weight Horn Sleeve | φ41.4*φ49*361 | 2 |
| 25 | SL70100400 | Weight Horn Sleeve | φ41.4*φ49*223 | 4 |
| 26 | SL70012000 | Weight Horn Plastic Cap | φ49*φ12.5*25 | 2 |
| 27 | SL70012100 | Aluminium Grip | φ31*φ25.4*175 | 2 |
| 28 | SL70012200 | Pull Spring | φ31.5*φ2.5*165 | 1 |
| 29 | SL70012400 | Idler Wheel | φ60*φ40*113.5 | 3 |
| 30 | SL70012600 | Wring Spring | φ30*φ3*30 | 1 |
| 31 | SL70012700 | Shaft For Adjustable Handle | φ12*135.1 | 1 |

Shoulder Press

| 32 | M01402000 | Oilite Bushing | φ25*φ12.2*13 | 2 |
|----|----------------------|----------------------------------|--------------------------------|----|
| 33 | GB2766203-2Z | Ball Bearing | 6203-2Z | 6 |
| 34 | GB894.117FH12 | External Retaining Ring Φ17 | φ17 | 6 |
| 35 | SL70012900V1 | Back Pad | 860*332*70 | 1 |
| 36 | SL70013200 | Plastic Sleeve | φ18*φ10*19 | 2 |
| 37 | SL70013000V1 | Seat Pad | 340*270*70 | 1 |
| 38 | PL380800 | Large Rubber Bumper | 120*140*52 | 2 |
| 39 | IT90102100 | Aluminium Cap Φ25 | φ43*φ10.5*26 | 2 |
| 40 | IT90102200 | Aluminium Ring Φ25 | φ40*φ26.8*18 | 2 |
| 41 | RF-6012500 | End Plug | φ41.3*φ34 | 4 |
| 42 | CG50001700 | Rubber Grip | DTφ19*φ14*70 | 1 |
| 43 | CWRVL0051200 | Rubber Foot | 159.5*159.5*11 | 4 |
| 44 | GB77M8*6DHS2 | Socket Set Screw M8*6 | M8*6 | 4 |
| 45 | GB2766206-2ZC3 | Ball Bearing 6206-2Z | 6206-2Z | 4 |
| 46 | GB894.112FH12 | External Retaining Ring Φ12 | φ12 | 2 |
| 47 | GB70M12*155DHS20 | Socket Head Cap Screw M12*155 | M12*155(8.8 degree) | 6 |
| 48 | GB70M12*145DHS20 | Socket Head Cap Screw M12*145 | M12*145(8.8 degree) | 2 |
| 49 | GB70M12*135DHS20 | Socket Head Cap Screw M12*135 | M12*135(8.8 degree) | 14 |
| 50 | GB70M12*125DHS20 | Socket Head Cap Screw M12*125 | M12*125(8.8 degree) | 8 |
| 51 | GB70M12*90DHS20 | Socket Head Cap Screw M12*90 | M12*90 | 4 |
| 52 | GB70M12*35*35DHS20NL | Socket Head Cap Screw M12*35 | M12*35(full thread,8.8 degree) | 10 |
| 53 | CNLM12*30DS20NL | Flat Head Cap Screw M12*30 | M12*30(8.8 degree) | 4 |
| 54 | CNLM12*50*50DS20NL | Flat Head Cap Screw M12*50 | M12*50(full thread,8.8 degree) | 2 |
| 55 | CNLM10*25DS20NL | Flat Head Cap Screw M10*25 | M10*25(8.8 degree) | 2 |
| 56 | GB70M10*145DHS20 | Socket Head Cap Screw M10*145 | M10*145(8.8 degree) | 1 |
| 57 | PNLM10*75DHS2 | Button Head Cap Screw M10*75 | M10*75 | 1 |
| 58 | PNLM10*30*30DHS20 | Button Head Cap Screw M10*30 | M10*30(full thread) | 3 |
| 59 | PNLM8*65DHS2 | Button Head Cap Screw M8*70 | M8*65 | 2 |
| 60 | YZGB7710-32*3.2N19 | Socket Set Screw 10-32*3.2 | 10-32UNF*3.2 | 4 |
| 61 | NM12DHS2 | Nylon lock Nut M12 | M12 | 1 |

| 62 | NM10DHS2 | Nylon lock Nut M10 | M10 | 1 |
|----|------------|-------------------------|-------------------------|---|
| 63 | NM8DHS2 | Nylon lock Nut M8 | M8 | 2 |
| 64 | GB9510DHS2 | Flat Washer Φ11*Φ20*2 | φ11*φ20*2 | 6 |
| 65 | DQ12DHS2A | Flat Washer Ф13*Ф24*1.5 | φ13*φ24*1.5 | 2 |
| 68 | NBS10DHS | Hex key S=10 | S=10 | 1 |
| 69 | NBS8DHS | Hex key S=8 | S=8 | 1 |
| 70 | NBS6DHS | Hex key S=6 | S=6 | 1 |
| 71 | NBS4DHS | Hex key S=4 | S=4(Long side=120mm) | 1 |
| 72 | SL70026700 | Supporting Sleeve | φ16*2.0*117 | 1 |
| 73 | SL70022500 | Baffle Ring | φ46*φ30.5*3 | 4 |

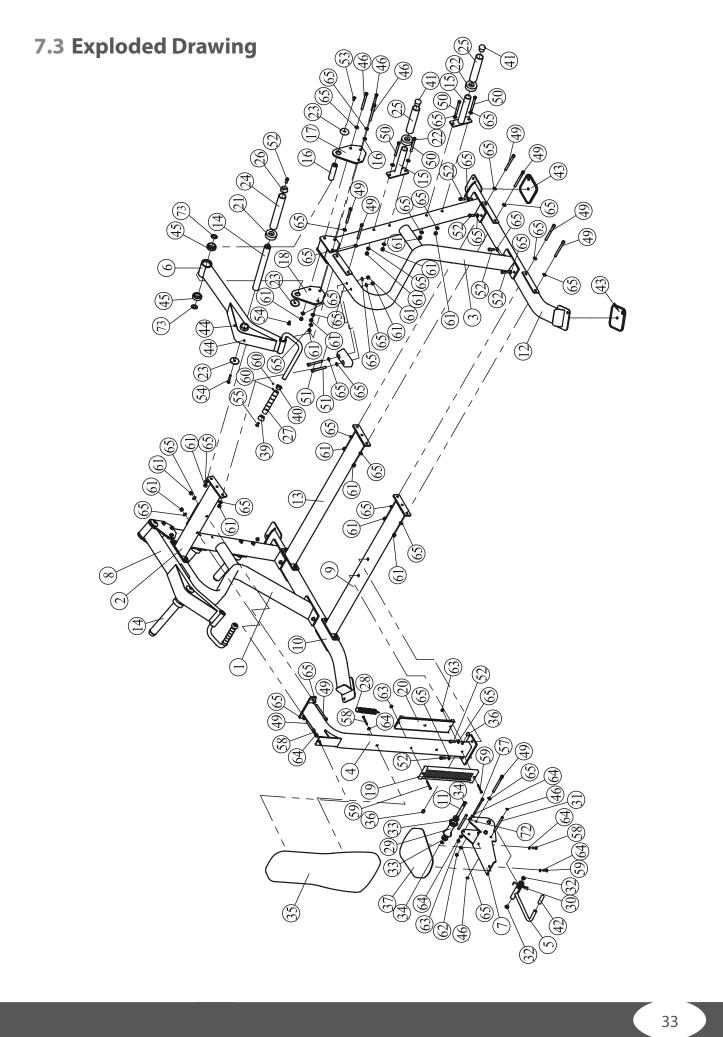

8 WARRANTY

Products from TAURUS[®] are subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

Error Descriptions

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

Your statutory rights are not affected.

Warrantee

The warrantee is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

Warranty period

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

Repair Costs

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warrantee personally and are not a part of repair. After the expiration of the warranty period, the responsibility for parts costs, repair costs, installation costs and delivery costs lies with the warranty holder.

The terms of use are defined as follows:

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

Warranty Service

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.

Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e.g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

CONTACT

9

| DE | DK | UK |
|---|---|--|
| ТЕСНИК | TEKNIK OG SERVICE | CUSTOMER SUPPORT |
| L +49 4621 4210-900 | & 80 90 16 50 | 60800 2020 2772 |
| +49 4621 4210-698 | +49 4621 4210-945 | +494621 4210 944 |
| technik@fitshop.de | info@fitshop.dk | info@fitshop.co.uk |
| Öffnungszeiten entnehmen Sie unserer Homepage. | Åbningstider kan findes på hjemmesiden: <u>https://stg.fit/statit7</u> | You can find the opening hours on our homepage: <u>https://stg.fit/statitc</u> |
| SERVICE | | |
| 6800 20 20277 | FR | BE |
| (kostenlos) | TECHNIQUE & SERVICE | TECHNIQUE & SERVICE |
| 6 04621 4210 - 0 | & +33 (0) 189 530984 | 62 732 46 77 |
| info@fitshop.de | +49 4621 42 10 933 | +49 4621 4210 933 |
| Öffnungszeiten entnehmen Sie unserer Homepage: | info@fitshop.fr | info@fitshop.be |
| https://stg.fit/statita | Vous trouverez les heures d'ouverture sur notre site Internet: | Vous trouverez les heures d'ouverture sur notre site Internet: |
| | https://stg.fit/statit4 | https://stg.fit/statit8 |
| ES | NL | INT |
| TECNOLOGÍA Y SERVICIOS | TECHNISCHE DIENST & SERVICE | TECHNICAL SUPPORT & SERVICE |
| & 911 238 029 | L +31 172 619961 | +49 4621 4210-944 |
| info@fitshop.es | service@fitshop.nl | service-int@fitshop.de |
| Consulta nuestro horario de apertura en la página web: <u>https://stg.fit/statit5</u> | De openingstijden vindt u op onze homepage: <u>https://stg.fit/statit3</u> | You can find the opening hours on our homepage: <u>https://stg.fit/statita</u> |
| PL | AT | СН |
| DZIAŁ TECHNICZNY I SERWIS | TECHNIK & SERVICE | TECHNIK & SERVICE |
| L 22 307 43 21 | 🌜 0800 20 20277 (Freecall) | 0800 202 027 |
| +49 4621 42 10-948 | +49 4621 42 10-0 | +49 4621 42 10-0 |
| info@fitshop.pl | info@fitshop.at | info@fitshop.ch |
| Godziny otwarcia można znaleźć na stronie głównej: <u>https://stg.fit/statit6</u> | Öffnungszeiten entnehmen Sie unserer Homepage: <u>https://stg.fit/statitb</u> | Öffnungszeiten entnehmen Sie unserer Homepage: <u>https://stg.fit/statit9</u> |

Please find a detailed overview including address and opening hours for all stores of the Fitshop Group in Germany and abroad on the following website:

www.fitshop.com/en/stores

Shoulder Press

WE LIVE FITNESS


WEBSHOP AND SOCIAL MEDIA

Fitshop is Europe's largest specialist store for home fitness equipment with currently over 70 stores and one of the world's most renowned online mail order companies for fitness equipment. Private customers order via the 25 web shops in the respective national language or have their desired equpiment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

Fitshop offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.

Visit us also on our social media platforms or our blog!



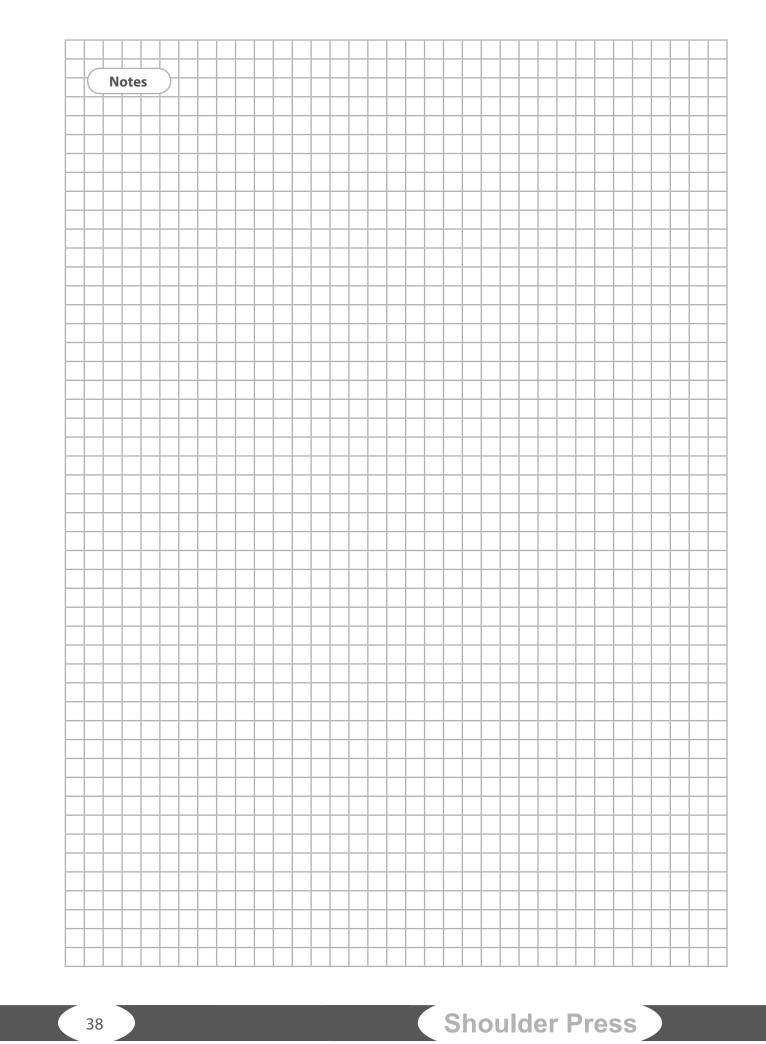

Shoulder Press

____|



Taurus Iso Shoulder Press Sterling