
KETTLER

Assembly and Operating Instructions

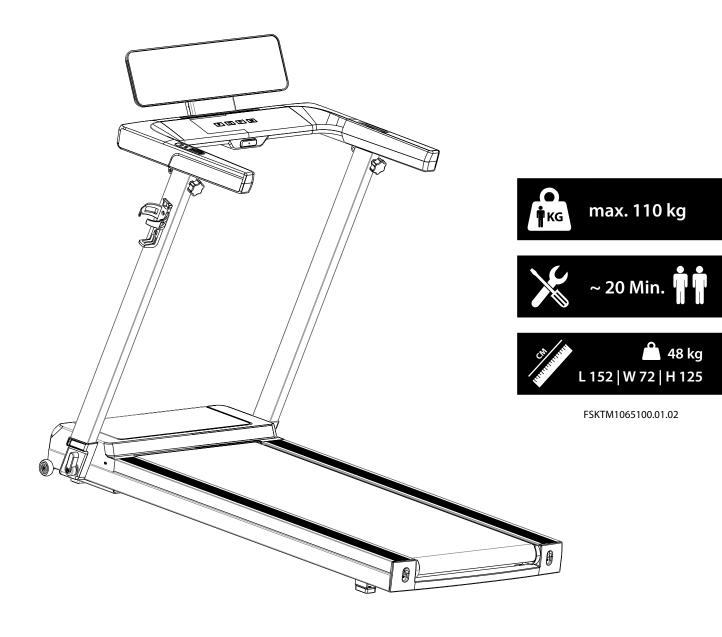

Art. No. K-TM1065-100

Content

1	GENERAL INFORMATION	8
1.1	Technical Data	8
1.2	Personal Safety	9
1.3	Electrical Safety	10
1.4	Set-Up Place	11
2	ASSEMBLY	12
2.1	General Instructions	12
2.2	Scope of Delivery	13
2.3	Assembly	14
3	OPERATING INSTRUCTIONS	18
3.1	Console Display	18
3.2	Button Functions	20
3.3	Switch On	20
3.4	Conversion Function	21
3.5	Training Programmes	21
	Manual Programme/Quick Start Mode	21
	Pre-Programmed Training Programmes	22
	User-Defined Training Programmes	23
	Heart Rate Controlled Programmes	23
	Body Mass Index Programmes	24
3.6	ERP Function	25
3.7	Buzzer Mute Function	25
4	WORKOUTTIPS	27
4.1	General Information	27
4.1.1	Training clothes	27
4.1.2	Warming up and stretching	27
	Medication	28
	Used muscle groups	28
	Exercise frequency	28
4.2	Workout journal	30
5	STORAGE AND TRANSPORT	31
5.1	General Instructions	31
5.2	Transportation Wheels	31
5.3	Folding Mechanism	31
5.3.1	Folding Up the Treadmill	32

5.3.2	Storing the Treadmill	33
6	TROUBLESHOOTING, CARE AND MAINTENANCE	34
6.1	General Instructions	34
6.2	Faults and Fault Diagnosis	34
6.3	Error Codes and Troubleshooting	35
6.4	Care and Maintenance	36
6.4.1	Adjusting the Running Mat	36
6.4.2	Re-tensioning the Running Mat	37
6.4.3	Lubricating the Running Mat	37
6.5	Maintenance and Inspection Calendar	38
7	DISPOSAL	38
_		
8	RECOMMENDED ACCESSORIES	39
9	ORDERING SPARE PARTS	40
9.1	Serial Number and Model Name	40
9.2	Parts List	41
9.3	Exploded Drawing	44
	l	
10	WARRANTY	45
11	CONTACT	47

Dear customer,

Thank you for choosing a Kettler fitness device. Kettler Sport represents tradition, durability, and quality like no other home fitness brand. Classic home trainers such as the Golf have accompanied users for decades. At the same time, Kettler stands for innovation and continuously develops thoughtful solutions, particularly in usability and training comfort.

Kettler Sport provides everything you need for successful training at home: cardio and strength equipment, as well as a wide range of fitness accessories.

Further information can be found at www.fitshop.com/kettler.

Intended Use

The equipment may only be used for its intended purpose.

The equipment is only suitable for home use. The equipment is not suitable for semi-professional (e.g. hospitals, associations, hotels, schools, etc.) and commercial or professional use (e.g. fitness studios).

Legal Notice

Fitshop GmbH Europe's No. 1 for home fitness

International Headquarters Flensburger Straße 55 24837 Schleswig Germany Management:

Christian Grau

Sebastian Campmann

Dr. Bernhard Schenkel

No. HRB 1000 SL

Local Court Flensburg

European VAT Number: DE813211547

Disclaimer

Since December 19, 2024, the trademark rights to © Kettler for fitness equipment in the EU, EFTA, and Turkey are held by Fitshop GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Fitshop is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.



Europe's No.1 for Home Fitness

ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.

Due to ongoing changes and software optimisations, the manual may have to be updated. If you notice any discrepancies during assembly or use, please refer to the manual uploaded to the webshop. The latest manual is always available there.



This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Training devices must be classified according to accuracy and use. Accuracy classes are only applicable to devices that display training data.

Accuracy classes

Class A: high accuracy.

Class B: medium accuracy.

Class C: low accuracy.

The use classes explain the intended use of the training device.

Use classes

Class S (studio): professional and/or commercial use.

These training devices are intended for the use in training rooms of facilities such as sports clubs, school facilities, hotels, clubs and studios whose access and supervision is specifically regulated by the owner (person with legal responsibility).

Class H (home use): use at home.

These stationary training devices are intended for the use in private homes where access to the training device is regulated by the owner (person with legal responsibility).

Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

► ATTENTION

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

CAUTION

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

↑ WARNING

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

↑ DANGER

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

(i) NOTICE

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.

1.1 Technical Data

LCD display of:

- + Burned calories
- + Pulse
- + Speed
- + Time
- + Distance

Manual programmes:	1

Quick start programmes: 1

Countdown programmes: 3

Pre-programmed training programmes: 36

User-defined training programmes: 3

Heart rate controlled programmes: 3

Weight and dimensons:

Article weight (gross, including packaging): 54 kg

Article weight (net, without packaging): 48 kg

Packaging dimensions (L x W x H): 160 cm x 78 cm x 21,5 cm

Set-up dimensions (L x W x H): 152 cm x 72 cm x 125 cm

Maximum user weight: 110 kg

Use class:

1.2 Personal Safety

⚠ DANGER

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.
- + The owner must communicate all warnings and instructions to the user.

↑ WARNING

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + The equipment is strictly for use by one person at a time.
- + If your equipment provides a safety key, the clip of the safety key must be attached to your clothing before starting your training. In the event of a fall, the EMERGENCY STOP of the equipment can be initiated.
- + If an emergency occurs and training has to be stopped abruptly, pull out the safety key, grab both handles, jump onto the side rails and wait until the treadmill has come to a complete stop.
- Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other non-slip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.

CAUTION

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.
- + Be aware that if adjustment devices are left protruding, they may impede the user's movement.

ATTENTION

- + Do not insert any objects of any kind into the openings of the device.
- + To protect the equipment from use by unauthorised third parties, always remove the power cable (if existing) when not in use and store it in a safe place that is inaccessible to unauthorised persons (e.g. children).
- The safety level of the appliance can only be maintained if it is regularly checked for damage and wear.

1.3 Electrical Safety

↑ DANGER

In order to reduce the risk of an electric shock, always unplug the equipment from the mains socket immediately after your workout, before assembly or dismantling, and before maintenance or cleaning. Do not pull on the cable.

↑ WARNING

- Do not leave the equipment unattended while the mains cable is plugged into the mains socket. During your absence, the mains cable must be removed from the mains socket to prevent improper use by third parties or children.
- + If the mains cable or plug is damaged or defective, contact your contract partner. Until repair, the equipment must not be used.

ATTENTION

- + The equipment requires a mains connection of 220-230 V with 50 Hz mains voltage.
- + The equipment may only be connected directly to an earthed socket using the supplied mains cable. Extension cables must conform to VDE guidelines. Always completely unwind the mains cable.
- The socket must be protected by a fuse with a minimum fuse rating of "16 A, slow blow".
- Do not make any changes to the mains cable or the mains plug.
- Keep the mains cable away from water, heat, oil and sharp edges. Do not route the mains cable underneath the equipment or under a carpet or rug, and do not place any objects on top of it.
- If your purchased item is equipped with a TFT console, software updates must be carried out regularly. Follow the instructions on the console to perform the update(s).
- + The software systems on gym equipment with TFT consoles are set up only for the preinstalled apps. Do not install any additional apps.

NOTICE **(i)**

- The pre-installed apps on TFT consoles are produced and provided by external manufacturers. Fitshop does not take any responsibility for the availability, functionality or contents of these apps.
- Hereby, Fitshop GmbH declares that the radio equipment type Wireless Connection (2.402) - 2.480 GHz) complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following website: www.fitshop.com.

1.4 Set-Up Place

↑ WARNING

+ Do not place the equipment in main corridors or escape routes.


CAUTION

- + Make sure that there is a safety area behind the treadmill with a length of at least 2 m and a width at least equal to the width of the treadmill.
- + The training room should be well ventilated during training and not be exposed to any draughts.
- + Choose the place in which to set up the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The free area in the direction from which the exercise equipment is accessed must be at least 0.6 m larger than the exercise area.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.

ATTENTION

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.
- + For Class S equipment, the exercise equipment may only be used in areas where access, supervision and control are specifically regulated by the owner.

Recommended free zone:

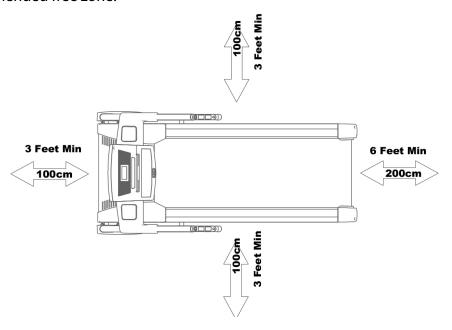

2.1 General Instructions

↑ DANGER

+ Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.

MARNING

- + The treadmill is equipped with high-pressure shock absorbers that can cause the treadmill to suddenly open if handled incorrectly. To avoid possible personal injuries, never pull on the areas of the treadmill shown in the illustration. Never try to lift or move the treadmill at the marked areas.
- + Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.

CAUTION

- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.

ATTENTION

To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.

NOTICE

- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- Ideally, assemble the equipment at its later set-up place.

2.2 Scope of Delivery

↑ WARNING


There is a transportation lock that prevents the treadmill from opening during transport. This transportation lock must be removed before assembly.

The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.

CAUTION

If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

Required Tools: Open Wrench, Allem Key (included)

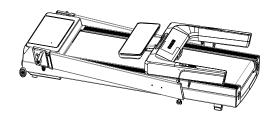


Machine



Bottle holder




Silicon bottle

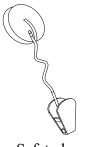

Safety key




Manual

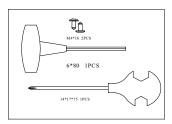


Hardware kit

Hardware list

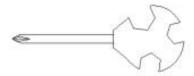

Philips Open Wrench 14x17x75 х1

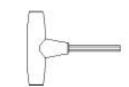

T-shape Wrench 6mm

х1



Philips C.K.S. sharp full thread bolt

x2

2.3 Assembly

Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

(i) NOTICE

- + First loosely screw all parts together and check that they fit properly. Tighten the screws using the tool only when you are instructed to do so.
- + Do not tighten the screws and bolts with excessive force as they could be damaged.
- + If you have difficulty recognising the graphics, we recommend that you open and/or download the PDF instructions stored in the webshop on your end device (e.g. smartphone, tablet or PC). There you have the option of zooming in closer. Please note that the Adobe Acrobat Reader programme must be installed on your end device in order to open the file.


Step 1: Remove the packaging

1. Open the packaging.

↑ WARNING


Leave the device on the carton floor until the assembly is completed.

- 2. Cut and dispose of the four corners from the carton floor.
- 3. Remove the hardware tools and transportation locks from the device.

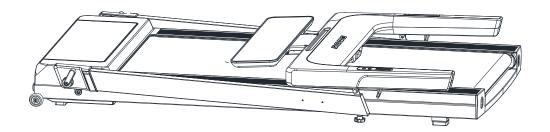


Step 2: Prepare the device

- 1. Loosen the two L-shape knobs (53) at the bottom of the device. Turn the L-shape knobs (53) counterclockwise.
- 2. Take hold of the left (43) and right (44) standposts and unfold the console frame (58).

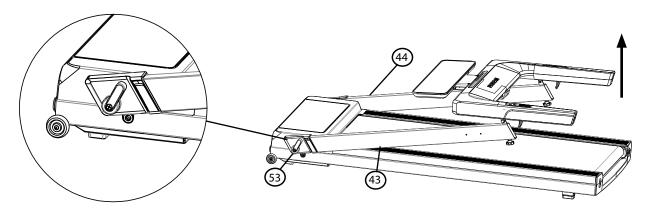


Step 3: Set up the device

1. Secure and fasten the device with the two L-shape knobs (53) at the bottom of the device. Turn the L-shape knobs (53) clockwise.

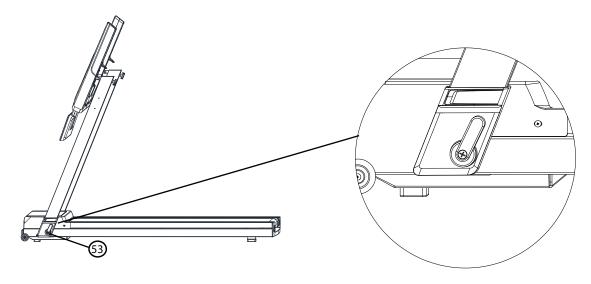


Step 4: Set up the console frame

- 1. Turn the Quincuncial knobs (52) counterclockwise to loosen them.
- 2. Set up the console frame (58).
- 3. Secure and fasten the console frame (58) with the two Quincuncial knobs (52). Turn the Quincuncial knobs (52) clockwise.

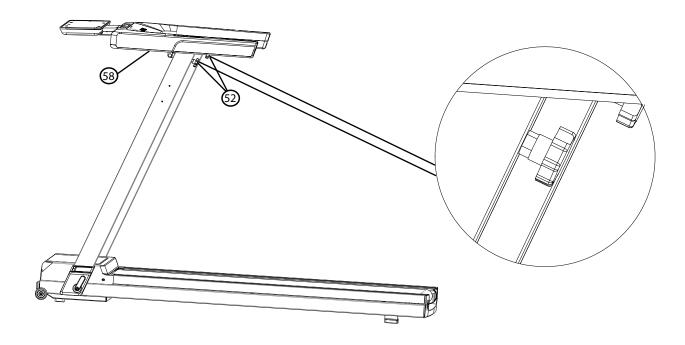

Step 5: Set up the console and assembly of the bottle holder

- 1. Set up the console (69).
- 2. Assemble the bottle holder (54) to the left standpost (43) with the two bolts (90).
 - → The assembly is completed. You may move the device off the carton floor.

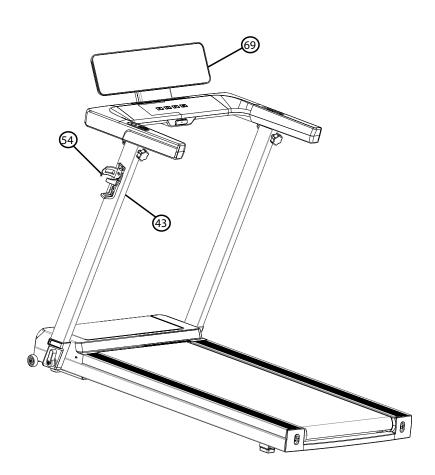




Step 6: Alignment of the feet

If the floor is uneven, you can stabilize the treadmill by turning the two setting screws under the main frame.

↑ WARNING

The treadmill is equipped with high-pressure shock absorbers that can cause the treadmill to suddenly open if handled incorrectly. For more information, refer to the section of this manual.

- 1. Lift the treadmill on the desired side and rotate the setting screws under the main frame.
- 2. Rotate the screws clockwise in order to remove them and to raise the running surface.
- Rotate them counterclockwise in order 3. to lower the running surface.

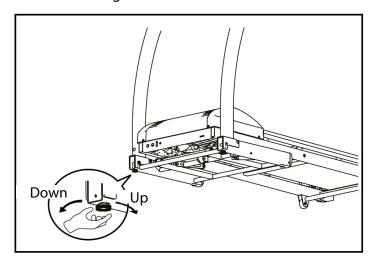

Step 7: Connecting the equipment to the mains supply

ATTENTION

The equipment must not be connected to a multiple socket, otherwise it cannot be guaranteed that the equipment will be supplied with sufficient power. Technical errors can result.

Plug the power plug into a wall outlet that complies with the instructions in the chapter on electrical safety.

Correctly Getting On and Off

- To step onto the treadmill, grip the handrails with both hands and step onto the treadmill one foot at a time.
- 2. To get off, grip the handrails with both hands and step off the treadmill one foot at a time.

(i) NOTICE

- + Familiarise yourself with all the functions and setting options of the device before starting training. Have the proper use of this product explained to you by a specialist.
- Always start your training with low intensity and increase evenly and gently. End your training with a cool-down phase. If you are unsure, please consult your physician.
- Most new treadmills make a knocking noise caused by the running mat sliding over the rollers. The time it takes for the noise to subside depends on the intensity of use, the temperature and the humidity around the treadmill.
- Please bear in mind that the noise emission under load is higher than without load.


SAFETY KEY



↑ WARNING


- For your safety, the device is equipped with an EMERGENCY STOP function. The equipment can only be operated if the safety key is correctly attached to the contact point of the cockpit. If the safety key is no longer on the contact point, the equipment automatically stops. Therefore, the Safety Key cord with the clip must be attached to your clothing before every training session. If you want to quickly stop the treadmill, if you can no longer control the speed, or if another emergency occurs, remove the safety key from the cockpit using the cord.
- + To enable the safety key to detach from the contact point of the cockpit in the event of a fall, the safety key clip must be firmly attached to your clothing!
- Make sure that the safety key is not accessible to children.

3.1 Console Display

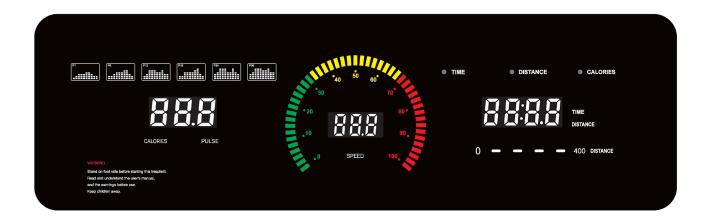

Display	Function					
Calories	+ Displays the burned calories in kcal.					
	+ Display range: 0-999 kcal / cal					
	+ Setting range: 20-990 kcal / cal (in 10 increments)					
Pulse	Your training equipment is not a medical device. The heart rate measurement of this equipment may be inaccurate. Various factors can affect the accuracy of the heart rate measurement. The heart rate measurement serves only as a training aid. Displays the traing pulse.					
Speed	+ Displays the speed in km/h.					
	+ Display range: 1-16 km/h					
	+ Setting range: 1-16 km/h (in 0.1 increments)					
Time	+ Displays the training time in minutes.					
	+ Display range: 00:00-99:59					
	+ Setting range: 05:00-99:00					
Distance	+ Displays the training distance in km und m (miles).					
	+ Display range: 0.0-99.9 km / 0.0 ~ 62.0 m (miles)					
	+ Setting range: 1-99 km / 0.6 ~ 61.5 (miles) (in 1 increments)					
P0 (Manual programmes)	+ Displays the manual programme.					
(Manual programmes)	+ Selection of: + Quick start mode					
	+ Quick start mode + Time countdown (Time)					
	+ Distance countdown (Distance)					
	+ Calorie countdown (Calories)					
P1-P36 (Training	+ Displays the pre-programmed training programmes.					
programmes P1-P36)	+ Display range: P1-P36					
	+ Setting range: P1-36					
U01-U03 (User defined	+ Displays the user defined training programmes.					
programmes)	+ Display range: U01-U03					
	+ Setting range: U01-U03					
HRC1-HRC3	+ Displays the heart rate controlled training programmes.					
	+ Display range: HRC1-HRC3					
	+ Setting range: HRC1-HRC3					
F1 (Body mass index programme)	Switches to the body mass index programme (BMI).					


3.2 Button Functions

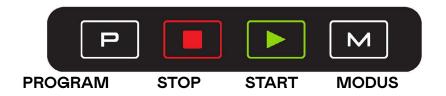

Button	Function			
Program	Press this button to switch among the following training programmes: + P0 (Manual programm/quick start mode) + P1-P36 (36 pre-programmed training programmes) + U01-U03 (Three user defined training programmes) + HRC1-HRC3 (3 heart rate-controlled training programmes)			
Stop	Press this button + to stop the training + to stop the device			
Start	Press this button to start the training.			
Modus	Press this button to switch among the following training programmes: + Quick start mode + Time countdown (Time) + Distance countdown (Distance) + Calorie countdown (Calories)			
Start/Pause	Press this button to start or pause your training.			
Speed +/-	Press this button + to adjust the values in the countdown programmes + to adjust the training speed in manual mode			

3.3 Switch On

1. Switch on the treadmill with the power switch underneath the right folding bracket frames (83).

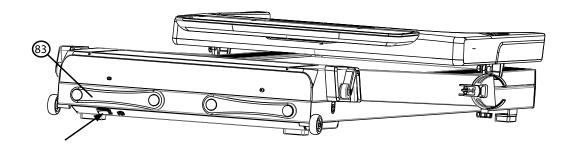

3.4 Conversion Function

The treadmill is equipped with a kilometre to mile conversion function. Set your desired training conversion before your training.

- 1. Remove the safety key (74) from the device.
- 2. Press and hold P and M simultaneously for a few seconds.

The console displays 1.0 (kilometers) or 0.6 (miles).

- Repeat these steps to set your desired setting.
 - → The conversion function is set.

3.5 Training Programmes

3.5.1 Manual Programme/Quick Start Mode

The manual programme/quick start mode P0 is the treadmill's standard mode. The standard speed for this mode is 1.0 km/h. P0 provides four training programmes:

- + Ouick start mode
- + Time countdown
- + Distance countdown
- + Calorie countdown

Only one training programme can be set at a time.

Quick Start Mode

In this mode you set the training speed. The values TIME, DISTANCE and CALORIES are counted up without further adjustments needed.

1. Insert the safety key (74) into the console slot.

The treadmill automatically enters the quick start mode.

2. To start the training, press START.

The countdown 5-4-3-2-1 appears on the display while the treadmill sounds off five times.

- 3. To adjust the speed, press SPEED+/-.
- 4. To stop the training, press STOP.
 - → The device slows down and comes to a stop. All training values are deleted.

Time Countdown

In this mode you activate the time countdown.

ATTENTION

The treadmill stops once the countdown is over.

- 1. Press M repeatedly in standby mode until TIME appears on the console.
- 2. To adjust the value, press SPEED+/-.

The countdown is set.

3. To start the training, press START.

The training starts and the value is counted down.

→ Once the countdown is finished a 0 appears and the home screen appears.

Distance Countdown

In this mode you active the distance countdown.

► ATTENTION

The treadmill stops once the countdown is over.

- 1. Press M repeatedly in standby mode until DISTANCE appears on the console.
- 2. To adjust the value, press SPEED+/-.

The countdown is set.

3. To start the training, press START.

The training starts and the value is counted down.

→ Once the countdown is finished a 0 appears and the home screen appears.

Calorie Countdown

In this mode you active the calorie countdown.

ATTENTION

The treadmill stops once the countdown is over.

- 1. Press M repeatedly in standby mode until CALORIES appears on the console.
- 2. To adjust the value, press SPEED+/-.

The countdown is set.

3. To start the training, press START.

The training starts and the value is counted down.

→ Once the countdown is finished a 0 appears and the home screen appears

3.5.2 Pre-Programmed Training Programmes

The treadmill has 36 pre-programmed training programmes that are intended for the time countdown.

- 1. Press P and choose one of the 36 training programmes.
- 2. To adjust the value of the training time, press SPEED+/-.
- 3. To start the training, press START.

The countdown 5-4-3-2-1 appears on the display while the treadmill sounds off five times.

- 4. To adjust the speed during the training, press SPEED+/-.
- 5. To stop the training, press STOP.
 - → The treadmill slows down and comes to a stop. The set values are deleted and the home screen appears.

3.5.3 User-Defined Training Programmes

The treadmill has three user-defined training programmes. The settings will be saved on the device and can be accessed any time.

- 1. To set a user-defined training programme, press repeatedly P until the U0 programmes appear.
- 2. Choose one of the three user-defined training programmes (U01-U03).
- 3. To choose a parameter, press M.
- 4. To adjust the value of the parameter, press SPEED+/-.
- 5. To confirm your setting, press M.
- 6. Repeat the steps 3-5 to set all parameters.
- 7. To start the training, press START.

3.5.4 Heart Rate Controlled Programmes

MARNING

Your training equipment is not a medical device. The heart rate measurement of this equipment may be inaccurate. Various factors can affect the accuracy of the heart rate measurement. The heart rate measurement serves only as a training aid.

1. To determine your training heart rate, grasp the hand sensors on the handles.

(i) NOTICE

- + The programmes listed can only be used via a chest strap/wristband with a wireless interface.
- + These programmes cannot be used with the hand pulse sensors.

The treadmill has three heart-rate controlled programmes. The user sets the target heart rate. The set traget heart rate is constantly compared by the cockpit with the user's actual heart rate. If the current heart rate is lower than the target heart rate, the treadmill automatically increases the speed. If the value is higher, the treadmill automatically reduces the speed.

- 1. To set a heart rate controlled programme, press repeatedly P until the HRC programmes appear.
- 2. Choose one of the heart rate controlled programmes (HRC1-HRC3).

(i) NOTICE

- + The maximum speed of the individual programs is different:
 - + HRC1 = max. speed 9 km/h
 - + HRC2 = max. speed 11 km/h
 - + HRC3 = max speed 13km/h

The value 25 flashes on the display.

- 3. To set your age, press SPEED+/-.
- 4. To confirm your setting, press M.

The target heart rate calculated by the cockpit is shown on the display. This is 60% of the maximum heart rate.

- 4.1. To train with the calculated value, press M
- 4.2. To train with an individual target heart rate, adjust with SPEED+/-.
- 5. To confirm your setting, press M.

The training time flashes.

- 6. To adjust the training time, press SPEED+/-.
- 7. To start the training, press START.

A countdown appears and the training starts. The training time counts down.

→ Once the training is over the treadmill comes to a stop.

3.5.5 Body Mass Index Programmes

The treadmill has a body mass index programme (BMI). For the calculation of the BMI, the body weight is set in relation to height.

- + Index 18-24 ~ ideal
- + Index under 18 ~ the body fat percentage is too low
- + Index 25-29 ~ overweight
- + Index over 29 ~ obese

► ATTENTION

This data is for reference only and cannot be used as medical data.

- 1. To calculate the BMI, press P repeatedly until you reach F1 (gender).
- 2. To set your gender, press SPEED+/-.

(i) NOTICE

- + 1 indicates "male".
- + 2 indicates "female".
- 3. To confirm your setting, press M.

F2 (age) appears on the display.

- 4. To adjust your age, press SPEED+/-.
- 5. To confirm your setting, press M.

F3 (height) appears on the display.

- 6. To adjust your height, press SPEED+/-.
- 7. To confirm your setting, press M.

F3 (weight) appears on the display..

- 8. To adjust your weight, press SPEED+/-.
- 9. To confirm your setting, press M.
 - → Your BMI appears on the display.

3.6 ERP Function

The ERP function is the energy-saving mode. This is the default setting of the device. If the treadmill is not operated for approx. 5 minutes, it switches to energy-saving mode.

- 1. To start up the treadmill, press any button.
- 2. To turn off the ERP function, press M for 3 seconds in standby mode.

2222 appears on the console. The ERP function is switched off.

3. To switch the ERP function back on, press M for 3 seconds in standby mode.

1111 appears on the console. The ERP function is switched on.

3.7 Buzzer Mute Function

In the default setting, the signal sound is in operation

1. To activate the mute function, press P and STOP in standby mode at the same time.

"Bz off" appears on the display. The signal sound is switched off.

2. To switch off the mute function, press P and STOP in standby mode at the same time.

"Bz on" appears on the display. The signal sound is switched on.

36 Pre-set training programmes

	evel Sort	1	2	3	4	5	6	7	8	9	10
P1	SPEED	1.0	3.0	5.0	5.0	5.0	7.0	7.0	5.0	3.0	2.0
P2	SPEED	2.0	3.0	5.0	8.0	5.0	5.0	6.0	8.0	4.0	3.0
Р3	SPEED	2.0	3.0	7.0	8.0	5.0	5. 0	5.0	8.0	4.0	3.0
P4	SPEED	2.0	2.0	5.0	8.0	8.0	8.0	8.0	5. 0	3.0	2.0
P5	SPEED	3.0	4.0	8.0	9.0	10.0	10.0	10.0	7. 0	4.0	3.0
P6	SPEED	3.0	4.0	6.0	7.0	7.0	7.0	9.0	10.0	5.0	3.0
P7	SPEED	3.0	4.0	4.0	10.0	4.0	9.0	4.0	11.0	3.0	2.0
P8	SPEED	3.0	5. 0	7.0	9.0	3.0	5. 0	7.0	5. 0	11.0	5.0
Р9	SPEED	3.0	7.0	10.0	4.0	7.0	11.0	5. 0	4.0	12.0	6.0
P10	SPEED	3.0	5. 0	9.0	10.0	6.0	6.0	9.0	6.0	11.0	3.0
P11	SPEED	4.0	5.0	11.0	9.0	6.0	8.0	9.0	11.0	6.0	5.0
P12	SPEED	4.0	6.0	10.0	10.0	10.0	7.0	7.0	10.0	6.0	5.0
P13	SPEED	2.0	4.0	6.0	6.0	6.0	8.0	8.0	6.0	4.0	3.0
P14	SPEED	3.0	4.0	6.0	9.0	6.0	6.0	7.0	9.0	5.0	4.0
P15	SPEED	3.0	4.0	8.0	9.0	6.0	6.0	6.0	9.0	5.0	4.0
P16	SPEED	3.0	3.0	6.0	9.0	9.0	9.0	9.0	6.0	4.0	3.0
P17	SPEED	4.0	5.0	9.0	10.0	11.0	11.0	11.0	8.0	5.0	4.0
P18	SPEED	4.0	5. 0	7.0	8.0	8.0	8.0	10.0	11.0	6.0	4.0
P19	SPEED	4.0	5.0	5.0	11.0	5.0	10.0	5.0	12.0	4.0	3.0
P20	SPEED	4.0	6.0	8.0	10.0	4.0	6.0	8.0	6.0	12.0	6.0
P21	SPEED	4.0	8.0	11.0	5.0	8.0	12.0	6.0	5.0	12.0	7.0
P22	SPEED	4.0	6.0	10.0	11.0	7.0	7.0	10.0	7.0	12.0	4.0
P23	SPEED	5.0	6.0	12.0	10.0	7.0	9.0	10.0	12.0	7.0	6.0
P24	SPEED	5.0	7.0	11.0	11.0	11.0	8.0	8.0	11.0	7.0	6.0
P25	SPEED	3.0	5.0	7.0	7.0	7.0	9.0	9.0	7.0	5.0	4.0
P26	SPEED	4.0	5. 0	7.0	10.0	7.0	7.0	8.0	10.0	6.0	5.0
P27	SPEED	4.0	5. 0	9.0	10.0	7.0	7.0	7.0	10.0	6.0	5.0
P28	SPEED	4.0	4.0	7.0	10.0	10.0	10.0	10.0	7.0	5.0	4.0
P29	SPEED	5.0	6.0	10.0	11.0	12.0	12.0	12.0	9.0	6.0	5.0
P30	SPEED	5.0	6.0	8.0	9.0	9.0	9.0	11.0	12.0	7.0	5.0
P31	SPEED	5.0	6.0	6.0	12.0	6.0	11.0	6.0	12.0	5.0	4.0
P32	SPEED	5.0	7.0	9.0	11.0	5.0	7.0	9.0	7.0	12.0	7.0
P33	SPEED	5.0	9.0	12.0	6.0	9.0	12.0	7.0	6.0	12.0	8.0
P34	SPEED	5.0	7. 0	11.0	12.0	8.0	8.0	11.0	8.0	12.0	5. 0
P35	SPEED	6.0	7.0	12.0	11.0	8.0	10.0	11.0	12.0	8.0	7. 0
P36	SPEED	6.0	8.0	12.0	12.0	12.0	9.0	9.0	12.0	8.0	7. 0

4.1 General Information

When training, it is important to perform the exercises correctly in order to avoid injuries and achieve the desired training effect. Make sure you use the correct technique and train at an appropriate intensity level. Always consult an expert such as a trainer or doctor if you are unsure or have health problems. Always start your training with a low load and increase it evenly and gently. End your training with a cool-down phase. If you have any questions or uncertainties, contact your doctor.

4.1.1 Training clothes

During training, wear appropriate sports clothing that is comfortable and breathable. Avoid clothing that restricts you or is uncomfortable. Make sure that your shoes are suitable and offer you sufficient support. In addition, always carry a towel with you to wipe away sweat and keep the equipment clean.

4.1.2 Warming up and stretching

It is important to warm up and stretch properly before training to avoid injury and improve performance. Stretching helps to loosen muscles and improve flexibility. Be sure to incorporate a short stretching routine before each workout.

Warm-up exercise:

- 1. Stand upright with your feet about shoulder-width apart.
- 2. Start with gentle arm circles by slowly moving your arms forwards in small circles in a controlled manner.
- 3. Perform arm circles backwards to loosen your shoulders and arms.
- 4. Do squats by slowly squatting down and then straightening up again. Make sure that your knees do not extend beyond your toes.

↑ CAUTION

Do not exercise with sore muscles or take it easy on the affected muscles, as this can lead to injuries.



4.1.3 Medication

If you regularly take medication and want to exercise, it is important to be aware of possible side effects. Ask your doctor whether your medication affects your workout.

4.1.4 Used muscle groups

Running uses the following muscle groups:

- + Gluteal muscle
- Leg muscles

Make sure you keep your back straight during training. Do not hunch over and do not arch your back. Do not fully extend your legs, but keep a slight bend in the backwards movement.

4.1.5 Exercise frequency

Regular exercise is crucial to making progress and staying healthy in the long term. Continuous exercise can strengthen muscles, improve endurance and enhance overall well-being. Remember that even small workouts can be done regularly to achieve long-term results.

Training with heart rate orientation

Heart rate orientation guarantees an extremely effective and healthy training. Through your age and the following table, you can quickly and easily read and determine the optimal pulse for your training. An acoustic alarm will sound if your heart rate exceeds the set target heart rate. Which target heart rate is important for which training goal can be found out in the following.

Fat burning (weight management): The main goal here is to burn deposits of fat. In order to achieve this training goal, a low training intensity (approximately 55% of the maximum heart rate) and a longer training period are required.


Cardiovascular training (cardio training): The primary goal is to increase stamina and fitness through an improved provision of oxygen through the cardiovascular system. In order to achieve this training goal, medium intensity (approximately 75% of the maximum heart rate) with a medium training period is required.

Anaerobic (maximum) load training: The main goal of maximum load training is to improve recovery after short, intense loads in order to be able to quickly return to the aerobic zone. In order to achieve this training goal, a high intensity (approximately 90% of the maximum heart rate) with short, intense load is required, which is followed by a recovery phase in order to prevent muscle fatigue.


Example:

For a 45-year-old man or woman, the maximum heart rate is 175 (220 - 45 = 175).

- + The fat burning target zone (55%) is at approximately 96 beats/min. = $(220 age) \times 0.55$.
- + The cardio target zone (75%) is at approximately 131 beats/min. = $(220 age) \times 0.75$.
- + The maximum heart rate for an anaerobic load training (90%) is at approximately 157 beats/min. = (220 age) x 0.9.

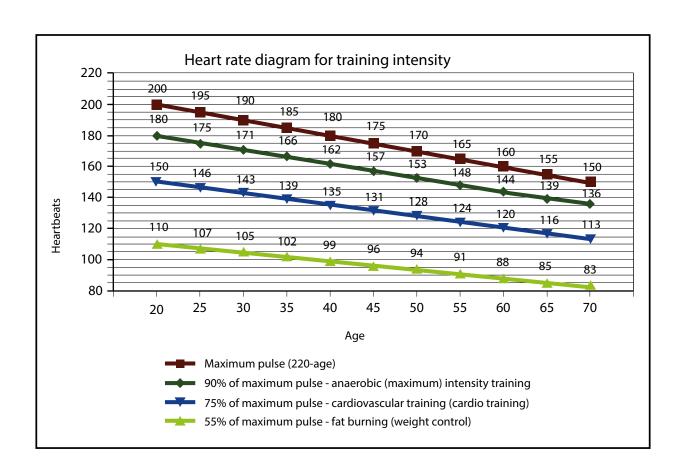

4.2 Workout journal

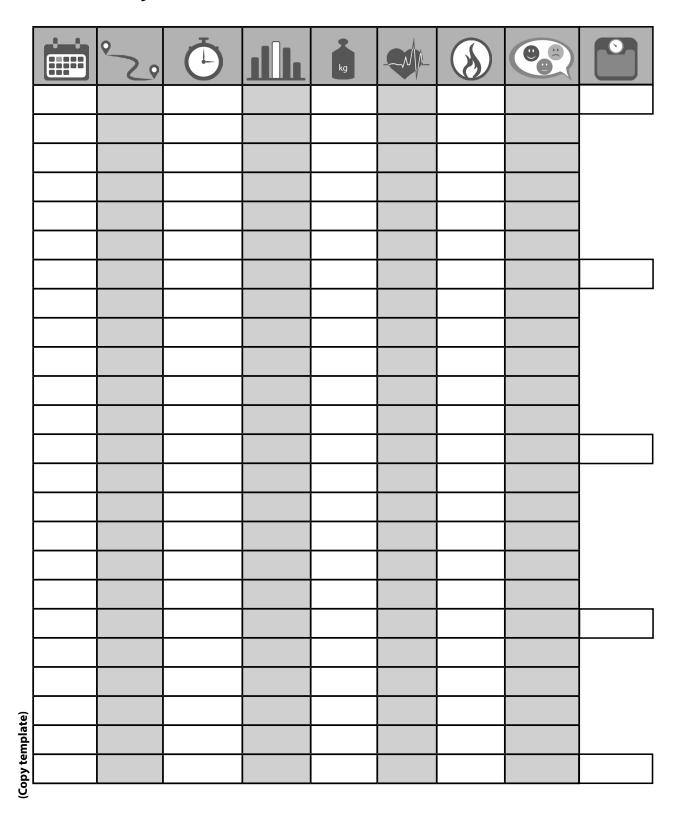



















I feel ...

Resistance level

Ø Pulse

5.1 General Instructions

↑ WARNING

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.

ATTENTION

Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.

5.2 Transportation Wheels

ATTENTION

- + If you want to transport your equipment over particularly sensitive and soft floor coverings, such as parquet, planks or laminate, lay out the transport route with cardboard or similar to avoid possible floor damage.
- 1. Stand behind the equipment and lift it until the weight is transferred to the transportation wheels. After that, you easily can move the equipment to a new position. For long transport distances the equipment should be disassembled and safely packed.
- 2. Select the new location by following the instructions in the section 1.4 of this manual.

5.3 Folding Mechanism

↑ WARNING

Do not lift the treadmill by the running mat or the rear transporting wheels. These parts do not lock and are difficult to grab.

NOTICE **(i)**

The treadmill is foldable and thus saves space when it is stored. It also makes it easier to transport.

5.3.1 Folding Up the Treadmill

MARNING

- + Do not connect the equipment to the power supply when it is folded up. Try not to operate the equipment when it is folded up.
- + The running surface must have come to a complete stop before folding.

∧ CAUTION

Do not lean on the equipment when it is folded and do not place anything on top of it that may make the equipment unstable or fall down.

ATTENTION


Make sure that nothing is standing next to or on top of the treadmill that can be spilled or thrown or that makes it impossible to fold the treadmill.

NOTICE

Folding is done in the reverse order of the assembly.

- 1. Switch off the treadmill.
- 2. Pull the power plug out of the outlet.
- 3. Fold the console (69) backwards.
- 4. Hold the console frame (58) with one hand and loosen the two Quincuncial knobs (52) on the left (43) and right (44) standposts with the other hand. Turn the Quincuncial knobs (52) counterclockwise.
- 5. Fold the console frame (58) backwards.
- 6. Hold the left standpost (43) with one hand and loosen the left L-shape knob (53) with the other hand. Turn the L-shape knob (53) counterclockwise.
- 7. Repeat the step for the right standpost (44) and the right L-shape knob (53).
- 8. Fold the device by the left (43) and right (44) standposts.
- 9. Turn the two L-shape knobs (53) clockwise to fasten the folded device.

→ The device is securely folded.

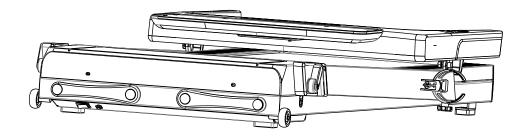

5.3.2 Storing the Treadmill

- 1. Fold the folding bracket frames (83) outwards (figure 1).
- 2. Set up the device vertically (figure 2).

CAUTION

The device may not yet be leant against the wall in this state. Failure to do so may cause the device to tip over and result in damage to property and personal injury.


3. Pull the spring thread latch (101) (figure 3).

► ATTENTION

Do not pull the spring thread latch (101) out of the device.

4. Lower the rear support welds (97) until the spring thread latch (101) snaps into place with a soud (figure 4).

The device may now be leant against a wall (figure 5).

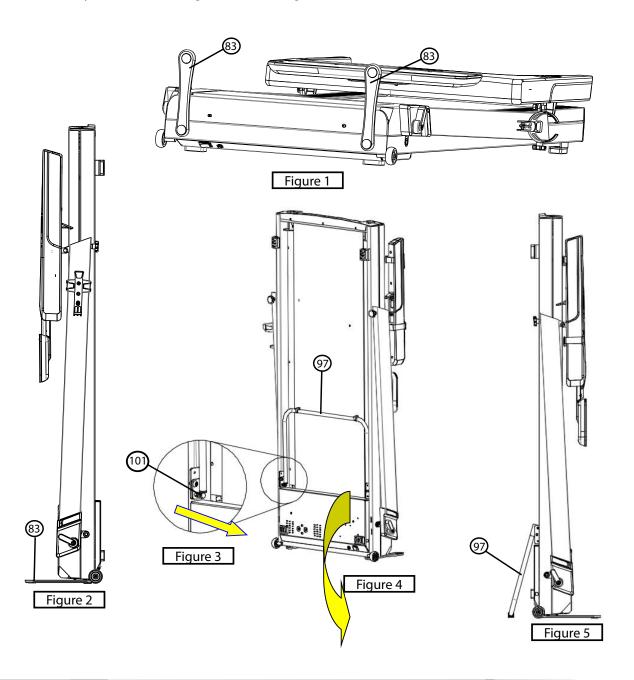

6.1 General Instructions

★ WARNING

+ Do not make any improper changes to the equipment.

↑ CAUTION

Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

ATTENTION

In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

6.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

Fault	Cause	Solution			
Console is not responding	Safety key missing or not inserted correctly	Check whether Safety Key is inserted and insert if necessary			
Running mat slanting Grinding noises	Running mat not centered	Adjust the running mat according to the instructions			
Running mat slips through/stops	Tape tension/lubrication not correct	Check belt tension/lubrication according to instructions			
Display is blank/is not working	+ Interrupted power connection + Loose cabel connections	 + Power switch to on + Check whether Safety Key is plugged in + Check cable connections 			
No pulse display	 + Sources of interference in the room + unsuitable chest strap + Wrong position of chest strap + Chest strap defective or battery empty + Pulse display defective 	 Eliminate sources of interference (e.g. mobile phone, WLAN, lawn mower and vacuum cleaner robot, etc) Use a suitable chest strap (see RECOMMENDED ACCESSORIES). Reposition chest strap and/or moisten electrodes Changing batteries Check if pulse display by hand pulse possible 			

6.3 Error Codes and Troubleshooting

The electronics of the equipment continuously carries out tests. In case of deviations, an error code appears on the display and normal operation is stopped for your safety.

Please contact the contract partner for technical support.

6.4 Care and Maintenance

The most important maintenance measure is the care of the running mat. This includes adjustment, re tensioning and lubrication of the running mat. Damage resulting from insufficient or neglected care is not covered by the warranty. You should therefore carry out maintenance checks at regular intervals. Be very careful when adjusting and tightening the running mat, as a strong over voltage or under voltage can cause damage to the equipment. The running mat is adjusted at the factory according to the regulations before delivery. However, it may happen that the running mat slips during transport.

By scanning the QR-code with the camera function or QR-code scanner app of your smartphone/tablet, a video on general maintenance of a treadmill opens on YouTube. The video serves to illustrate the maintenance points described in this manual.



Please note that the video may not be available in your language or with appropriate subtitles.

If you cannot scan QR-codes, you can access all Fitshop videos on YouTube by first opening YouTube and entering "Fitshop" in the search field.


6.4.1 Adjusting the Running Mat

During training, the running mat should run as centrally and straight as possible. The alignment of the running mat can change depending on the stress and load. Another reason can be the positioning of the equipment on an uneven surface.

CAUTION

During the following maintenance nobody must be on the treadmill!

- 1. Let the treadmill run at a speed of 5 km/h.
- 2. If the running mat deviates to the left, turn the left adjusting screw at the rear end of the device max. one ¼ turn clockwise and the right adjusting screw max. one ¼ turn anticlockwise.
- 3. If the running mat deviates to the right, turn the right adjusting screw at the rear end of the device max. 1/4 turn clockwise and the left adjusting screw max. 1/4 turn anticlockwise.
- Then observe the mat for about 30 4. seconds, as the change is not immediately visible.
- 5. Repeat this procedure until the running mat is straight again. If the running mat cannot be adjusted, please contact your contract partner.

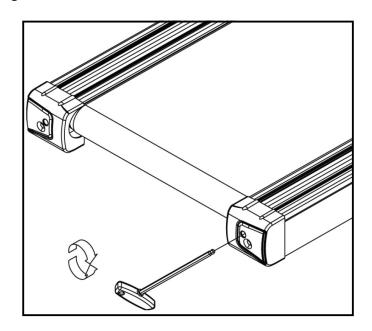

6.4.2 Re-tensioning the Running Mat

If the running mat slips over the rollers during operation (if this is the case, there is a noticeable jerk during running), the running mat must be re tightened.

In most cases, the slipping is caused by stretching of the mat through use. This is perfectly normal.

(i) NOTICE

Re-tensioning is carried out using the same adjusting screws that are used for adjustment.

- 1. Let the treadmill run at a speed of 5km/h.
- 2. Turn the left and right adjusting screws directly one after the other, max. one ¼ turn clockwise.
- 3. Then check whether the running mat continues to slip. If this is the case, you must perform the described procedure again.

6.4.3 Lubricating the Running Mat

If the running mat is not sufficiently lubricated, friction increases significantly and this leads to heavy wear of the endless belt, running plate, motor and circuit board. If you feel an increased friction of the running mat, this is an indication that you should lubricate the mat. However, lubrication should be carried out at least every 3 months or every 50 operating hours. Whichever case comes first.


(i) NOTICE

If your treadmill is equipped with a folding mechanism, you can also lubricate it when it is folded.

- 1. Raise the running mat slightly.
- 2. Apply some silicone oil or silicone spray to the entire deck and distribute evenly.
- 3. Continue turning the belt by hand so that the entire surface between the endless belt and the running plate is lubricated.
- 4. Wipe off the excess silicone oil or silicone spray.

(i) NOTICE

This maintenance must also be carried out after prolonged non-use of the equipment.

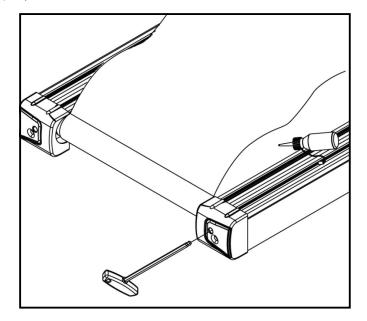

6.5 Maintenance and Inspection Calendar

To avoid damage from body sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly	Quarterly
Display console	С	I	
Tension of the running mat			I
Lubrication of the running mat			I
Plastic covers	С	I	
Screws and cable connections			I
Legend: C = clean; I = inspect	-		

By scanning the QR-code with the camera function or QR-code scanner app of your smartphone/tablet, a video on general maintenance of a treadmill opens on YouTube. The video serves to illustrate the maintenance points described in this manual.



Please note that the video may not be available in your language or with appropriate subtitles.

If you cannot scan QR-codes, you can access all Fitshop videos on YouTube by first opening YouTube and entering "Fitshop" in the search field.

7

DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an electricals recycling centre. Further information can be obtained from your local authority's recycling service.



The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

RECOMMENDED ACCESSORIES

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. For elliptical cross trainers this could for example be a **floor mat**, which makes your fitness equipment stand more securely and also protects the floor from sweat or **silicone spray** to keep moving parts in good shape.

If you have purchased a fitness machine with pulse training and want to train your heart rate, we strongly recommend that you use a compatible **chest strap**, as this ensures optimum transmission of the heart rate.

Our range of accessories offers the highest quality and makes training even better. If you would like to find out more about compatible accessories, please go to the detail page of the product in our webshop (the easiest way is to enter the article number in the search field above) and go to the recommended accessories on this page. Alternatively, you can use the QR-code provided. Of course, you can also contact our customer service: by telephone, e-mail, in one of our branches or via our social media channels. We will be happy to advise you!





9.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter of this operating manual.

(i) NOTICE The serial number of your equipment is unique. It's located on a white sticker.
Enter the serial number in the appropriate field.
Serial number:
Brand / Category:
Kettler / treadmill
Model Name:
Sprinter 1.1
Article Number:
K-TM1065-100


9.2 Parts List

No.	Name	Supplier Parts No.	Qty.
1	Main frame	2103020671	1
2	Allen C.K.S. full thread bolt M8*25	3060500336	2
3	Philips C.K.S. full thread bolt M5*10	3060500438	8
4	Philips C.K.S. self-tapping bolt ST4*16	3060500500	9
5	Allen Cylinder full thread bolt M8*75	3060500731	2
6	Flat washer 8	3060600052	2
7	Allen Cylinder full thread blot M6*45	3060500135	1
8	Philips C.K.S. self-tapping bolt ST4*10	3060500515	2
9	Allen sunk full thread bolt M6*55*16	3060500696	6
10	Philips C.K.S. full thread bolt M4*16	3060500458	2
11	Philips C.K.S. full thread bolt M4*10	3060500454	2
12	Philips sunk self-tapping bolt ST4*15	3060500561	8
13	Flat washer 5	3060600059	2
14	Outer serrate lock washer 5	3060600009	2
15	Spring washer 5	3060600051	2
16	Plastic flat pad (PVC) 12*6*t1.0	3051100096	6
17	Magnet ring	3060800536	1
18	Front roller	3060200093	1
19	Rear roller	3060200058	1
20	Motor	3030200081	1
21	Running belt	3040200575	1
22	Running board	3040100182	1
23	Motor belt 174(442)PJ6	3051200033	1
24	Philips Pan head full thread bolt M4*8	3060500471	2
25	Motor cover	2002020294	1
26	Rear cover	3050300200	1
27	Side rail	3050200351	2
28	Square cushion	3051100136	6
29	wheels	3051000016	2
30	Round edge guide block	3059900085	6
31	Square feet pad	3051100233	4
32	cable clamp	3089900010	2

33	Communication wire L-300MM	3020501158	1
34	controller	3020400425	1
35	Power connection wire	3020500369	1
36	Power connection wire	3020500370	1
37	Power connection wire	3020500385	1
38	Speed sensor	3020100011	1
39	Ship type switch	3029900020	1
40	Self-reset switch	3029900011	1
41	Power cable buckle	3089900012	1
42	Metal support for speed sensor	3020100050	1
43	Standpost left	2103040828	1
44	Standpost right	2103040829	1
45	Allen Cylinder full thread bolt M8*25	3060500860	4
46	Philips C.K.S. self-tapping bolt ST4*10	3060500500	4
47	Flat washer 8	3060600052	2
48	Hexagon lock nut M8	3060500005	2
49	Flat washer 32*8,5*t2.0	2001020019	2
50	Plastic pad 24*16*t2.0	3051100142	2
51	Plastic pad Φ12×Φ6×t1.0	3051100096	2
52	Quincuncial knob 32*8,5*t2.0	3069900051	2
53	L-shape knob	2002090145	2
54	Bottle holder	3059900204	1
55	Standpost cover left	3050600820	1
56	Standpost cover right	3050600821	1
57	Communication wire	3020501159	1
58	Console frame	2103050538	1
59	Console fixing plate	2902000968	1
60	Papilionaceous Spring 12,5*6,2*0,7	3060600119	4
61	M6 step pad 16*8*4,7	3060801157	2
62	Philips C.K.S. self-tapping bolt ST4*10	3060500515	2
63	Philips C.K.S. self-tapping bolt ST4*16	3060500500	20
64	Philips sunk self-tapping bolt ST4*10	3060500653	16
65	Philips sunk self-tapping bolt ST4*15	3060500564	4
66	Hexagon full thread bolt M6*20	3060500737	2
67	Philips C.K.S. full thread bolt M4*16	3060500458	2

	•	T	
68	Hexagon lock nut M6	3060500036	4
69	Console	2033012785	1
70	Communication wire	3020501160	1
71	Console panel	3050500273	1
72	Console back cover	3050400389	1
73	Safety key socket	3020300088	1
74	Safety key	3020300023	1
75	Sundry basket upper	2002090141	1
76	Sundry basket lower	2002090142	1
77	Console front decoration cover	3050600815	1
78	Console rear decoration cover	3050600816	1
79	Handle pulse wire	3020501184	2
80	Start/stop handle pulse set	3020600123	1
81	Speed handle pulse set	3020600124	1
82	Touch button wire	3020500871	1
83	Folding bracket frame	2100060133	2
84	Ordinary cylindrical spiral compression spring 14*1,5*20	3060800552	2
86	Philips Pan head full thread bolt M5*15	3060500768	2
88	EVA pad	3059900213	4
89	Acrylic console sticker	3021200434	1
90	Philips C.K.S.sharp full thread bolt	3060500475	2
92	papilionaceous Spring 40*20,4**t2.0	3060600126	2
93	D hole spacer t4,0*40	2103110781	2
94	Earth wire label	3070404280	1
96	Power cord	3030600021	1
97	Rear support welds	2100060284	1
98	Hexagon large flat head full tooth bolt M8*20	3060500195	2
99	Flat washer Ø8	3060600052	2
100	Hexagon lock nut M8	3060500005	2
101	Spring thread latch	3060800036	1

9.3 Exploded Drawing

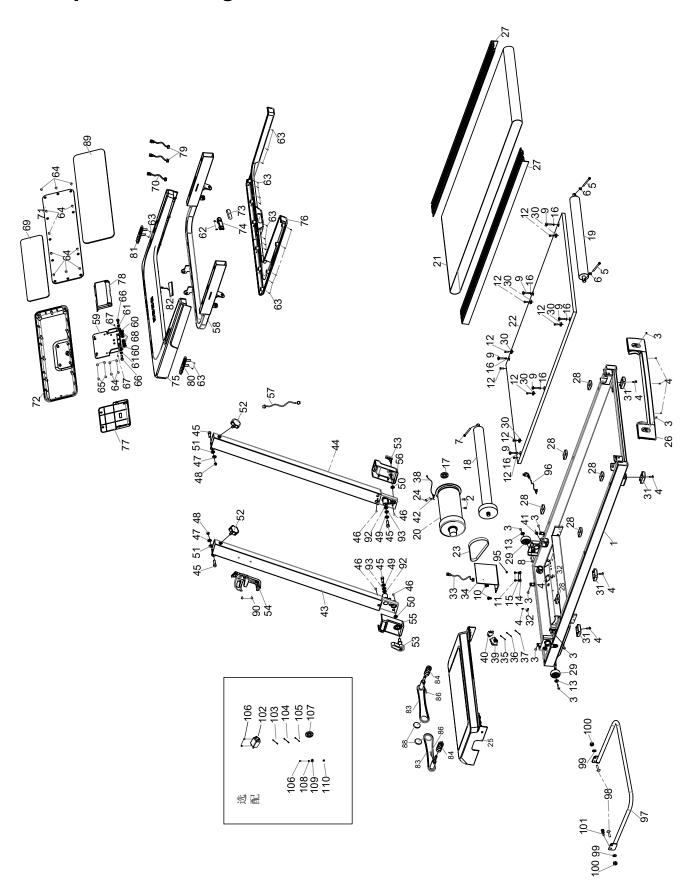

10 WARRANTY

Products from Kettler® are subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

Error Descriptions

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

Your statutory rights are not affected.

Warrantee

The warrantee is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

Warranty period

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

Repair Costs

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warrantee personally and are not a part of repair. After the expiration of the warranty period, the responsibility for parts costs, repair costs, installation costs and delivery costs lies with the warranty holder.

The terms of use are defined as follows:

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

Warranty Service

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.

Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

DE	DV	LIV
DE	DK	UK
TECHNIK	TEKNIK OG SERVICE 80 90 16 50 +49 4621 4210-945 info@fitshop.dk Abningstider kan findes på hjemmesiden: https://stg.fit/statit7	CUSTOMER SUPPORT 00800 2020 2772 +494621 4210 944 info@fitshop.co.uk You can find the opening hours on our homepage: https://stg.fit/statitc
(kostenlos) 04621 4210 - 0 info@fitshop.de Offnungszeiten entnehmen Sie unserer Homepage: https://stg.fit/statita	TECHNIQUE & SERVICE +33 (0) 189 530984 +49 4621 42 10 933 info@fitshop.fr Vous trouverez les heures d'ouverture sur notre site Internet: https://stg.fit/statit4	TECHNIQUE & SERVICE © 02 732 46 77
ES	NL	INT
TECNOLOGÍA Y SERVICIOS 911 238 029 info@fitshop.es Consulta nuestro horario de apertura en la página web: https://stg.fit/statit5	TECHNISCHE DIENST & SERVICE +31 172 619961 service@fitshop.nl De openingstijden vindt u op onze homepage: https://stg.fit/statit3	TECHNICAL SUPPORT & SERVICE +49 4621 4210-944 service-int@fitshop.de You can find the opening hours on our homepage: https://stg.fit/statita
PL	AT	CH
DZIAŁ TECHNICZNY I SERWIS 22 307 43 21 +49 4621 42 10-948 info@fitshop.pl Godziny otwarcia można znaleźć na stronie głównej:	TECHNIK & SERVICE 0800 20 20277 (Freecall) +49 4621 42 10-0 info@fitshop.at Öffnungszeiten entnehmen Sie unserer Homepage:	TECHNIK & SERVICE 0800 202 027 +49 4621 42 10-0 info@fitshop.ch Öffnungszeiten entnehmen Sie unserer Homepage:

Please find a detailed overview including address and opening hours for all stores of the Fitshop Group in Germany and abroad on the following website:

www.fitshop.com/en/stores


WE LIVE FITNESS


WEBSHOP AND SOCIAL MEDIA


Fitshop is Europe's largest specialist store for home fitness equipment with currently over 70 stores and one of the world's most renowned online mail order companies for fitness equipment. Private customers order via the 25 web shops in the respective national language or have their desired equipment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

Fitshop offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.

Visit us also on our social media platforms or our blog!

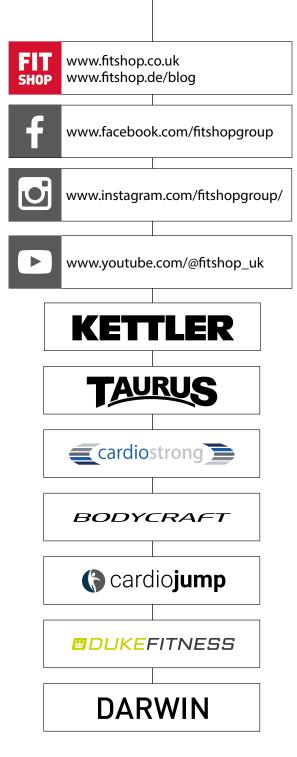

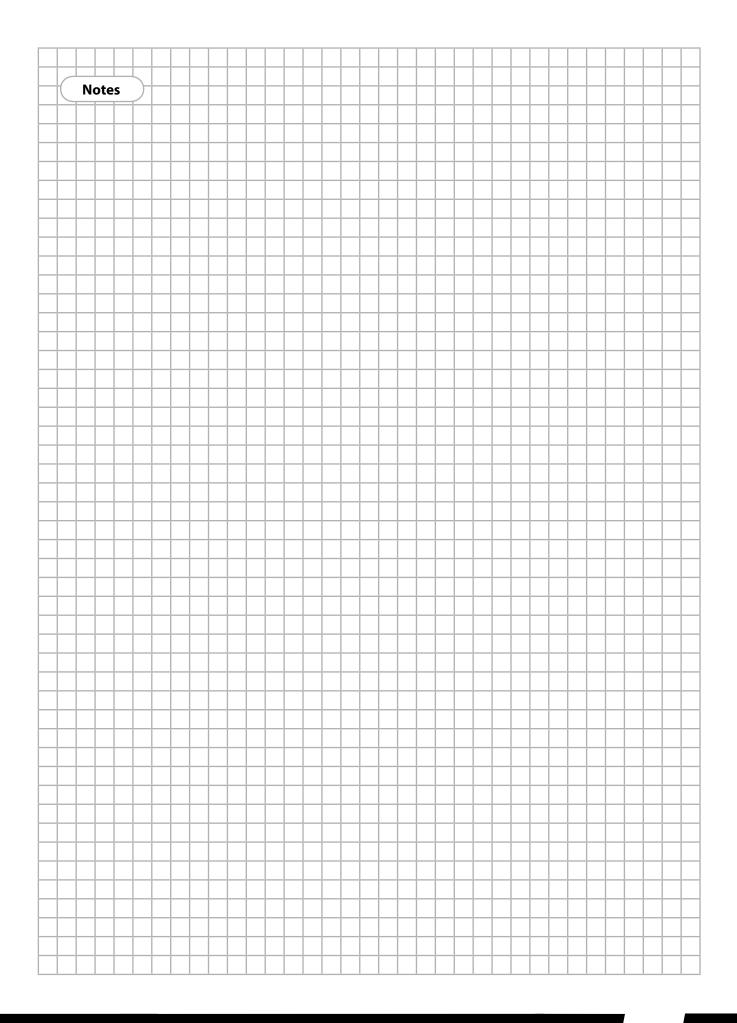

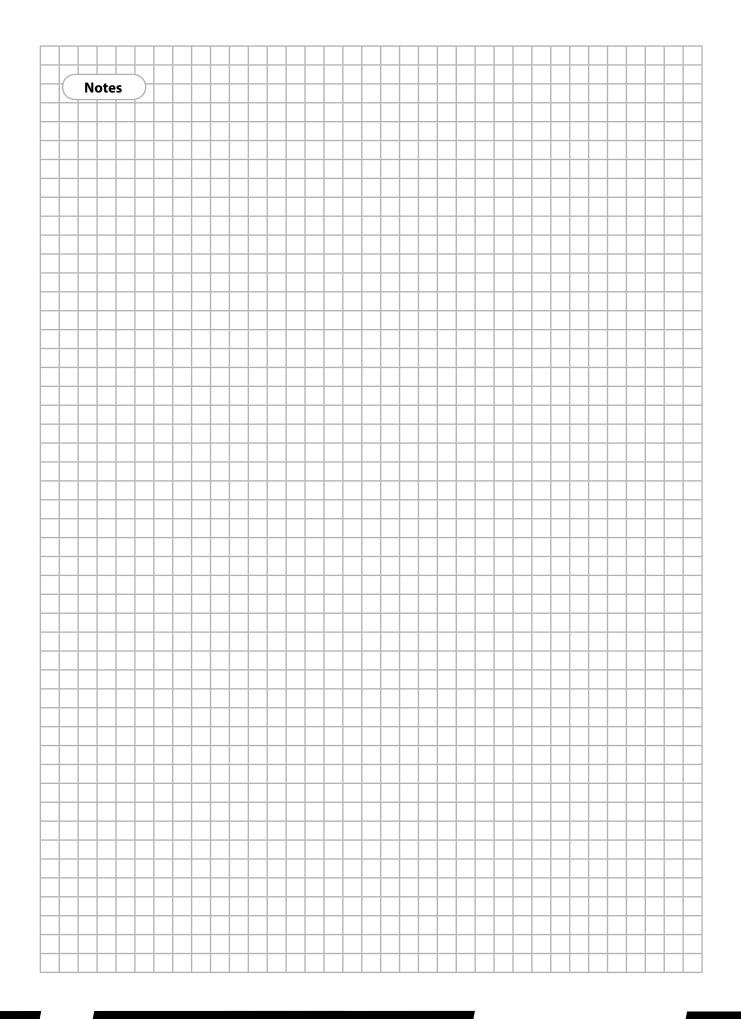

KETTLER