



Assembly and Operating Instructions





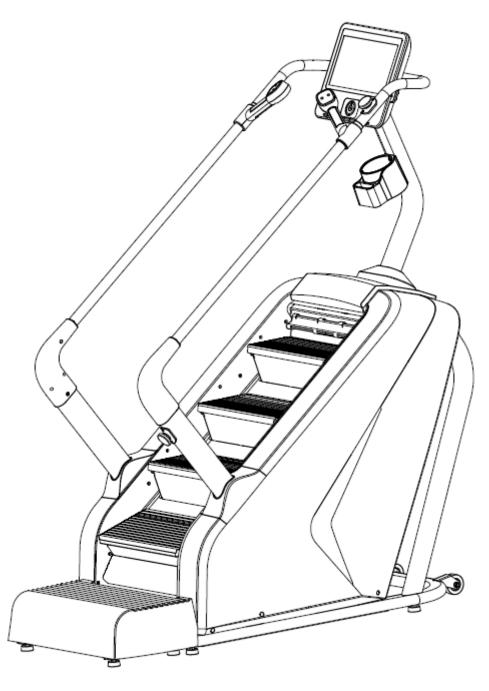

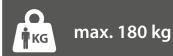

FSTFST105T.01.04

Art.-No. TF-ST105-T

Content

1	GENERAL INFORMATION	8
1.1	Technical Data	8
1.2	Personal Safety	9
1.3	Electrical Safety	10
1.4	Set-Up Place	11
2	ASSEMBLY	10
2		12
2.1	General Instructions	12
2.2	Scope of Delivery	12
2.3	Assembly	14
3	OPERATING INSTRUCTIONS	23
3.1	Touch Screen Functions	26
3.2	Button Functions	27
3.3	Turning On the Equipment and Initial Settings	29
3.3.1	Date and Time Settings	29
3.3.2	General and Wifi Settings	30
3.4	Training Programmes	31
3.4.1	Quick Start	31
3.4.2	Pre-set Programmes	33
3.4.3	Target Programmes	35
3.4.4	Floor Mode	37
3.4.5	Custom Mode	39
3.5	Media and Third-Party Apps	41
3.5.1	Applications and Quick Start	43
3.5.2	Applications and Other Programmes	44
3.6	Wireless Technology	45
4	STORAGE AND TRANSPORT	46
4.1	General Instructions	46
4.2	Transportation Wheels	46
5	TROUBLESHOOTING, CARE AND MAINTENANCE	47
5.1	General Instructions	47
5.2	Faults and Fault Diagnosis	47
5.3	Error Codes and Troubleshooting	47
5.4	Maintenance and Inspection Calendar	48
6	DISPOSAL	49

7	RECOMMENDED ACCESSORIES	50
8	ORDERING SPARE PARTS	51
8.1 8.2 8.3	Serial Number and Model Name Parts List Exploded Drawing	51 52 54
9	WARRANTY	55
10	CONTACT	57

Dear customer,

Thank you for choosing quality training equipment from the TAURUS® brand. Taurus offers sports and fitness equipment for home users with high demands on quality, functionality and longevity. Also, Taurus is a well-known and experienced brand for equipping professional rooms for fitness studios and business customers. The focus of Taurus fitness equipment is on what matters most in sports: maximum performance! Therefore, the devices are developed in close consultation with athletes and sports scientists. Because athletes know best what makes perfect fitness equipment.

Further information can be found at www.fitshop.com.

Intended Use

The equipment may only be used for its intended purpose.

This fitness equipment is suitable for home use, semi-professional use and commercial or professional use. The semi-professional sector includes, for example, institutional facilities such as hospitals, schools, hotels and associations. Professional use refers to commercial use, e.g. in a fitness studio.

Legal Notice

Fitshop GmbH Europe's No. 1 for home fitness

International Headquarters Flensburger Straße 55 24837 Schleswig Germany Management:

Christian Grau

Sebastian Campmann

Dr. Bernhard Schenkel

No. HRB 1000 SL

Local Court Flensburg

European VAT Number: DE813211547

Disclaimer

© TAURUS is a registered brand of the company Fitshop GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Fitshop is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.



Europas Nr.1 für Heimfitness

ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.

Due to ongoing changes and software optimisations, the manual may have to be updated. If you notice any discrepancies during assembly or use, please refer to the manual uploaded to the webshop. The latest manual is always available there.



This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Training devices must be classified according to accuracy and use. Accuracy classes are only applicable to devices that display training data.

Accuracy classes

Class A: high accuracy.
Class B: medium accuracy.

Class C: low accuracy.

The use classes explain the intended use of the training device.

Use classes

Class S (studio): professional and/or commercial use.

These training devices are intended for the use in training rooms of facilities such as sports clubs, school facilities, hotels, clubs and studios whose access and supervision is specifically regulated by the owner (person with legal responsibility).

Class H (home use): use at home.

These stationary training devices are intended for the use in private homes where access to the training device is regulated by the owner (person with legal responsibility).

Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

ATTENTION

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

CAUTION

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

↑ WARNING

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

↑ DANGER

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

(i) NOTICE

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.

1.1 Technical Data

TFT Display

- + Training time in minutes
- + Speed in levels
- + Distance/height in metres
- + Calories in kcal
- + Pulse in beats per minute (when using the hand pulse sensors or a compatible chest strap)
- + Steps
- + Pace in steps per minute

Pre-set programmes:	36
Target programmes:	4
Customized programmes:	16
Floor mode:	1
Quick start:	1

Software languages available: English, Chinese

Weight and Dimensions

Packaging dimensions (L x W x H) approx.: 145 cm x 84 cm x 131 cm Set-up dimensions (L x W x H) approx.: 176 cm x 79.5 cm x 211 cm

Article weight (gross, incl. packaging) approx.: 221 kg Article weight (net, excl. packaging) approx.: 185 kg

Maximum user weight: 180 kg

Pedal height: 23 cm Height of highest step: 100 cm

Use class:

1.2 Personal Safety

↑ DANGER

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.
- + The owner must communicate all warnings and instructions to the user.

↑ WARNING

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + The equipment is strictly for use by one person at a time.
- + If your equipment provides a safety key, the clip of the safety key must be attached to your clothing before starting your training. In the event of a fall, the EMERGENCY STOP of the equipment can be initiated.
- + If an emergency occurs and training has to be stopped abruptly, pull out the safety key, grab both handles, jump onto the side rails and wait until the treadmill has come to a complete stop.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other non-slip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.

CAUTION

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.
- + Be aware that if adjustment devices are left protruding, they may impede the user's movement.

ATTENTION

- + Do not insert any objects of any kind into the openings of the device.
- + To protect the equipment from use by unauthorised third parties, always remove the power cable (if existing) when not in use and store it in a safe place that is inaccessible to unauthorised persons (e.g. children).

1.3 Electrical Safety

↑ DANGER

+ In order to reduce the risk of an electric shock, always unplug the equipment from the mains socket immediately after your workout, before assembly or dismantling, and before maintenance or cleaning. Do not pull on the cable.

↑ WARNING

- + Do not leave the equipment unattended while the mains cable is plugged into the mains socket. During your absence, the mains cable must be removed from the mains socket to prevent improper use by third parties or children.
- + If the mains cable or plug is damaged or defective, contact your contract partner. Until repair, the equipment must not be used.

► ATTENTION

- + The equipment requires a mains connection of 220-230 V with 50 Hz mains voltage.
- + The equipment may only be connected directly to an earthed socket using the supplied mains cable. Extension cables must conform to VDE guidelines. Always completely unwind the mains cable.
- + The socket must be protected by a fuse with a minimum fuse rating of "16 A, slow blow".
- + Do not make any changes to the mains cable or the mains plug.
- + Keep the mains cable away from water, heat, oil and sharp edges. Do not route the mains cable underneath the equipment or under a carpet or rug, and do not place any objects on top of it.
- + If your purchased item is equipped with a TFT console, software updates must be carried out regularly. Follow the instructions on the console to perform the update(s).
- + The software systems on gym equipment with TFT consoles are set up only for the preinstalled apps. Do not install any additional apps.

(i) NOTICE

+ The pre-installed apps on TFT consoles are produced and provided by external manufacturers. Fitshop does not take any responsibility for the availability, functionality or contents of these apps.

1.4 Set-Up Place

↑ WARNING

+ Do not place the equipment in main corridors or escape routes.


CAUTION

- + Make sure that there is a safety area behind the treadmill with a length of at least 2 m and a width at least equal to the width of the treadmill.
- + The training room should be well ventilated during training and not be exposed to any draughts.
- + Choose the place in which to set up the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The free area in the direction from which the exercise equipment is accessed must be at least 0.6 m larger than the exercise area.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.

ATTENTION

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.
- + For Class S equipment, the exercise equipment may only be used in areas where access, supervision and control are specifically regulated by the owner.

Recommended free zone (all measurements shown in mm):

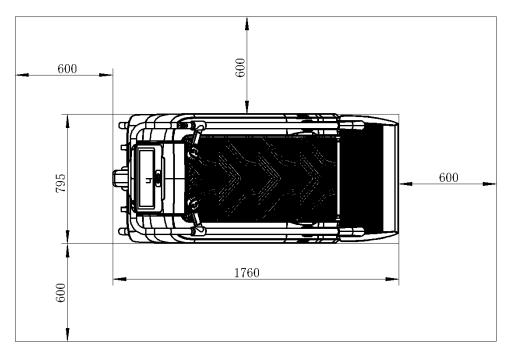

2.1 General Instructions

↑ DANGER

- + Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.
- + Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.

CAUTION

- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.

ATTENTION

+ To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.

NOTICE


- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- + Ideally, assemble the equipment at its later set-up place.

2.2 Scope of Delivery

The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.

CAUTION

If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

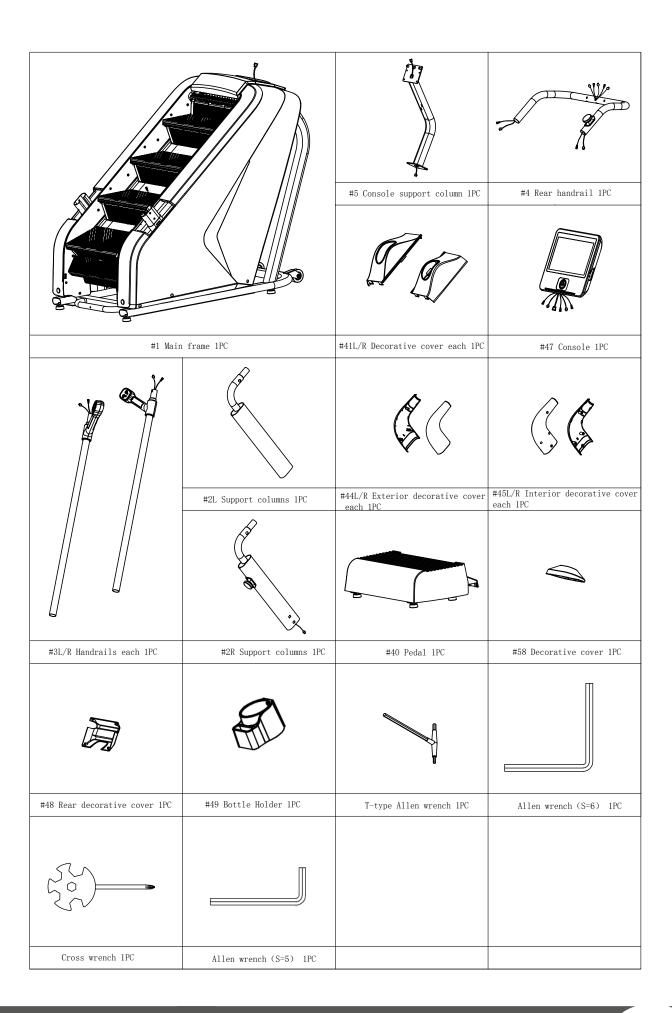

2.3 Assembly

Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

(i) NOTICE

- + First loosely screw all parts together and check that they fit properly. Tighten the screws using the tool only when you are instructed to do so.
- + If you have difficulty recognising the graphics, we recommend that you open and/or download the PDF instructions stored in the webshop on your end device (e.g. smartphone, tablet or PC). There you have the option of zooming in closer. Please note that the Adobe Acrobat Reader programme must be installed on your end device in order to open the file.

Step 1: Opening the Package and Assembly of the Pedal

- 1. Carefully open the package.
- 2. Take out all parts and place the main frame (1) on a flat ground.


(i) NOTE

Inside, there is a safety lever (see C). It must be in the upward position; otherwise, the device will not function.

3. Attach part A of the pedal (40) to part B of the main frame (1).

ATTENTION

Make sure the two parts are centered.

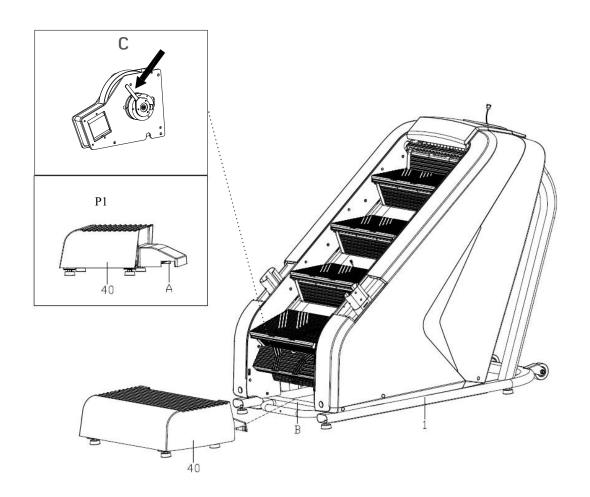

Step 2: Assembly of the Support Column and Decorative Cover

► ATTENTION


Make sure not to pinch the cables during the following steps.

1. Connect the console extension wire (104) to the lower wire (105).

(i) NOTICE

Do not fully tighten the screws yet in the following step.

- 2. Attach the support column (5) to the main frame (1) with four screws (68) and four washers (95).
- 3. Remove the decorative cover (58).
- 4. Attach the decorative cover (58) to the support column (5) so it lays flat on the main frame (1).

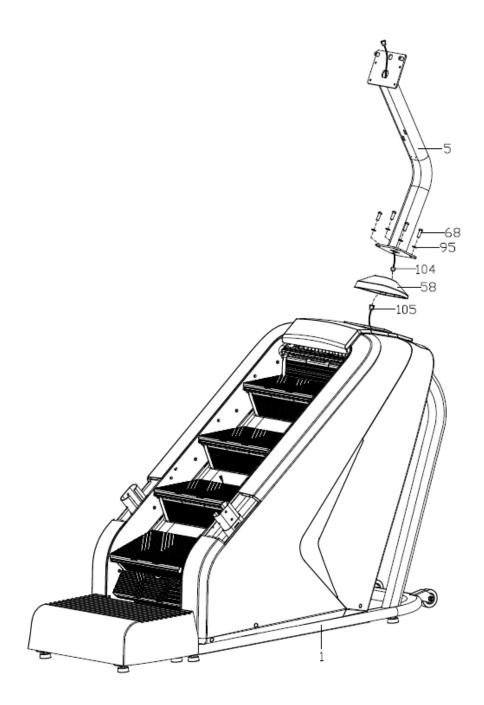

Step 3: Assembly of the Support Columns, Handrails and Decorative Covers

1. Slide the left and right decorative covers (41L & 41R) onto the left and right support columns (2L & 2R).

ATTENTION


Make sure not to pinch the cables during the following steps.

- 2. Carefully pass the switch lower wire 2 (106) through the right decorative cover (41R).
- 3. Connect the switch lower wire 2 (106) to the switch upper wire 2 (107).

(i) NOTICE

Do not fully tighten the screws yet in the following steps.

- 4. Attach the left and right support columns (2L & 2R) to the main frame (1) with three screws (69) and three washers (95) each.
- 5. Attach the left and right handrails (3L & 3R) to the left and right support columns (2L & 2R) with two screws (73) and two washers (96) each.

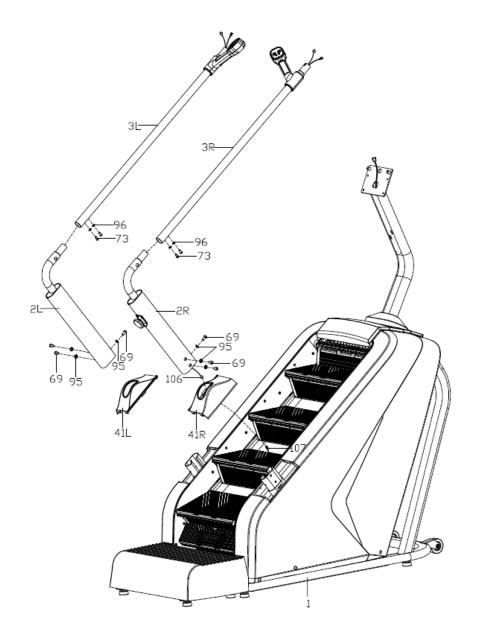

Step 4: Assembly of the Rear Handrail and Decorative Covers


- 1. Connect the pulse upper wire (110) to the pulse extension wire (112),
- 2. Connect the key board upper wire (114) and key board extension wire (116).

Repeat step 1 and 2 for the other side.

ATTENTION

Make sure not to pinch the cables during the following steps.

- 3. Carefully insert the rear handrail (4) into the left and right handrails (3L & 3R).
- 4. Attach the rear handrail (4) to the left and right handrails (3L & 3R) with four screws (73) and four washers (96).
- 5. Thread the pulse extension wire (112), the key board extension wire (116) and the switch lower wire 1 (108) of the rear handrail (4) through the L hole of the support column (5).
- 6. Attach the rear handrail (4) to the support column (5) with two screws (72).
- 7. Fasten the left and right decorative covers (41L & 41R) to the main frame (1).
- 8. Attach the left exterior and interior decorative covers (44L & 45L) to the left support column (2L) with three screws (82) and one screw (79).
- 9. Attach the right exterior and interior decorative covers (44R & 45R) to the right support column (2R) with three screws (82) and one screw (79).
- 10. Now tighten all screws from this and previous steps.

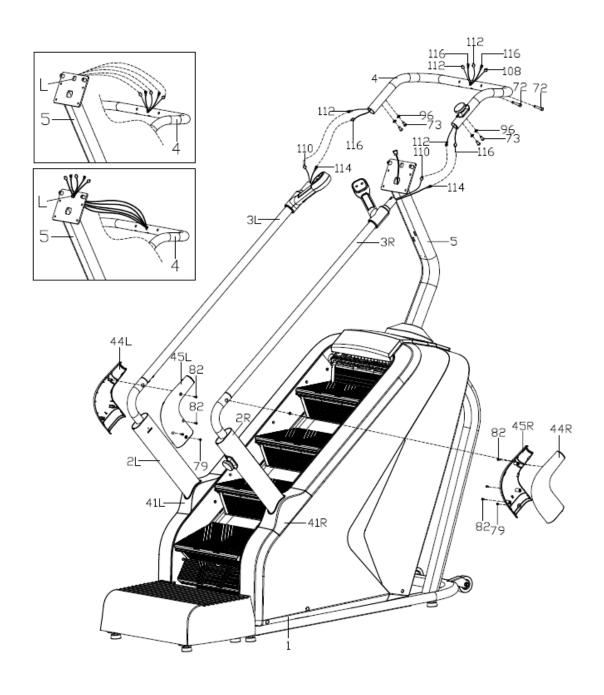


Step 5: Assembly of the Console and Bottle Holder

1. Connect the wires of the console (47) with their respective components on the rear handrail (4) and support column (5).

► ATTENTION

Make sure not to pinch the cables during the following steps.

- 2. Attach the console (47) to the support column (5) with four screws (78).
- 3. Attach the decorative cover (48) to the rear side of the console (47) with four screws (82).
- 4. Slide the bottle holder (49) onto the support column (5) and attach with two screws (122).
- 5. Check that all screws are properly tightened and retighten if needed.

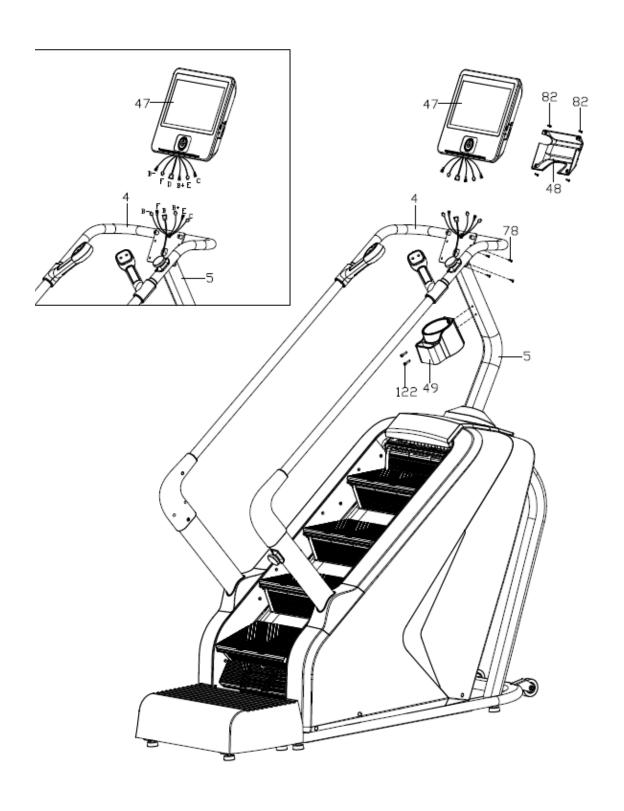

Step 6: Alignment of the Feet

If the floor is uneven, you can stabilize the stair trainer by turning the two setting screws under the main frame.

- 1. Lift the stair trainer on the desired side and rotate the setting screws under the main frame.
- 2. Rotate the screws clockwise in order to raise the surface.
- 3. Rotate them counterclockwise in order to lower the surface.

Step 7: Connecting the Equipment to the Mains Supply

ATTENTION

The equipment must not be connected to a multiple socket, otherwise it cannot be guaranteed that the equipment will be supplied with sufficient power. Technical errors can result.

Plug the power plug into a wall outlet that complies with the instructions in the chapter on electrical safety.


Correctly Getting On and Off

- 1. To step onto the treadmill, grip the handrails with both hands and step onto the treadmill one foot at a time.
- 2. To get off, grip the handrails with both hands and step off the treadmill one foot at a time.

↑ CAUTION

Access and exit the stair climber only from the lower end. (s. illustration)



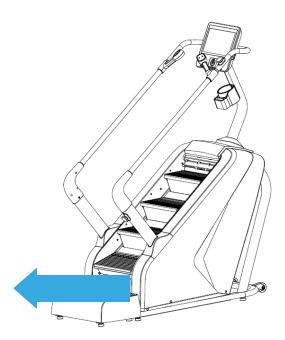

Step 8: Adjusting the chain

If the stairs are shaking, the chain might be too loose.

- 1. Remove he left and right protective cover.
- 2. Tighten the chain.

Use an allen wrench for this.

NOTICE

- + Turn the gear clockwise to tighten the chain. (see figure 1)
- + When the gap between the chain and the tube is adjusted to 35mm your training can continue. (see figure 2)



Figure 1₽

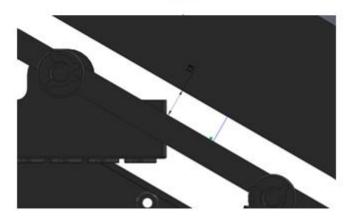


Figure 2₽


(i) NOTICE

- + Familiarise yourself with all the functions and setting options of the device before starting training. Have the proper use of this product explained to you by a specialist.
- Always start your training with low intensity and increase evenly and gently. End your training with a cool-down phase. If you are unsure, please consult your physician.
- + Please bear in mind that the noise emission under load is higher than without load.

SAFETY KEY

↑ WARNING

- For your safety, the device is equipped with an EMERGENCY STOP function. The equipment can only be operated if the safety key is correctly attached to the contact point of the cockpit. If the safety key is no longer on the contact point, the equipment automatically stops. Therefore, the Safety Key cord with the clip must be attached to your clothing before every training session. If you want to quickly stop the treadmill, if you can no longer control the speed, or if another emergency occurs, remove the safety key from the cockpit using the cord.
- + To enable the safety key to detach from the contact point of the cockpit in the event of a fall, the safety key clip must be firmly attached to your clothing!
- + Make sure that the safety key is not accessible to children.

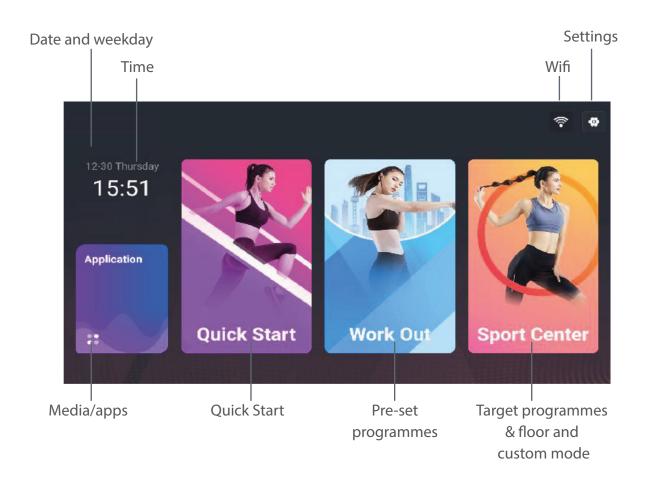

Date, weekday and time	 Displays the current date, weekday and time Tap to adjust the time, date and/or geographic location
Wifi	+ Lights up when the console is connected to a wifi
Settings	+ Tap to enter general settings such as brightness and volume, language selection and wifi settings
Application	+ Tap to enter the media menu with access to local music and video data as well as pre-installed third party apps such as YouTube, Netflix, Spotify and many more


Quick Start	+ Tap to start training immediately
Work Out	+ Tap to select between 36 pre-set programmes (P1 - P36)
Sport Center	+ Tap to select between target programmes, floor and custom mode
O1:13 min Training Time	+ Display of the training time in minutes
Cil 0 bpm	 Display of the current heart rate in beats per minute (bpm) WARNING This equipment is not a medical equipment. The heart rate measurement of the equipment can be unprecise. Different
Heart rate	factors can influence the heart rate reading. The heart rate readings are only meant as a guide for training. i NOTICE To display a pulse, you must grasp the hand pulse sensors on
	the handles or wear a compatible chest strap.
★ 0 spm Step rate	+ Display of the current step rate in steps per minute (spm)
0 steps Steps	+ Display of the accumulated steps
0.0 kcal	+ Display of the accumulated calories burned in kcal
Calories	(i) NOTICE These data serve as a rough guide for comparing your training sessions, they must not be used for medical purposes.
O m Altitude	+ Display of the accumulated height meter in m


3.1 Touch Screen Functions

The TFT-console is equipped with many touch functions to control your training. Depending on which interface you are currently in, the layout can differ slightly. Their functions, however, remain the same.

Quick keys for speed adjustment

Quick keys for speed adjustment

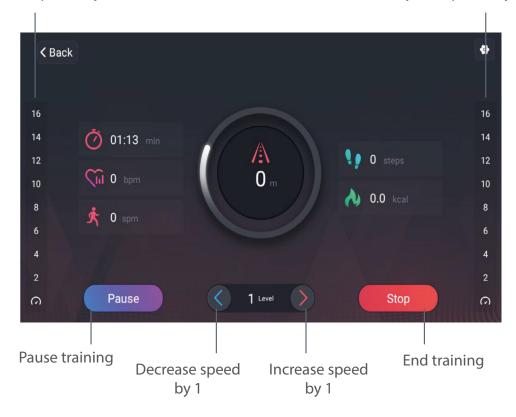

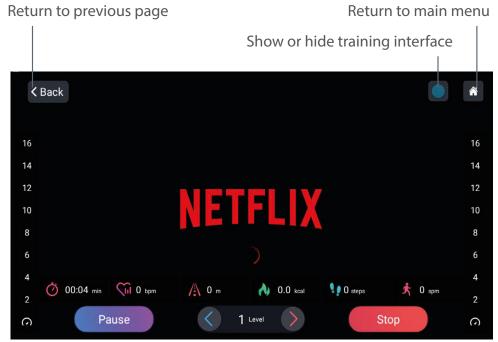


3.2 Button Functions

Four buttons for the most important functions have been integrated on the handles for easier operation during training. The buttons for "start/pause" and "stop" are located on the left handle. The buttons for speed increase and decrease are located on the right handle. The machine is also equipped with two red emergeny stop switches that are located near the right handle and on the right support column at the bottom of the machine.

N	START/PAUSE	+ Press to start training+ Press to pause training
	STOP	+ Press to stop training
•	SPEED (UP)	 + Press to increase the speed + Each press increases the speed by 1 level + Setting range: 1-25
0	SPEED (DOWN)	 + Press to decrease the speed + Each press decreases the speed by 1level + Setting range: 1-25
A STATE OF THE PARTY OF THE PAR	EMERGENCY STOP SWITCH	 + Turn right to unlock the equipment + Press down to lock the equipment + Press down for emergency stop



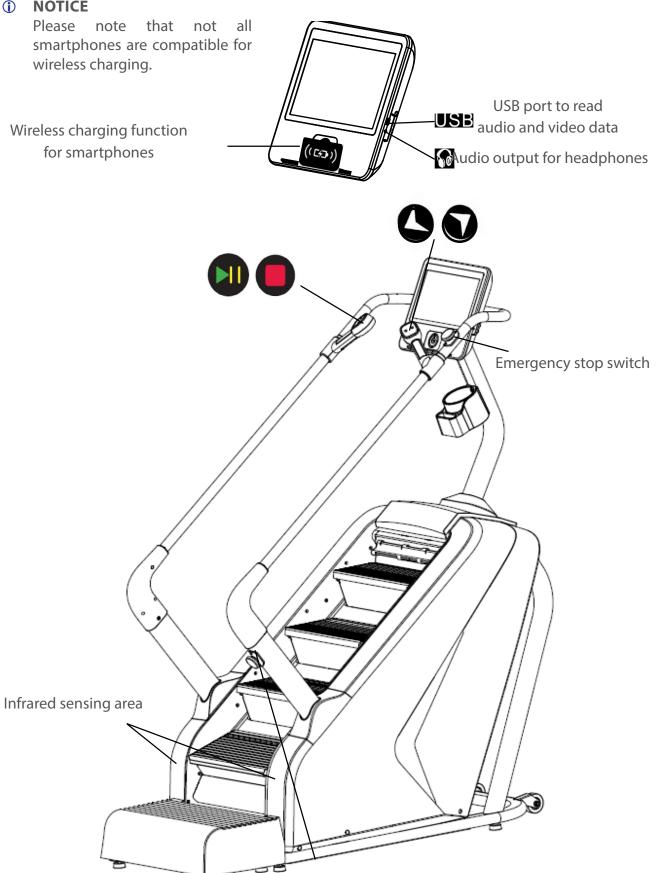

Emergency stop switch

3.3 Turning On the Equipment and Initial Settings

- 1. Insert the power plug into a wall outlet.
- 2. Turn on the power switch.
- 3. Unscrew the two emergency stop switches.
- 4. Check that the infrared sensing area is free of obstructions.

MARNING

The infrared sensing area must always be free of obstructions when you stand on the equipment.

3.3.1 Date and Time Settings

1. To enter the date and time settings, tap the icon 15:58 in the main menu.

You have entered the setting interface for date and time.

(i) NOTICE

If automatic date and time is selected, the manual setting options are not available and vice versa

2. To activate or set a parameter for date, time and/or timezone, tap on the respective button on the right side.

i NOTICE

If the button is enabled, it lights green. If the button is disabled, it lights grey.

3. To leave the setting interface for date and time and return to the main menu, tap on the back or home button.



Setting interface for date and time.

3.3.2 General and Wifi Settings

In the general settings you can adjust some basic console settings as well as the wifi settings.

To enter the general settings, tap the icon in the main menu .



You have entered the general settings.

- To adjust the brightness or volume, swipe on the respective bar.
- To change the console language, tap on the resepective language.

(i) NOTICE

The selected language lights up, the remaining languages are disabled.

To enter the wifi settings, tap on

You have entered the wifi settings.

All available wifi networks are listed.


(i) NOTICE

To connect to a wifi network, wifi must be turned on.

- 5. To select a wifi network, tap on the respective name.
- If applicable, enter the password. 6.
- If the connection is successful, a 7. check mark lights green next to the wifi network.
- To return the main menu, tap on the back button.



Basic settings.

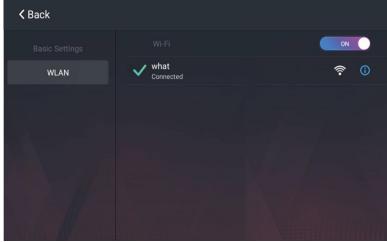

Wifi settings.

Cleaner

To reset background software activites such as cookies, tap on Cleaner.

Factory Mode

ATTENTION

The factory mode is only for technicians. Do not attempt to enter or change data in the factory mode yourself.

3.4 Training Programmes

The console offers a wide variety of different training options and programmes. These include a quick start function for immediate training, 36 pre-set programmes, target and custom programmes.

3.4.1 Quick Start

The quick start function is the ideal choice if you want to start your training immediately and without setting any specific training data. A workout with a constant speed level begins. The speed does not change automatically, but can be set and adjusted individually.

(i) NOTICE

You can control the entire console via the buttons on the screen. For start, pause, stop and speed adjustment, you can also use the buttons on the left and right handles. The following section describes how to use the buttons on the screen.

1. To start the quick start function, tap on Quick Start in the main menu.

A countdown 3-2-1 begins.

The steps start moving and the workout begins.

All values count upwards.

- 2. To adjust the speed, tap on the arrows.
- 2.1. For faster adjustment of the speed, tap on the quick keys (from 2 to 16).

CAUTION

For safety reasons, a speed level of maximum 16 can be selected via the quick keys. For everything above and up to 25, you must use the arrows on the screen or on the handles.

3. To pause the training, tap on pause.

The machine slows down to a stop.

4. To continue the training, tap on start.


A countdown 3-2-1 begins before the machine starts moving. For safety reasons, the machine starts at the lowest speed level before automatically returning to the set speed level before the training was paused.

5. To end the training, tap on stop.

The machine slows down to a stop.

- → A report with your training data is displayed.
- 6. To exit the report and return to the main menu, tap on x.



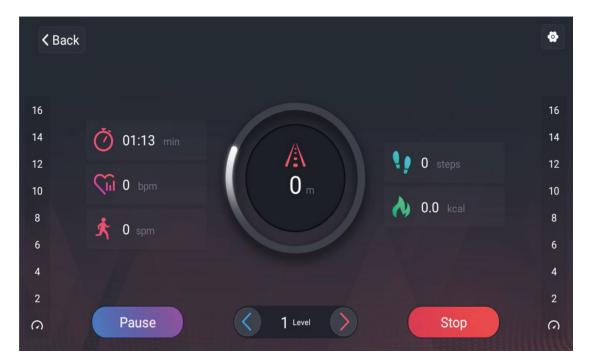

Quick Start interface.



Training report after training.

3.4.2 Pre-set Programmes

There are 36 pre-set programmes (P1 - P36) to choose from. Contrary to the quick start function, these programmes have pre-set speed levels that vary within the set training time.

(i) NOTICE

You can control the entire console via the buttons on the screen. For start, pause, stop and speed adjustment, you can also use the buttons on the left and right handles. The following section describes how to use the buttons on the screen.

1. To enter the interface of the pre-set programmes, tap on Work Out in the main menu.

You have entered the selection interface for the pre-set programmes.

2. To select one of the pre-set programmes (P1 - P36), swipe on the left wheel.

The profile of the programme will be displayed in the centre of the console.

(i) NOTICE

The training time can be set between 5 and 355 minutes in 5-min-intervals.

- 3. To set the desired training time, swipe on the right wheel.
- 4. To start the training, tap on start.

A countdown 3-2-1 begins.

The steps start moving and the workout begins. The set training time will count down to 00:00.

- 5. To adjust the speed manually for the current segment, tap on the arrows.
- 6. To pause the training, tap on pause.

The machine slows down to a stop.

7. To continue the training, tap on start.


A countdown 3-2-1 begins before the machine starts moving. For safety reasons, the machine starts at the lowest speed level before automatically returning to the set speed level before the training was paused.

8. To end the training before the set training time has elapsed, tap on stop.

The machine slows down to a stop.

- → A report with your training data is displayed.
- 9. To exit the report and return to the main menu, tap on x.



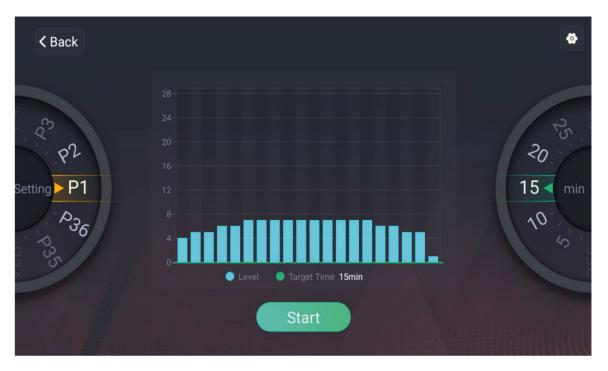

Selection interface of the 36 pre-set programmes "Work Out". Programme selection is on the left side of the display and time setting is on the right side of the display. The speed profile for the chosen programme is shown in the centre.

3.4.3 Target Programmes

Within the option "Sport Center" you can access a total of six different programmes. Four of them are so-called target or countdown programmes in which you can set a target value for either time, altitude, calorie or steps. The programme will start a countdown from the set target value and ends when you have reached your goal.

(i) NOTICE

You can control the entire console via the buttons on the screen. For start, pause, stop and speed adjustment, you can also use the buttons on the left and right handles. The following section describes how to use the buttons on the screen.

1. To enter the interface of the sport center, tap on Sport Center in the main menu.

You have entered the selection interface of the Sport Center.

2. Tap on the desired programme (time, altitude, calorie or step countdown) in the Sport Center menu.



i NOTICE

- + For time, you can set a target value from 5 to 180 minutes in 5-min-intervals.
- + For altitude, you can set a target value from 50 to 9000 metres in 10-m-intervals.
- + For calorie, you can set a target value from 100 to 2000 calories in 100-kcal-intervals.
- + For step, you can set a target value from 100 to 20000 steps in 100-steps-intervals.
- 3. To set your target value, swipe on the wheel.
- 4. To start the training, tap on start.

A countdown 3-2-1 begins.

The steps start moving and the workout begins. A percentage will show how much you have completed of the set target value.

- 5. To adjust the speed, tap on the arrows.
- 5.1. For faster adjustment of the speed, tap on the guick keys (from 2 to 16).

CAUTION

For safety reasons, a speed level of maximum 16 can be selected via the quick keys. For everything above and up to 25, you must use the arrows on the screen or on the handles.

6. To pause the training, tap on pause.

The machine slows down to a stop.

7. To continue the training, tap on start.

A countdown 3-2-1 begins before the machine starts moving. For safety reasons, the machine starts at the lowest speed level before automatically returning to the set speed level before the training was paused.


8. To end the training before the set training time has elapsed, tap on stop.

The machine slows down to a stop.


- → A report with your training data is displayed.
- 9. To exit the report and return to the main menu, tap on x.



Selection interface of "Sport Center".

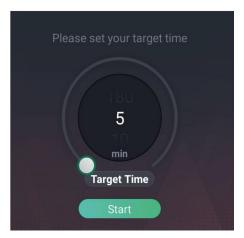

Time setting in the programme "Time countdown".

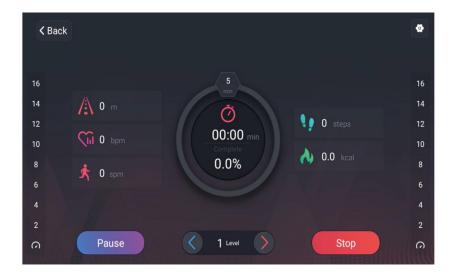

Training interface in the programme "Time countdown".

3.4.4 Floor Mode

The programme "Floor Mode" can also be accessed from the Sport Center interface. This programme calculates how many floors you walk up during training. One floor is the equivalent of 3.5 m altitude.

(i) NOTICE

You can control the entire console via the buttons on the screen. For start, pause, stop and speed adjustment, you can also use the buttons on the left and right handles. The following section describes how to use the buttons on the screen.

1. To select the floor mode programme, tap on Floor Mode in the Sport Center interface.

You have entered the Floor Mode interface.

- 2. To set the speed level, tap on the arrows.
- 3. To start the training, tap on start.

A countdown 3-2-1 begins.



The steps start moving and the workout begins. The amount of floors is counted up.

- 4. To adjust the speed, tap on the arrows.
- 4.1. For faster adjustment of the speed, tap on the quick keys (from 2 to 16).

CAUTION

For safety reasons, a speed level of maximum 16 can be selected via the quick keys. For everything above and up to 25, you must use the arrows on the screen or on the handles.

5. To pause the training, tap on pause.

The machine slows down to a stop.


6. To continue the training, tap on start.

A countdown 3-2-1 begins before the machine starts moving. For safety reasons, the machine starts at the lowest speed level before automatically returning to the set speed level before the training was paused.

7. To end the training, tap on stop.

The machine slows down to a stop.

- → A report with your training data is displayed.
- 8. To exit the report and return to the main menu, tap on x.

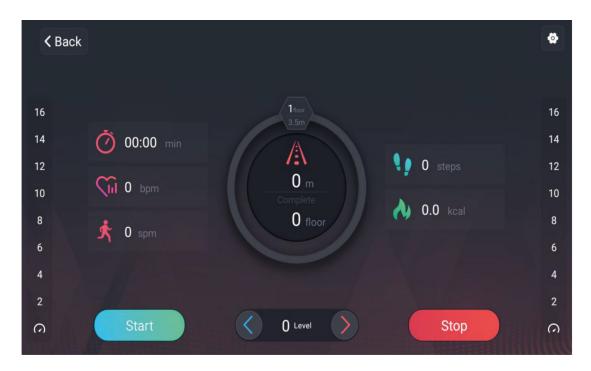

Training interface of the floor mode.

3.4.5 Custom Mode

The final programme is the custom mode in which users can customize their own profile programme. The concept is similar to the pre-set programmes, except that users can individually define the speed level from 1 to 25 for each segment in the programme. There are a total of 16 customizable programmes (U1-U16).


i NOTICE

You can control the entire console via the buttons on the screen. For start, pause, stop and speed adjustment, you can also use the buttons on the left and right handles. The following section describes how to use the buttons on the screen.

1. To select the custom mode, tap on Custom Mode in the Sport Center interface.

You have entered the Custom Mode interface.

- 2. To select a user programme (U1-U16), swipe on the left wheel.
- 3. To set the training time (5 to 355 minutes), swipe on the right wheel.

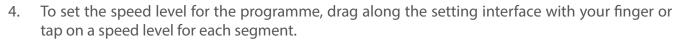

5. To start the training, tap on start.

A countdown 3-2-1 begins.

The steps start moving and the training starts. The set training time counts down to 00:00. The current segment lights blue.

- 6. To adjust the speed of the current segment, tap on the arrows.
- 6.1. For faster adjustment of the speed, tap on the guick keys (from 2 to 16).

CAUTION

For safety reasons, a speed level of maximum 16 can be selected via the quick keys. For everything above and up to 25, you must use the arrows on the screen or on the handles.

7. To pause the training, tap on pause.

The machine slows down to a stop.

8. To continue the training, tap on start.

A countdown 3-2-1 begins before the machine starts moving. For safety reasons, the machine starts at the lowest speed level before automatically returning to the set speed level before the training was paused.

9. To end the training before the set training time has elapsed, tap on stop.

The machine slows down to a stop.


→ A report with your training data is displayed.

10. To exit the report and return to the main menu, tap on x.


(i) NOTICE

The set programme will be saved after completing the training.

Custom

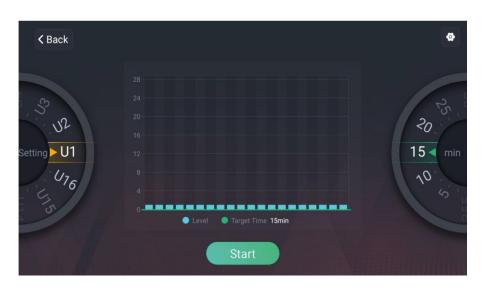

Setting interface in the custom mode. Select programme on the left wheel and set the training time on the right wheel. Set the speed levels in the centre setting option.

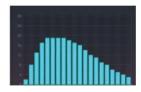

Example of a speed profile.



Training interface in the custom mode. The current level is highlighted in blue.

3.5 Media and Third-Party Apps

The console offers several options for entertainment while training. These include local audio and video data via the USB port and pre-installed third-party apps. These include:

- + YouTube
- + Twitter
- + Chrome
- + Netflix
- + Facebook
- + Spotify
- + Prime Video

(i) NOTICE

Please note that an account and/or a paid subscription is required for the full functionality of some apps.

IMPORTANT NOTE

To make sure the pre-installed apps are working correctly, they must be updated regularly. If needed, the respective app will notify you to do so. To update the app, you need a google account. A google email is sufficient. Just follow the instructions on the screen to perform the update. Please note: The system is set up only for the pre-installed apps. Do not uninstall any pre-installed apps. Do not install any additional apps as their proper functionality can not be guaranteed. The installation of other apps might cause technical issues.


Depending on how you want to train, there are different ways of accessing the media and apps. If you simply want to use the quick start function, you must first access the Application menu and desired app and then start the training. If you want to use any of the other programmes, you must first set up your programme and then go back to the Application menu. You also have the option of storing up to four apps as quick accesses. These apps will be pinned to the top of the screen and can be accessed directly from each programme.

Add Apps as Quick Access

In the Application menu, tap on one of the four plusses (+).

A list with available apps open.

- 2. To add an app for quick access, tap on the respective app from the list.
- 3. Repeat the process with other apps if needed.

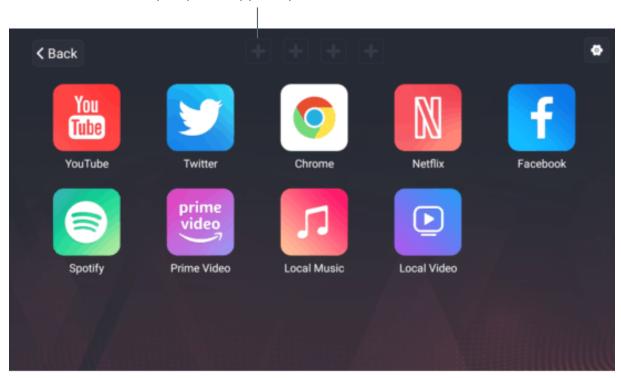

Tap to pin an app for quick access.

CAUTION

Always select and start your desired entertainment before starting the workout. Always focus on your workout.

3.5.1 Applications and Quick Start

1. To enter the media selection, tap on Application in the main menu.

You have entered the Application interface.

(i) NOTICE

The follwing figures use Netflix as an example.

2. To select an app, tap on the respective icon.

The app interface opens.

- 3. Find and start your desired entertainment within the application interface.
- 4. To start the training, tap on the start button.

A countdown 3-2-1 begins. Quick Start starts automatically, the steps start moving and the training data are displayed.

- 5. To hide/show the training data, tap on the hide botton.
- 6. To pause the training, tap on pause.

The machine slows down to a stop.

7. To continue the training, tap on start.

A countdown 3-2-1 begins before the machine starts moving. For safety reasons, the machine starts at the lowest speed level before automatically returning to the set speed level before the training was paused.

8. To end the training, tap on stop.


The machine slows down to a stop.

Back: tap to return to previous page



- Start: tap to start training

Interface of chosen application before training has started.

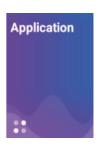

3.5.2 Applications and Other Programmes

1. First set up the desired programme like described in the previous chapters.

(i) NOTICE

For pinned apps, you can simply tap on the respective icon at the top of the screen in the programme interface.

- 2. Continuously tap on Back in the upper left corner, until you have reached the main menu.
- 3. To enter the media selection, tap on Application in the main menu.
- 4. To select an app, tap on the respective icon.

The app interface opens.

5. Find and start your desired entertainment within the application interface.

(i) NOTICE

The follwing figures use Netflix as an example.

6. To start the training, tap on the start button.

A countdown 3-2-1 begins. The programme starts, the steps start moving and the training data are displayed.

- 7. To hide/show the training data, tap on the hide botton.
- 8. To pause the training, tap on pause.

The machine slows down to a stop.


9. To continue the training, tap on start.

A countdown 3-2-1 begins before the machine starts moving. For safety reasons, the machine starts at the lowest speed level before automatically returning to the set speed level before the training was paused.

10. To end the training, tap on stop.

The machine slows down to a stop.

Hide button: tap to hide training data.

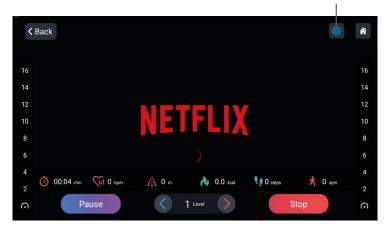

Interface of chosen app once training has started with shown training data. A tap on the hide button will hide the training data.

3.6 Wireless Technology

The console is equipped with a wireless Technology interface that allows you to connect your smartphone in order to play music.

The wireless technology name of the console is SYMK.

- 1. Make sure the wireless technology is activated on your smartphone.
- 2. Search for the wireless technology device "SYMK" in the wireless technology settings of your smartphone.
- 3. Tap on "SYMK" to connect the smartphone to the console.

If the connection is successful, the console beeps briefly.

4.1 General Instructions

WARNING

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.

ATTENTION


+ Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.

4.2 Transportation Wheels

ATTENTION

If you want to transport your equipment over particularly sensitive and soft floor coverings, such as parquet, planks or laminate, lay out the transport route with cardboard or similar to avoid possible floor damage.

- 1. Detach the pedal from the main frame.
- Stand behind the equipment and lift it until the weight is transferred to the transportation wheels. After that, you easily can move the equipment to a new position. For long transport distances the equipment should be disassembled and safely packed.
- 3. Select the new location by following the instructions in the section 1.4 of this manual.

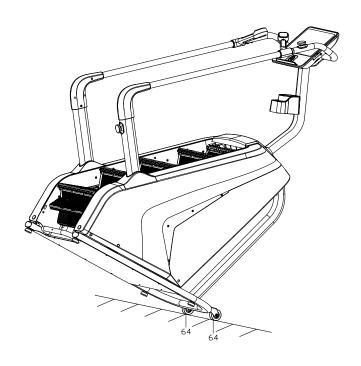

5.1 General Instructions

↑ WARNING

+ Do not make any improper changes to the equipment.

↑ CAUTION

+ Damaged or worn components may affect your safety and the life of the equipment. Safety can only be guaranteed if you check the equipment regularly for wear and damage. Replace damaged or worn components immediately. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

ATTENTION

In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

5.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

Fault	Cause	Solution	
Display is blank/not working	+ Interrupted power connection+ Loose cable connections	+ Power switch to on+ Check cable connections	
Equipment wobbles	Equipment is not level	Align the feet	
No pulse display	 + Sources of interference in the room + unsuitable chest strap + Wrong position of chest strap + Chest strap defective or battery empty + Pulse display defective 	mower and vacuum cleaner robot, etc) + Use a suitable chest strap (see RECOMMENDED ACCESSORIES). + Reposition chest strap and/or	

5.3 Error Codes and Troubleshooting

The electronics of the equipment continuously carries out tests. In case of deviations, an error code appears on the display and normal operation is stopped for your safety.

- **Error 1: No speed sensor signal.** No speed sensor signal: Make sure that the cables are connected.
- Error 2: Infrared hits an obstacle. Infrared sensor detects an obstacle: Clear obstacles out of the way.
- Error 3: Emergeny stop switch has been pressed. Emergency stop has been pressed. Turn the emergency stop switch clockwise.
- Error 4: Controller can not receive signal from MCU. Controller does not recognise signal from processor: Make sure that the cables are connected.

Please contact the contract partner for technical support.

5.4 Maintenance and Inspection Calendar

To avoid damage from body sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly	Quarterly
Display console	С	ı	
Steps	С	I	
Frame	С	I	I
Covers and hand rails	С	I	
Screws and cable connections			I
Lubricate chains*			C/I
Legend: C = clean; I = inspect	-	-	

^{*}Clean and lightly lubricate with silicone spray or silicone oil on a lint-free cloth.



↑ WARNING

Always unplug the power cord before performing the maintenance steps.

DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an electricals recycling centre. Further information can be obtained from your local authority's recycling service.



The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. For stair trainers this could for example be a **floor mat**, which makes your fitness equipment stand more securely and also protects the floor from sweat or **silicone spray** to keep moving parts in good shape and lubricate the chains.

If you have purchased a fitness machine with pulse training and want to train your heart rate, we strongly recommend that you use a compatible **chest strap**, as this ensures optimum transmission of the heart rate.

Our range of accessories offers the highest quality and makes training even better. If you would like to find out more about compatible accessories, please go to the detail page of the product in our webshop (the easiest way is to enter the article number in the search field above) and go to the recommended accessories on this page. Of course, you can also contact our customer service: by telephone, e-mail, in one of our branches or via our social media channels. We will be happy to advise you!




8.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 10 of this operating manual.

(i) NOTICE

The serial number of your equipment is unique. It's located on a white sticker. The exact position of this sticker is shown in the following illustration.

Enter the serial number in the appropriate field.

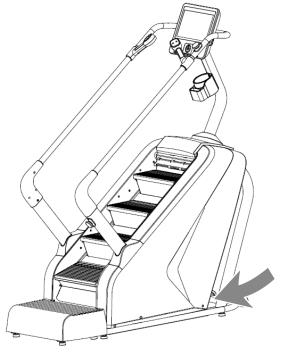

Serial number:

Brand / Category:

Taurus / stair trainer

Model Name:

Stair Trainer ST10.5 Touch

Article Number:


TF-ST105-T

8.2 Parts List

No.	Name	Qty.	No.	Name	Qty.
1	Main frame	1	32	KP005 pedestal bearing	2
2L/R	Support columns	1 p.r.	33	brake combination	1
3L/R	Handrails	1p.r.	34L/R	Protective cover	1p.r
4	Rear handrail	1	35L/R	Inner protective cover	1p.r
5	Console support column	1	36L/R	Decorative strips	1p.r
6	Rear pedal	1	37	Upper protective cover	1
7	Front roller	1	38	Upper protective cover 2	1
8	Rear gear	2	39	Rear cover	1
9	Sensor fix tube	1	40	Pedal	1
10	Light sensor support	1	41L/R	Decorative cover	1p.r
11	PCB baffle	1	42L/R	Upper cover	1p.r
12	Fixing plug	6	43L/R	Lower cover	1p.r
13	Stair support 1	8	44L/R	Exterior decorative cover	1p.r
14	Stair support 2	8	45L/R	Interior decorative cover	1p.r
15	Hole plug	2	46	Wireless charge module	1
16	Cover fixing	2	47	Console	
17	Pulley shaft sleeve	1	48	Rear decorative cover	1
18	Emergency stop disk sleeve	1	49	Bottle Holder	1
19	Rear roller shaft	1	50	Emergency stop switch 2	
20	Guide	2	51	Switch base 1	1
21	Guide2	2	52	Switch base 2	1
22	Support sleeve 1	8	53	Step spacer 1	16
23	Support sleeve 2	2	54	Step spacer 2	16
24	Bearing connecting shaft	16	55	Wear washer	40
25	Step connecting shaft	8	56	Pedal 1	8
26	Chain	2	57	Pedal 2	8
27	Emergency stop plate	1	58 Decorative cover 1		1
28	Belt pulley	1	59	Bottom baffle	1
29	Foot pad	8	60	Middle baffle	1
30	Bearing 608Z	32	61	Belt	1
31	Bearing 6004	4			

62	Anti slip pad	1	93	Outer snap ring Φ 8	32
63	EVA silencing pad	16	94	E-type snap ring Φ 7	24
64	Roller	2	95	Internal serrated washer Φ 10*1.2	
65	Allen bolt M10 * 40	14	-		
66	Allen bolt M10 * 170	2	96	Internal serrated washer Φ 8*1.2	8
67	Outer hexagon bolt M10 * 45	2	97	Standard spring washer Φ 10	4
68	Allen bolt M10 * 30	4	98	standard flat washer Φ 10	4
69	Allen bolt M10 * 20	6	99	Flat washer Φ8	32
70	Allen bolt M8 * 105	10	100	Flat washer Φ6	4
71	Allen bolt M8 * 75	3	101	Controller	1
72	Allen bolt M8 * 40	2	102	Power cord	1
73	Large flat head bolt M8 * 15	8	103	Console upper wire	1
74	Flat end tightening M4 * 5	3	104	Console extension wire	1
75	Allen bolt M6 * 25	4	105	Console lower wire	1
76	Flat end tightening M5 * 10	3	106	Switch lower wire 2	1
		16	107	Switch upper wire 2	1
	Phillips screw w/cushion head ST4 *12	10	108	Switch lower wire 1	1
78	Phillips screw w/ washer head	22	109	Switch upper wire 1	1
	M4 * 15		110	Pulse upper wire	2
79	Phillips screw w/ washer head M4 * 8	2	111	Distance sensor	1
80	Phillips screw w/countersunk head M4*10		112	Pulse extension wire	2
00			113	Pulse lower wire	2
81	Phillips screw ST4 0*16	2	114	Key board Upper wire	2
82	Phillips screw ST4 0*16	90	115	Light sensor	1
83	Phillips screw ST4 0*10	32	116	Key board extension wire	2
84	Phillips screw M3 * 20	2	117	Key board lower wire	2
85	Phillips screw m3 * 15	4	118	Infrared sensor	2
86	Phillips screw ST2. 9*9.5	23	119	Speaker	2
87	Phillips screw ST2 2*8	8	120	USB / headset interface	1
88	Nylon nut M10	2	121	Hole plug 2	2
89	Nylon nut M8	10	122	Allen bolt M6*25	2
90	Nut M8	11			
91	Nylon NUT M6	4	1		
92	Outer snap ring Φ 20	4	1		

8.3 Exploded Drawing

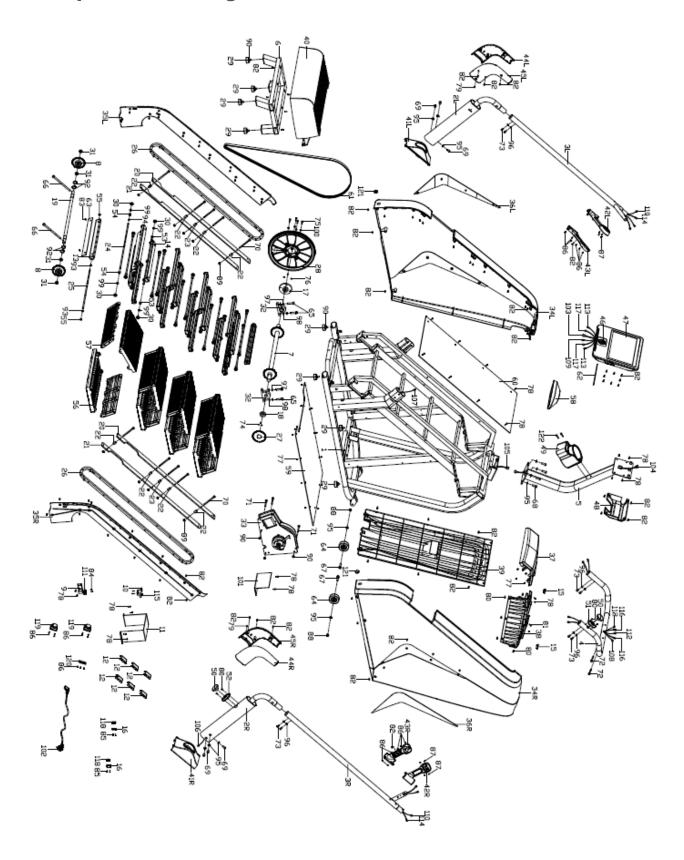

9 WARRANTY

Products from TAURUS® are subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

Error Descriptions

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

Your statutory rights are not affected.

Warrantee

The warrantee is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

Warranty period

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

Repair Costs

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warrantee personally and are not a part of repair. After the expiration of the warranty period, the responsibility for parts costs, repair costs, installation costs and delivery costs lies with the warranty holder.

The terms of use are defined as follows:

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

Warranty Service

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.

Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

DE	DK	UK
TECHNIK	TEKNIK OG SERVICE	CUSTOMER SUPPORT
+49 4621 4210-900 +49 4621 4210-698 technik@fitshop.de	 &80 90 16 50 +49 4621 4210-945 info@fitshop.dk 	© 00800 2020 2772 +494621 4210 944 Info@fitshop.co.uk
Öffnungszeiten entnehmen Sie unserer Homepage. SERVICE	Abningstider kan findes på hjemmesiden: https://stg.fit/statit7	You can find the opening hours on our homepage: https://stg.fit/statitc
0800 20 20277	FR	BE
(kostenlos)	TECHNIQUE & SERVICE	TECHNIQUE & SERVICE
04621 4210 - 0 info@fitshop.de Öffnungszeiten entnehmen Sie	+33 (0) 189 530984 +49 4621 42 10 933 info@fitshop.fr	 € 02 732 46 77 +49 4621 4210 933 ☑ info@fitshop.be
unserer Homepage: https://stg.fit/statita	Vous trouverez les heures d'ouverture sur notre site Internet: https://stg.fit/statit4	Vous trouverez les heures d'ouverture sur notre site Internet: https://stg.fit/statit8
ES	NL	INT
TECNOLOGÍA Y SERVICIOS	TECHNISCHE DIENST & SERVICE	TECHNICAL SUPPORT & SERVICE
& 911 238 029	& +31 172 619961	& +49 4621 4210-944
info@fitshop.es	service@fitshop.nl	service-int@fitshop.de
Consulta nuestro horario de apertura en la página web: https://stg.fit/statit5	De openingstijden vindt u op onze homepage: https://stg.fit/statit3	You can find the opening hours on our homepage: https://stg.fit/statita
PL	AT	СН
DZIAŁ TECHNICZNY I SERWIS	TECHNIK & SERVICE	TECHNIK & SERVICE
22 307 43 21 +49 4621 42 10-948 info@fitshop.pl	 0800 20 20277 (Freecall) +49 4621 42 10-0 info@fitshop.at 	 ← 0800 202 027 +49 4621 42 10-0 ☑ info@fitshop.ch
Godziny otwarcia można znaleźć na stronie głównej: https://stg.fit/statit6	Öffnungszeiten entnehmen Sie unserer Homepage: https://stg.fit/statitb	Öffnungszeiten entnehmen Sie unserer Homepage: https://stg.fit/statit9

Please find a detailed overview including address and opening hours for all stores of the Fitshop Group in Germany and abroad on the following website:

www.fitshop.com/en/stores

WE LIVE FITNESS

WEBSHOP AND SOCIAL MEDIA

Fitshop is Europe's largest specialist store for home fitness equipment with currently over 70 stores and one of the world's most renowned online mail order companies for fitness equipment. Private customers order via the 25 web shops in the respective national language or have their desired equpiment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

Fitshop offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.

Visit us also on our social media platforms or our blog!

